


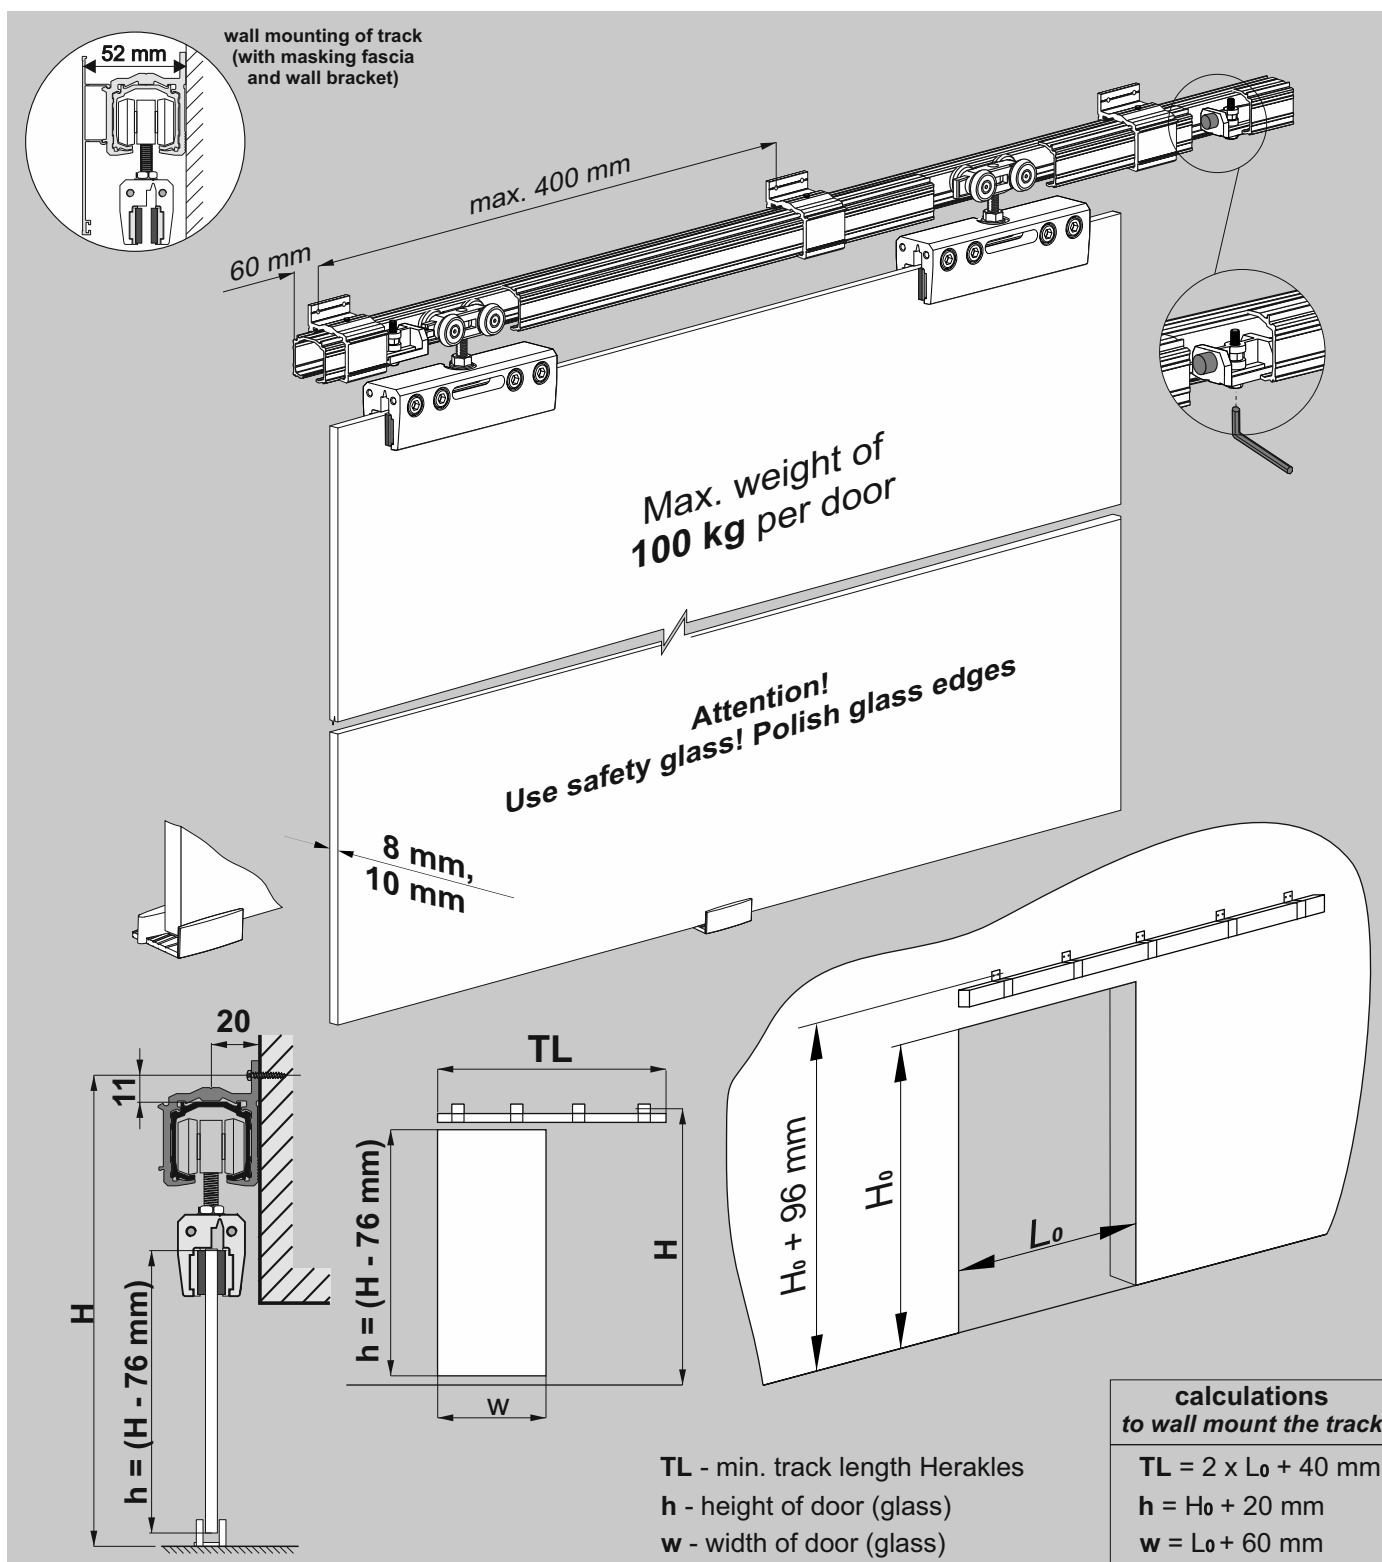


SYSTEM

HERAKLES GLASS


SEVROLL



COMPONENTS

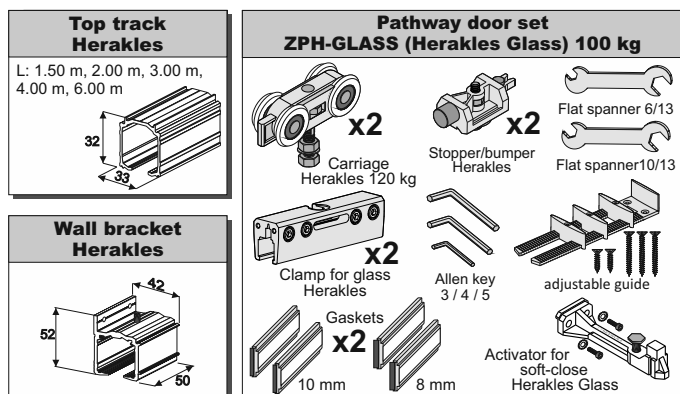

OPTIONS

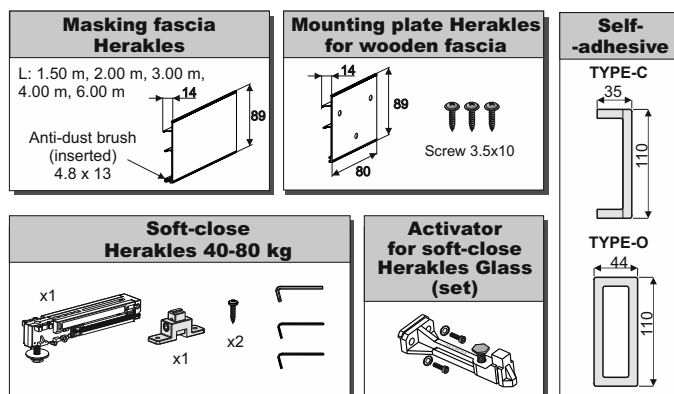




SYSTEM

HERAKLES GLASS

SEVROLL


Left door

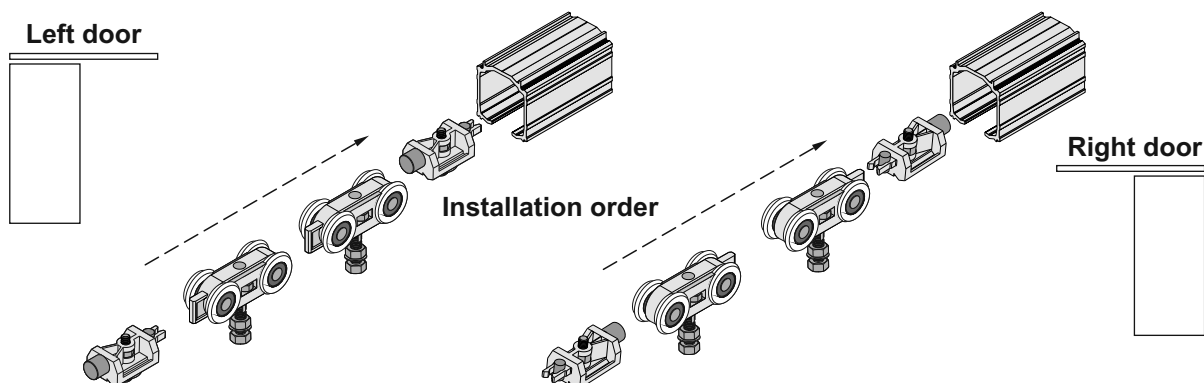

Right door


Mounting gasket spacers in clamp Herakles Glass

Depending on the thickness of glass (8 or 10 mm)
use gaskets 2 mm or 1 mm

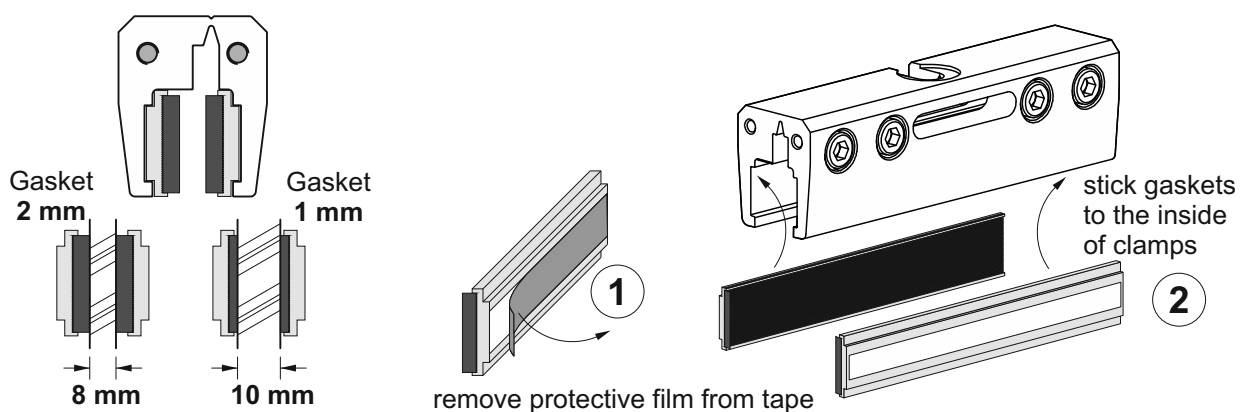


Assembly of Herakles Glass clamps on glass

Prior to catch installation, grease must be removed from glass surface using the enclosed wipe or isopropyl alcohol

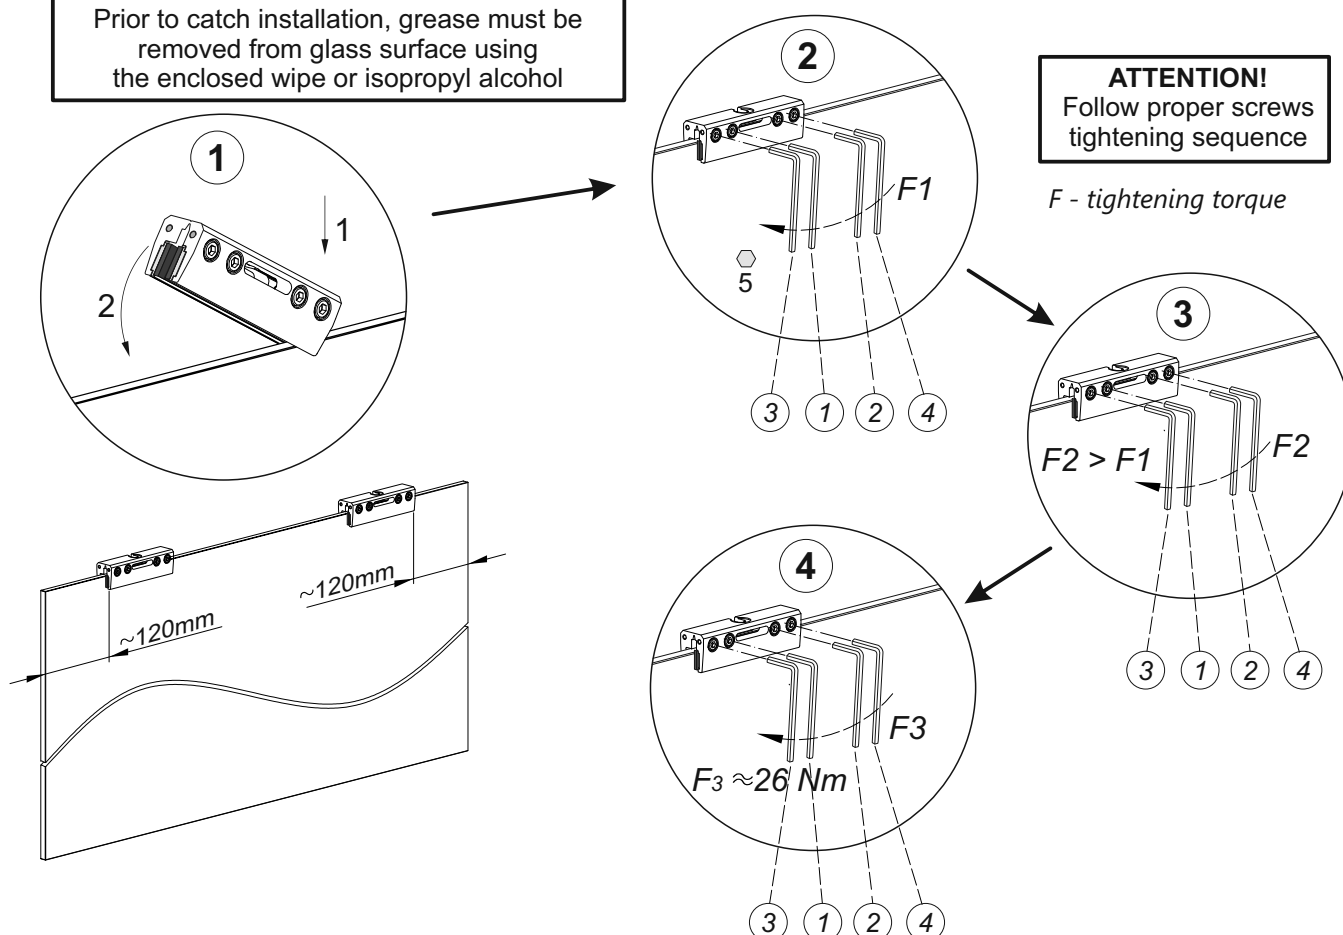





Door installation

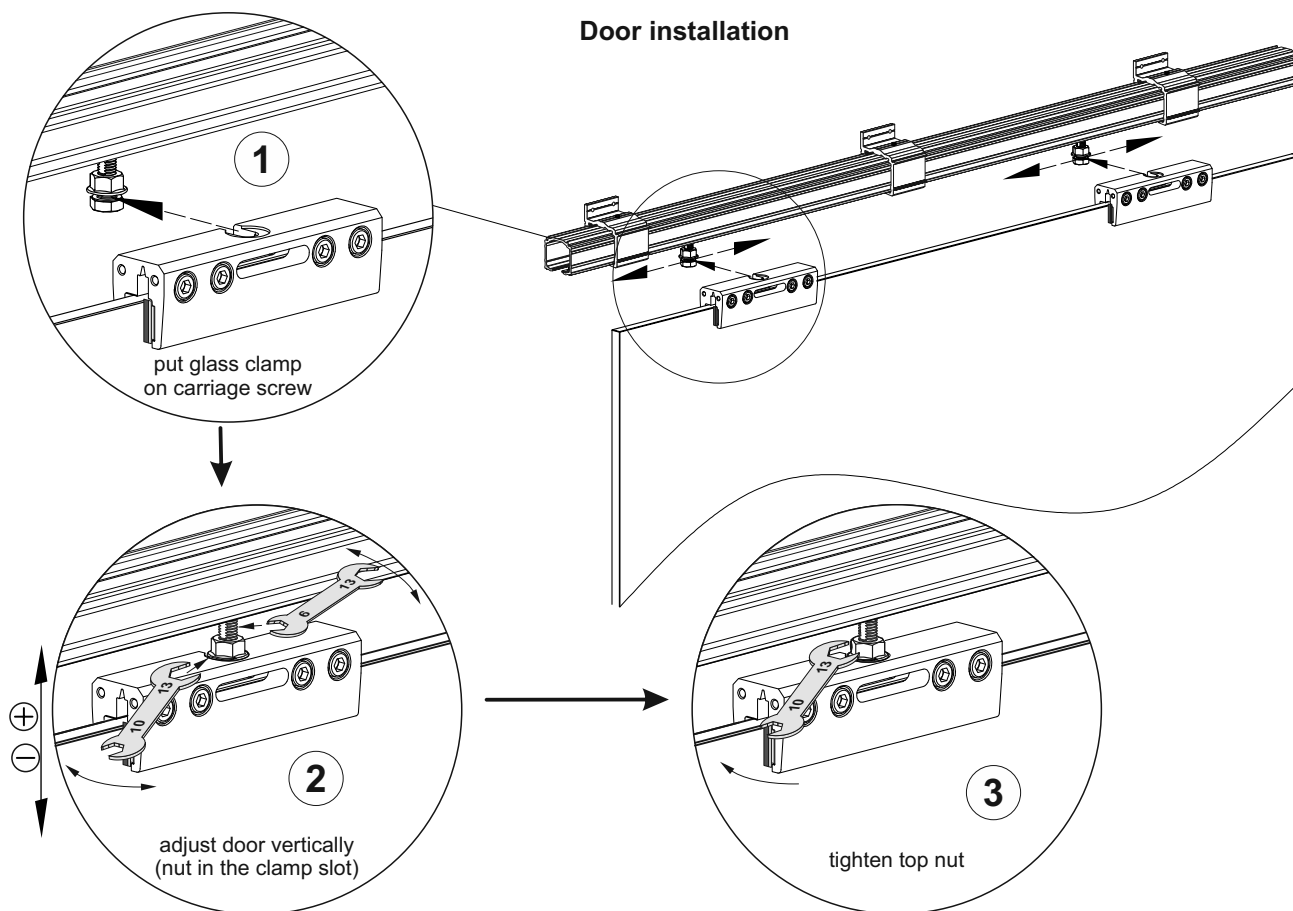

Horizontal door adjustment

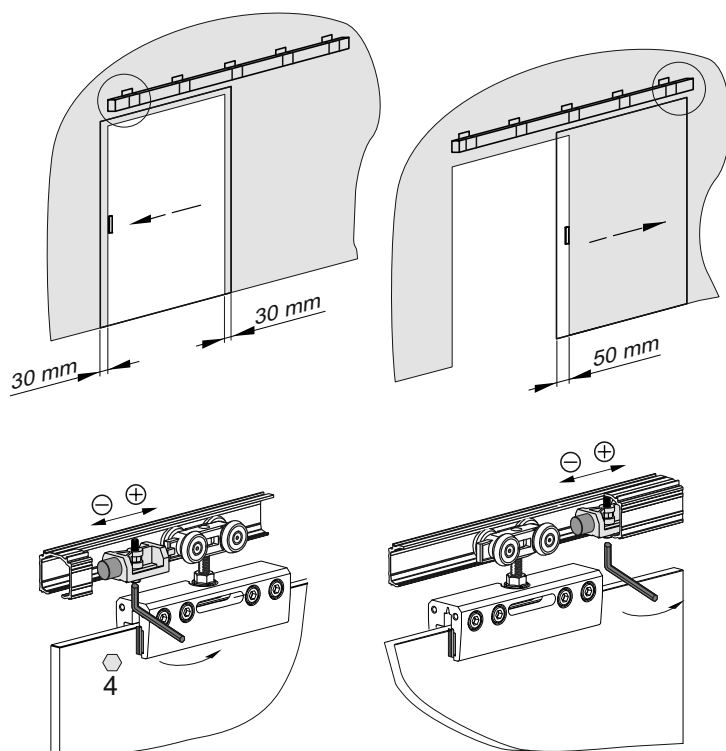

Guide installation

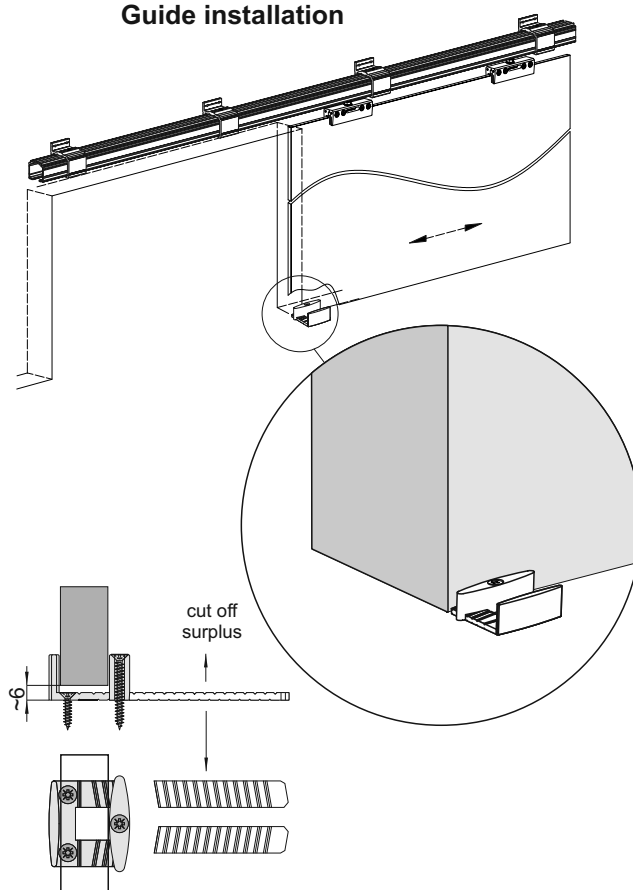



Soft-close Herakles 40-80 kg

Soft-close strength regulation
for Herakles 40-80 kg with use of spring

