





600 ÷ 800

800 ÷ 1000

564 ÷ 764

764 ÷ 964

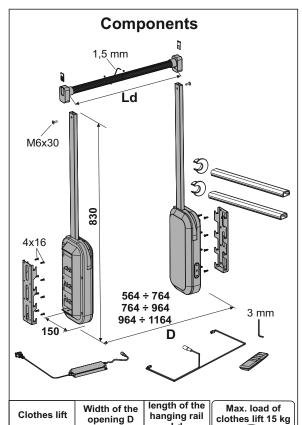

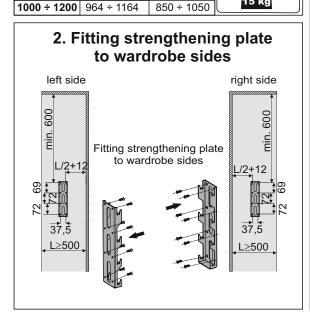



450 ÷ 650


650 ÷ 850

MAX

15 kg

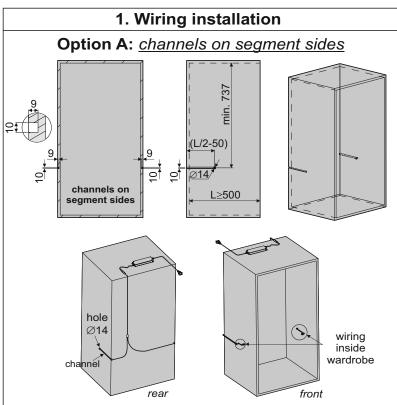


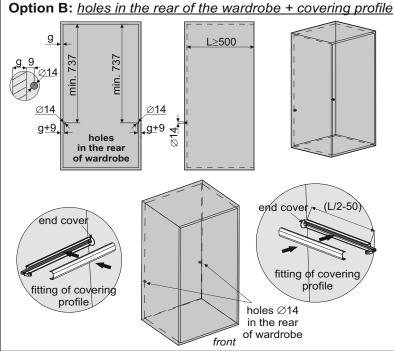


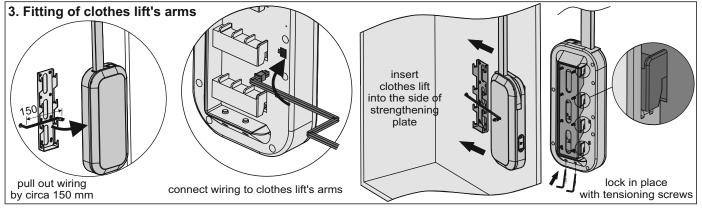







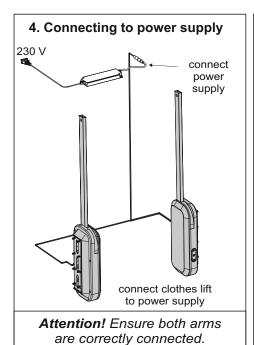


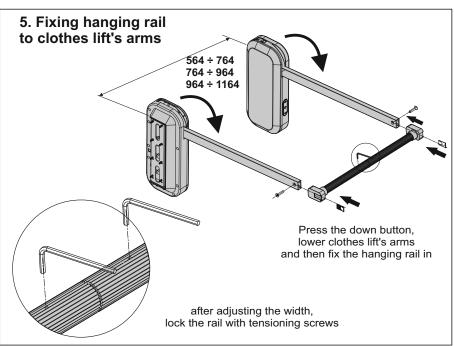

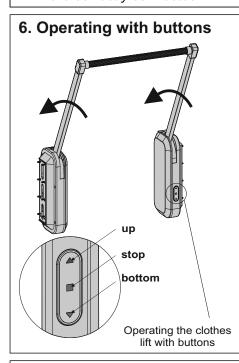

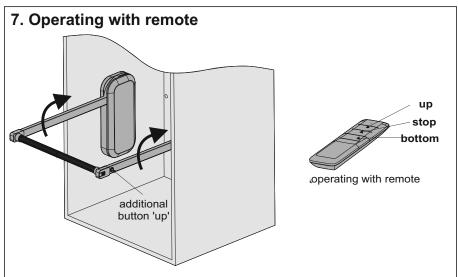

9. Sensor operation

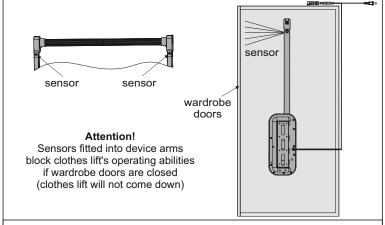

The Wardrobe lift can only be controlled by buttons, remote control, or voice commands. A power outage will prevent the wardrobe lift from operating.

Mechanically lowering the arms may damage the device.

10. Operating with voice commands

Voice commands:

Command	Response
Turn on the light (włącz podświetlanie)	Okay
Turn off the light (wyłącz podświetlanie)	Okay
Lift up (podnieś ramiona)	Okay
Stop (stop)	Okay
Lift down (opuść ramiona)	Okay
Volume Up (głośność - góra)	Okay
Volume Down (głośność - dół)	Okay
Volume Max (głośność - max)	Okay
Volume Min (głośność - min)	Okay
Hello Lift (włącz pantograf)	Hello, I am coming
Goodbye (wyłącz pantograf)	Goodbye