


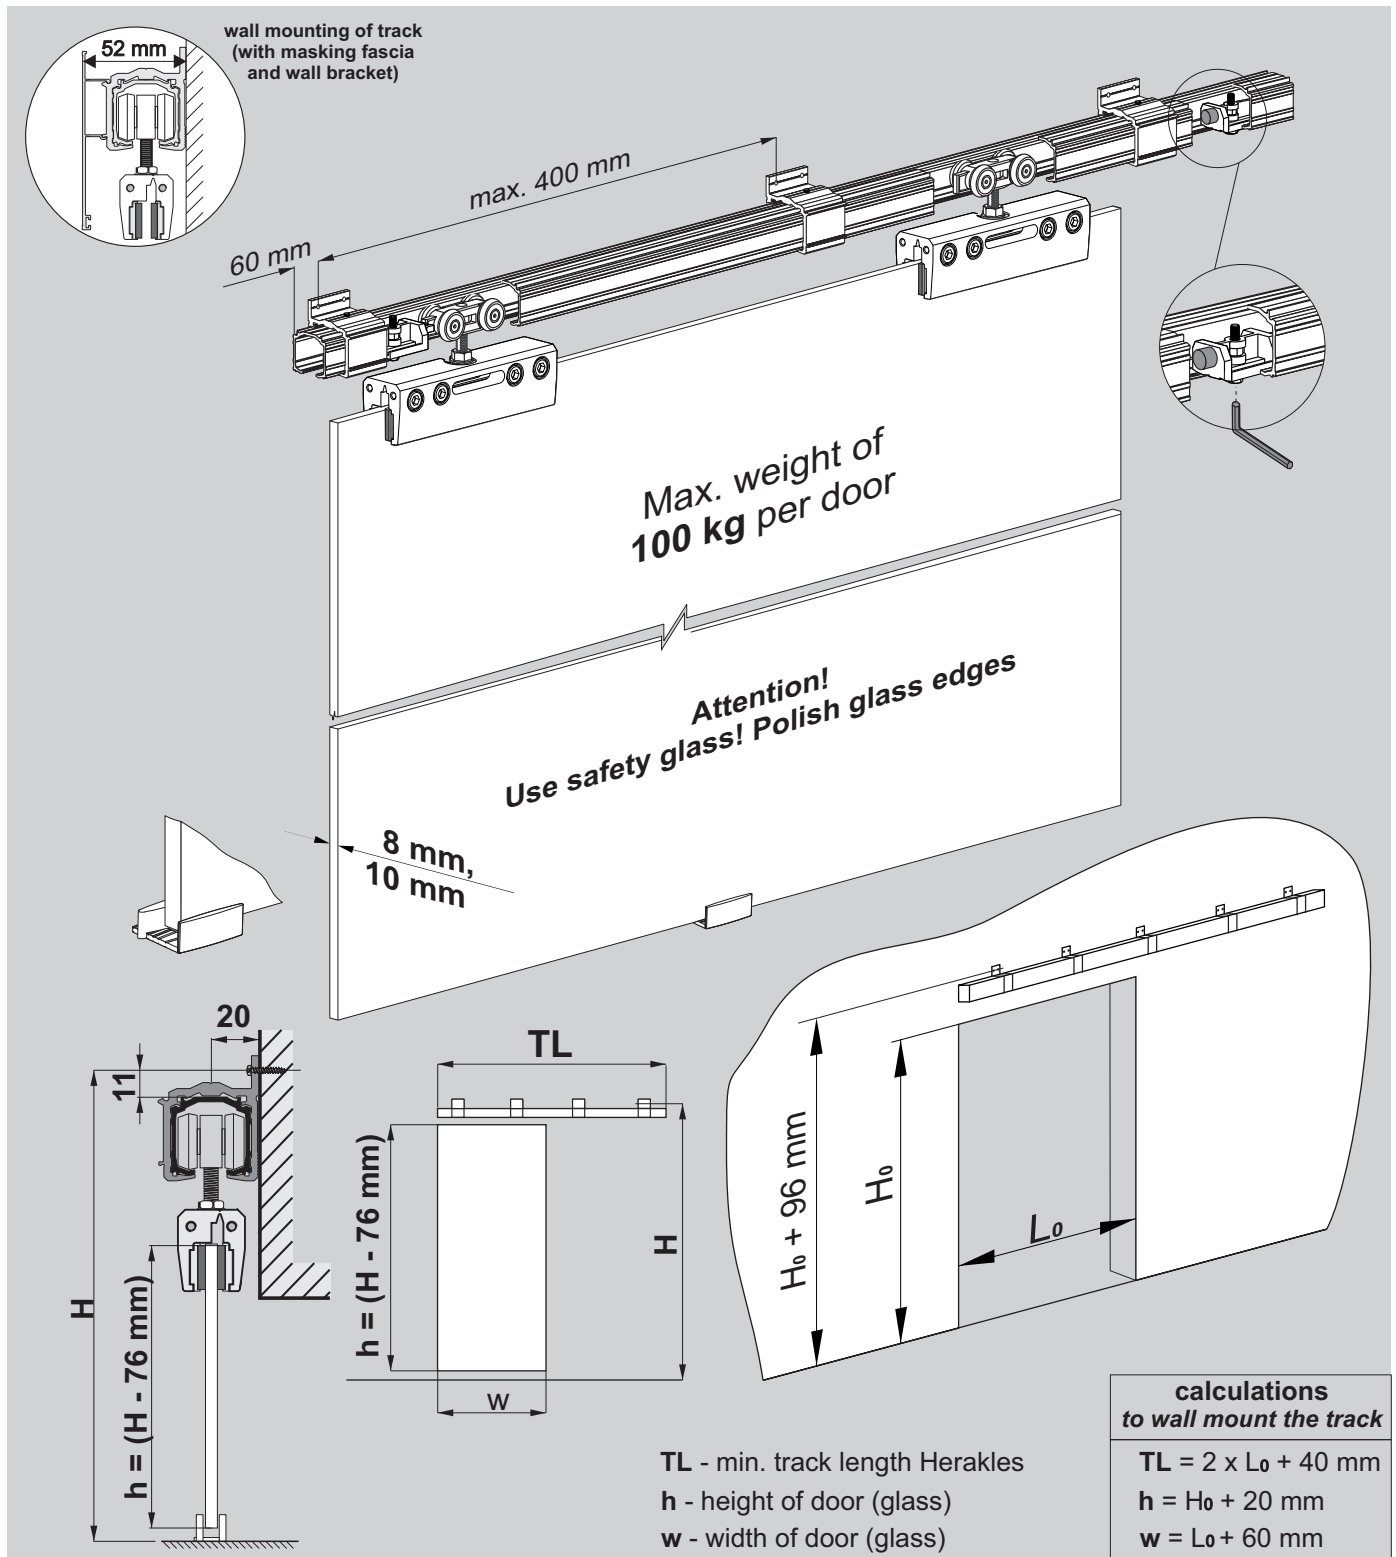


SYSTEM

HERAKLES GLASS


SEVROLL®




COMPONENTS

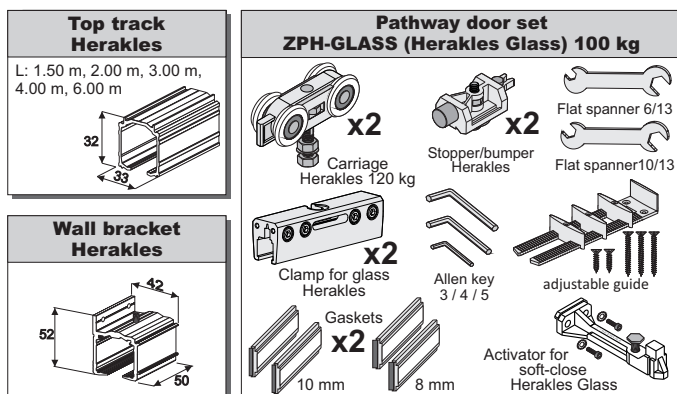


OPTIONS

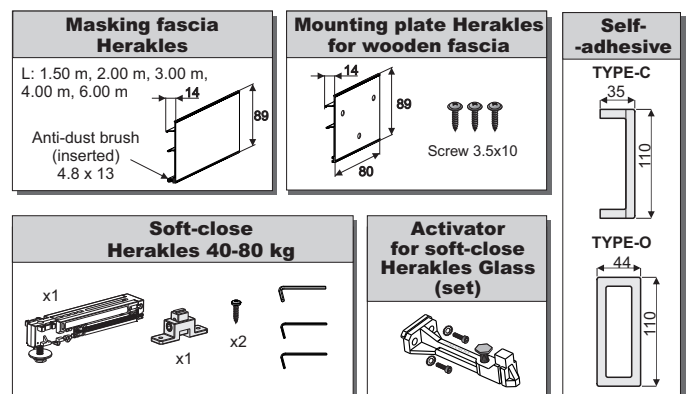

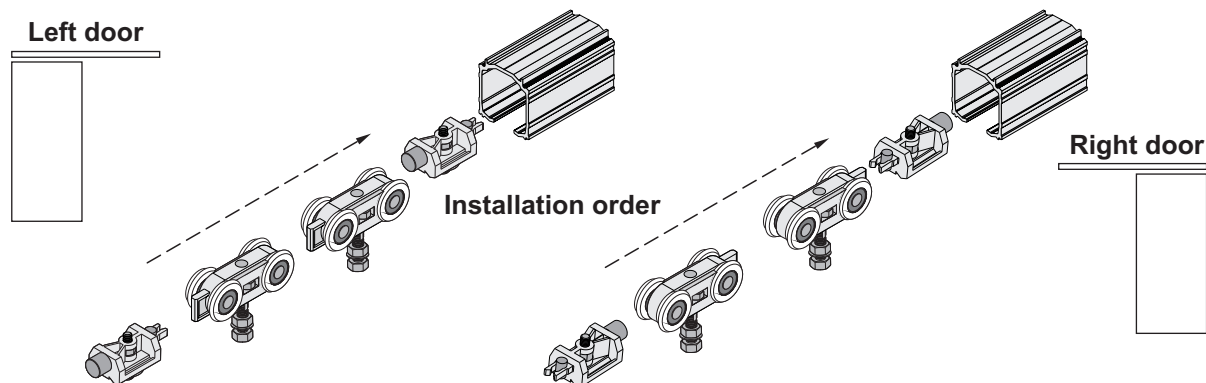


Mounting gasket spacers in clamp Herakles Glass

Depending on the thickness of glass (8 or 10 mm)
use gaskets 2 mm or 1 mm

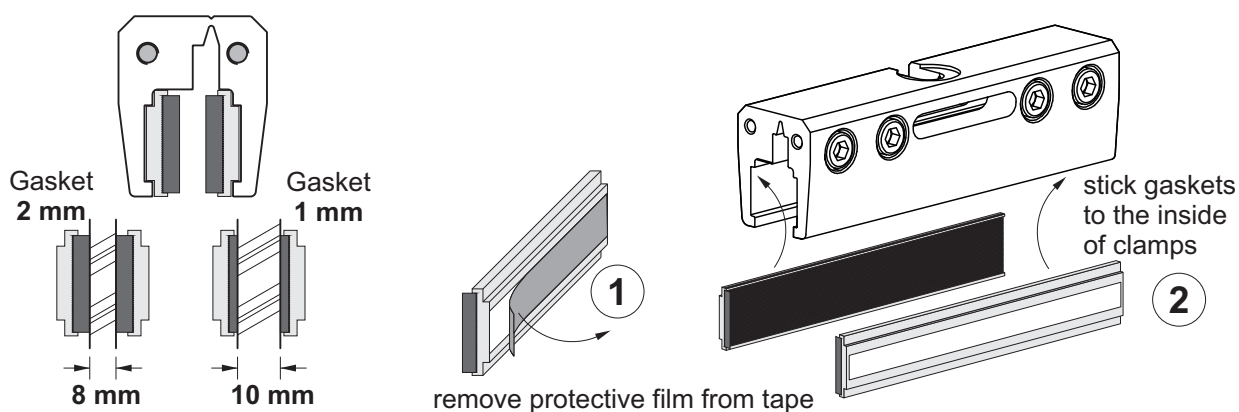


Assembly of Herakles Glass clamps on glass

Prior to catch installation, grease must be
removed from glass surface

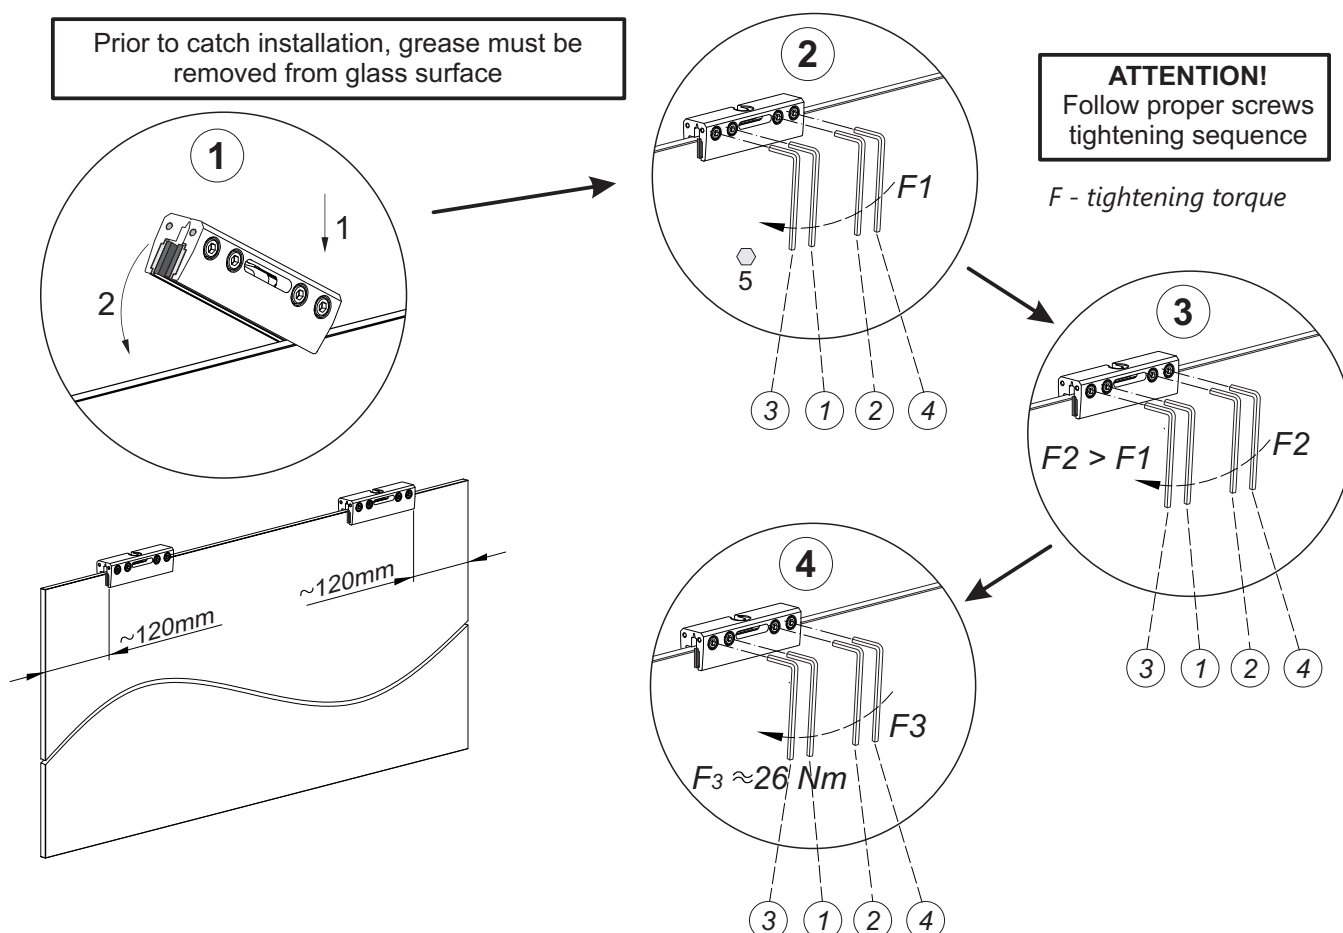





Door installation

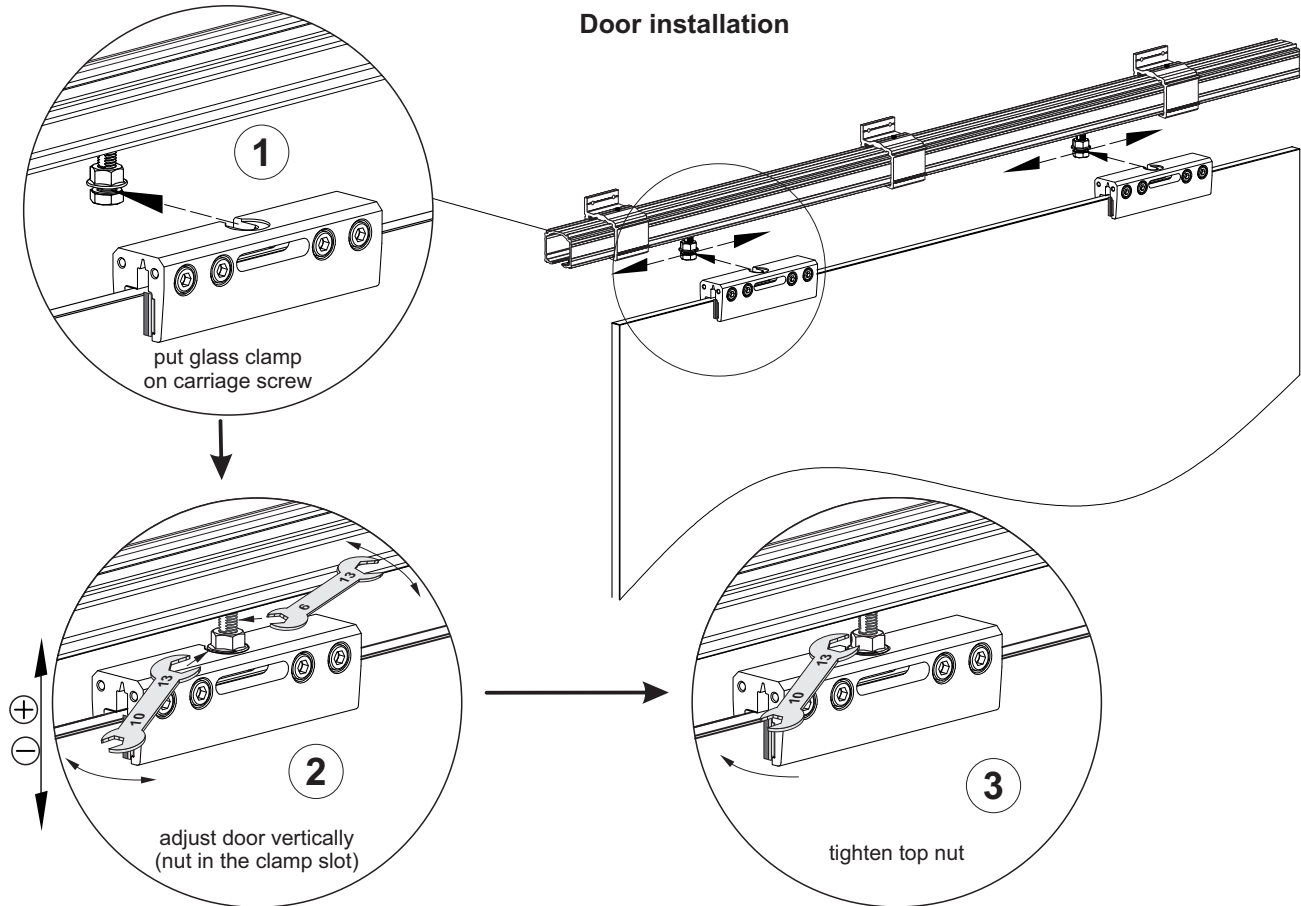

Horizontal door adjustment

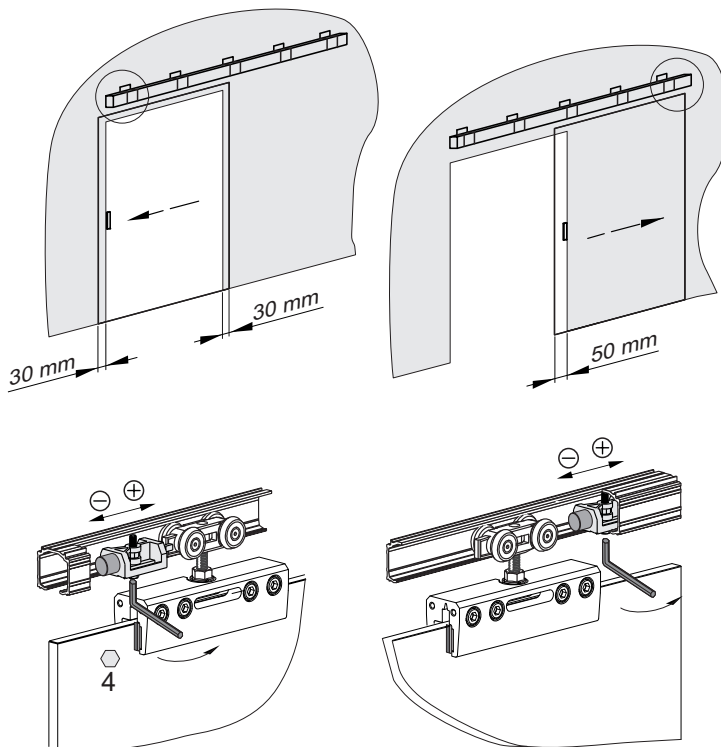

Guide installation

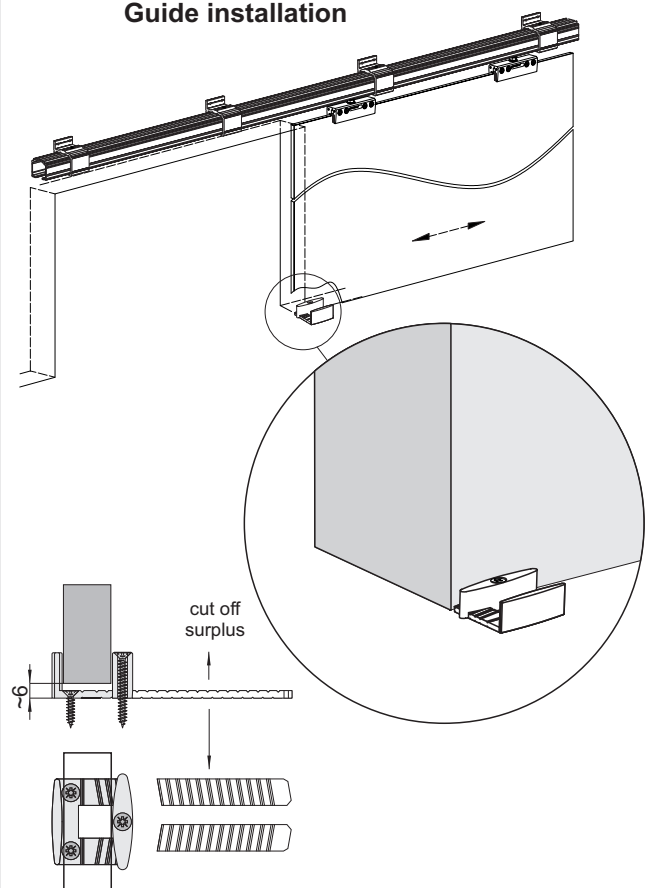



Soft-close Herakles 40-80 kg

Soft-close strength regulation
for Herakles 40-80 kg with use of spring

