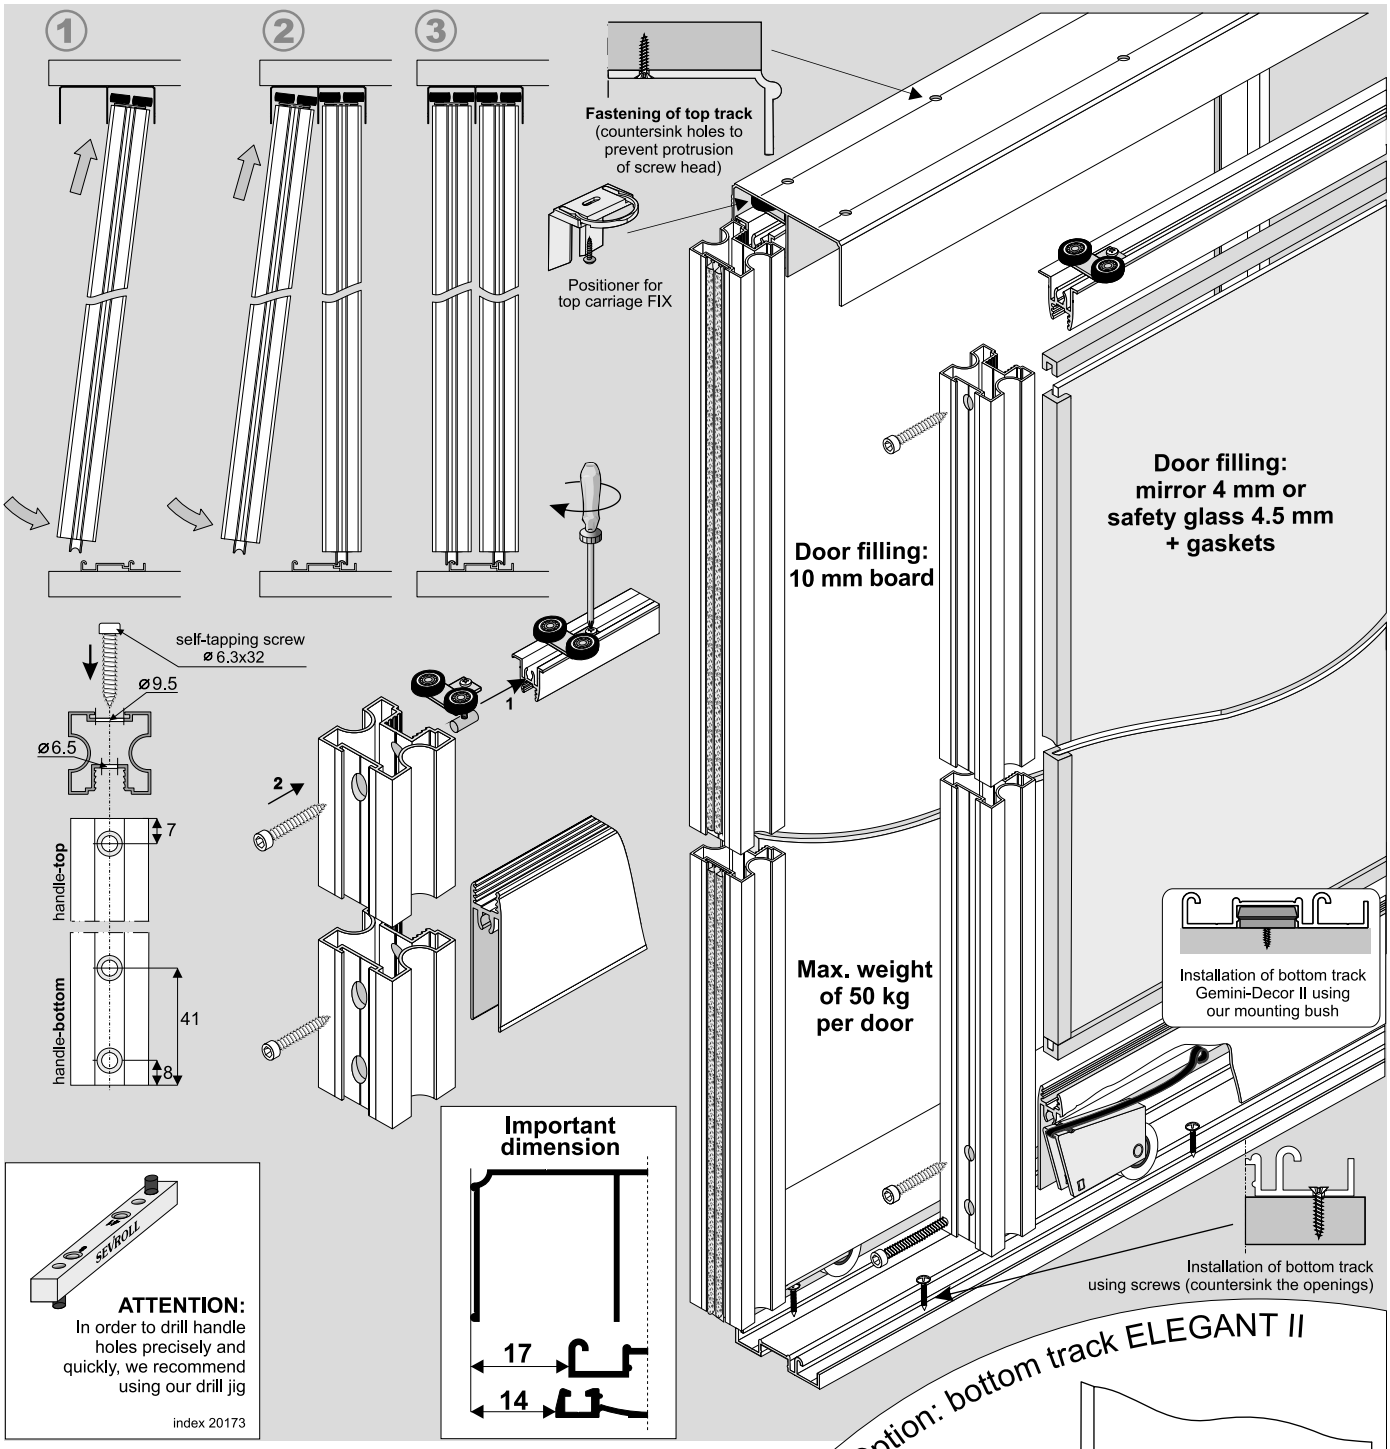

COMPONENTS

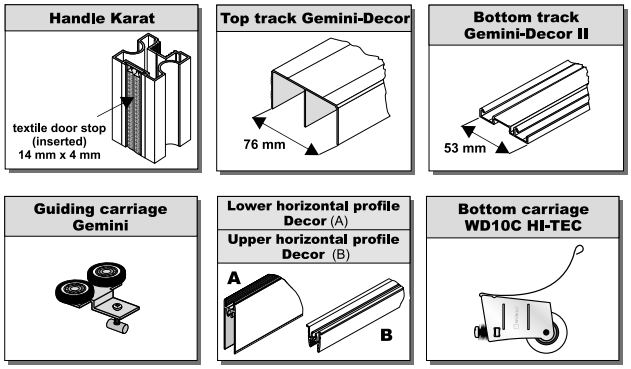

You must remember to purchase self-tapping screws to construct each door (4 screws per door). When using safety glass, you must also remember to purchase gaskets.

Option: bottom track ELEGANT *II*

With **KARAT** set you may also use bottom track **Elegant II with covering strip** along with bottom carriage WD 10V HI-TEC. **Fitting measurements are not affected.**

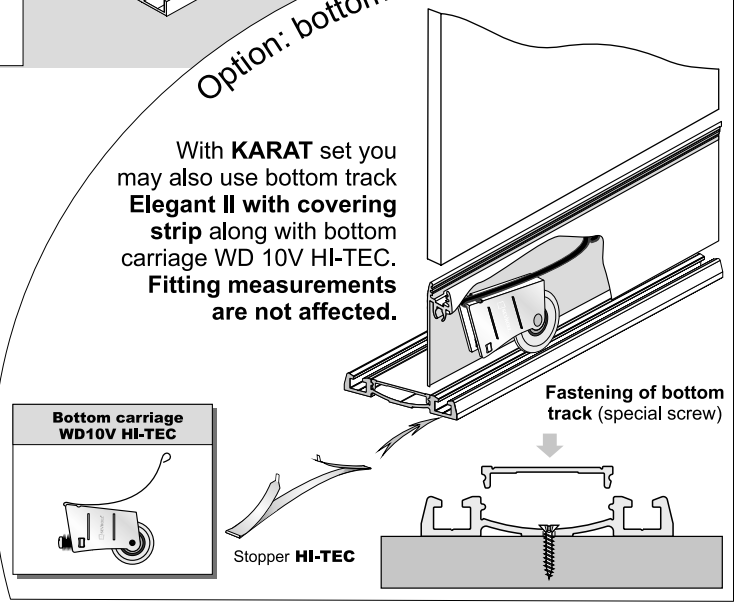

Dimensions of opening

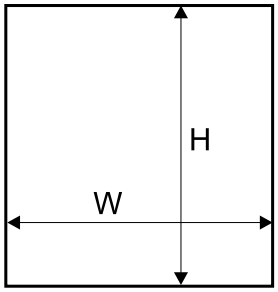

door filling:
10 mm board,
4 mm mirror or
4.5 mm safety glass

Handle length = door height

door height - h		h = H - 40 mm
door wing height with soft-close fitted	Mini SV25/40/60, SV-25/50	h = H - 40 mm
	Top SV60/80, Central SV25/40	h = H - 44 mm
board height - hb		hb = h - 64 mm
door width - w		w = (W - 3 mm + Z) : N
board width - wb		wb = w - 41 mm
lower horizontal profile length - L upper horizontal profile length - U		L = U = w - 58 mm
mirror height - hm		hm = hb
mirror width - wm		wm = wb - 4 mm

number of doors - N	2	3	4	5
total overlap - Z	30 mm	60 mm	90 mm	120 mm

visual design – 4 wings	
door set up	w = (W - 3 + 90) : 4
door set up	w = (W : 2 + 27) : 2

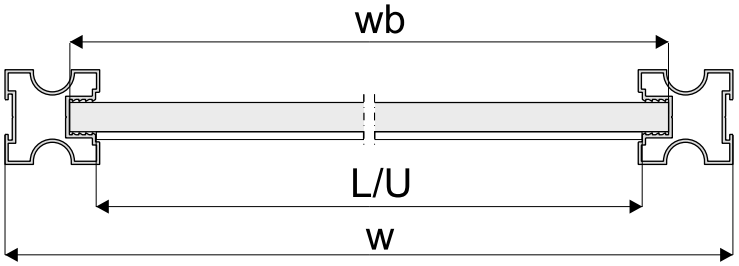

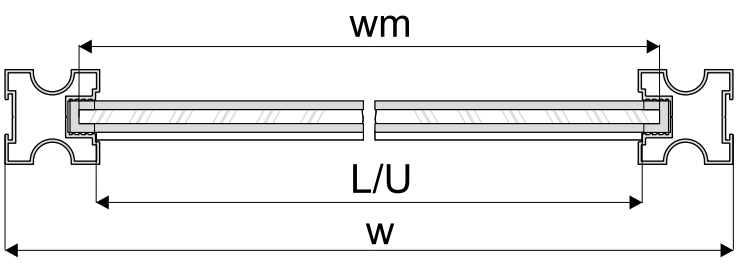

Installation method for fitting 10 mm board (diag. A) and 4 mm mirror or glass (diag. B)

- with handle

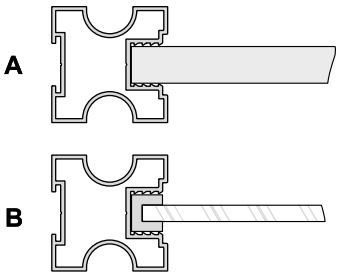

- with upper profile

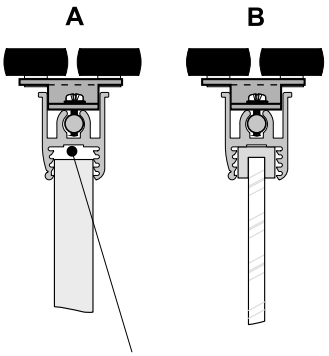

construction clearance included in the calculation of the height of board

- with lower profile

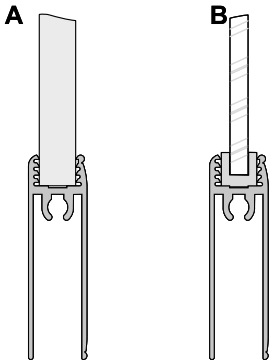

ATTENTION!

Mirror (4 mm) should be used with a safety backing film. Safety glass (4.5 mm) comprises of two thin layers with a film in-between. Both mirror and glass need fitting gaskets.

ATTENTION! Remove protective film from aluminium elements (handles, tracks, connectors, etc.) prior to cutting them to the desired size. Film removal will reveal quality issues (eg. scratches)