




SYSTEM


HARMONY II

SEVROLL

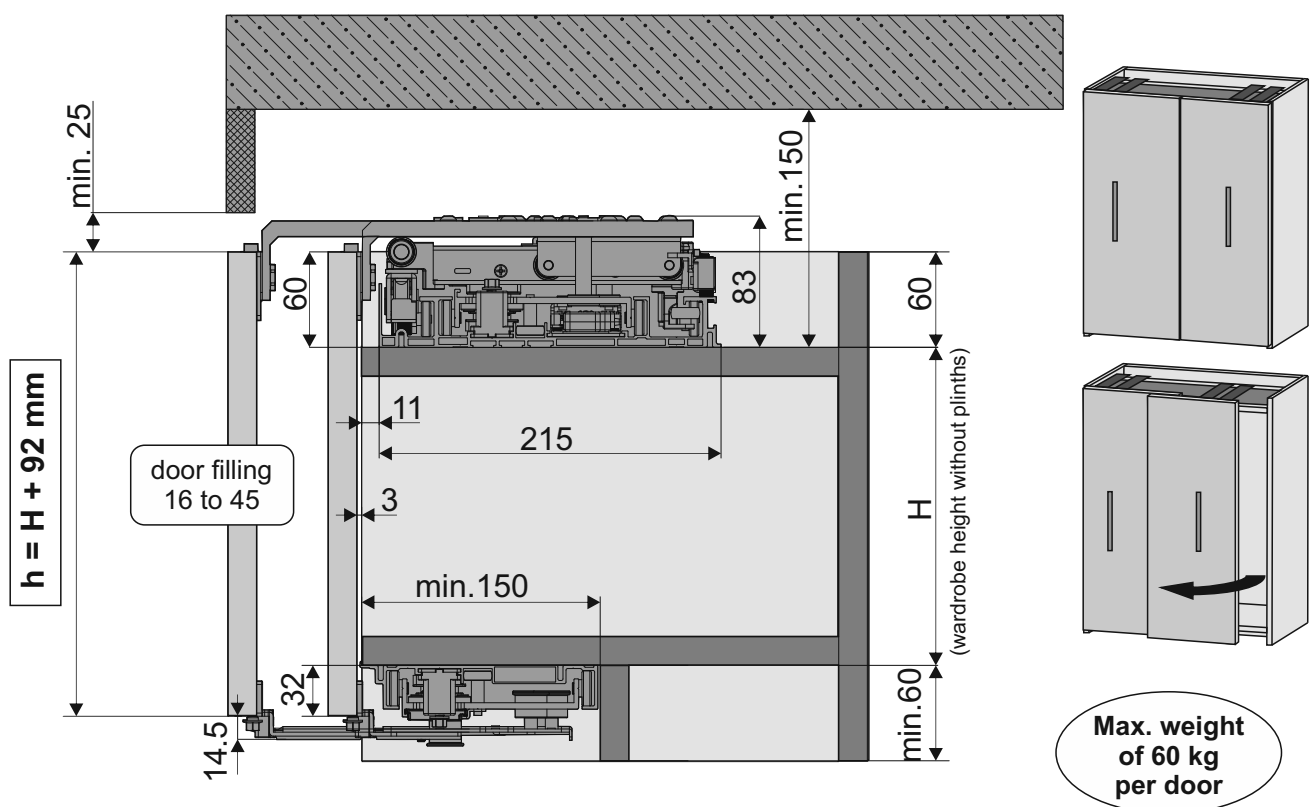

ATTENTION:
In order to eliminate door bowing (caused by low quality board), it is recommended that Sevroll's door straightening kits are utilised with system Harmony II.


width of wardrobe interior - W	1650 to 2050 mm (for track length 2.05 m) 2050 to 2450 mm (for track length 2.45 m) 2450 to 2850 mm (for track length 2.85 m)
gap - S	$S \geq 4 \text{ mm}$
overlay - N	$N \leq 25 \text{ mm}$
door wing width - w	$w = (W + 2 \times N - S) : 2$
door wing height - h	$h = H + 92 \text{ mm}$
maximum door thickness (with handle)	max 46 mm (outer door hanger)

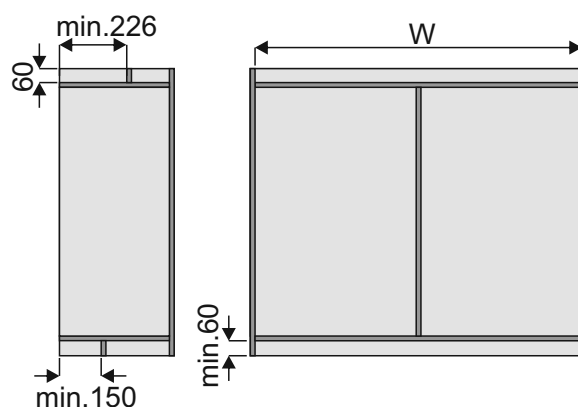


COMPONENTS

HARMONY II Set (2 doors)


Top track / bottom track **HARMONY II**
Length: 2.05 m; 2.45 m; 2.85 m

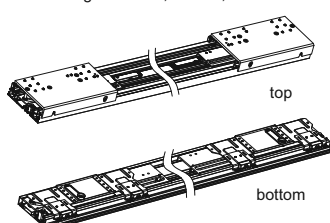


Top outer mounting plate










Top inner mounting plate



Bottom outer mounting plate




Bottom inner mounting plate






Door dimensions

Overlay doors

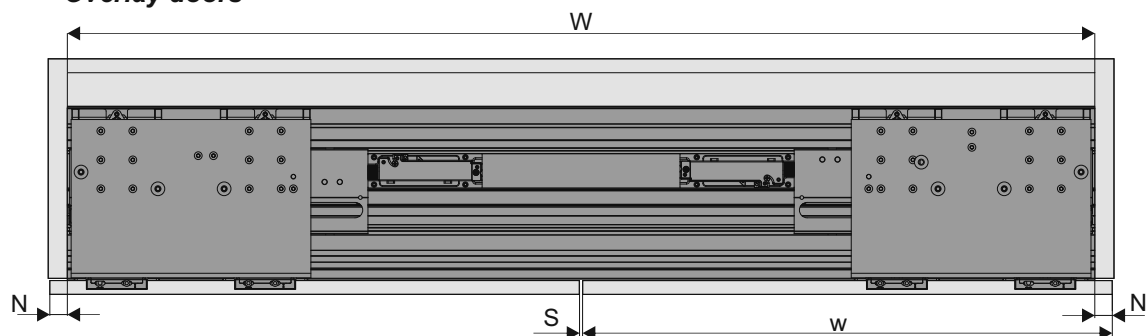

width of wardrobe interior - W	1650 to 2050 mm (for track length 2.05 m) 2050 to 2450 mm (for track length 2.45 m) 2450 to 2850 mm (for track length 2.85 m)
door wing width - w	$w = (W + 2 \times N - S) : 2$
gap - S	$S \geq 4 \text{ mm}$
overlay - N	$N \leq 25 \text{ mm}$

Inset doors

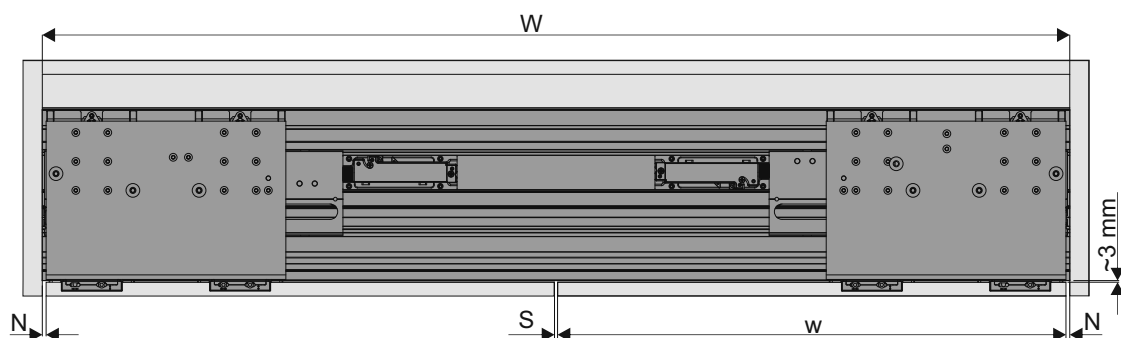


width of wardrobe interior - W	1650 to 2050 mm (for track length 2.05 m) 2050 to 2450 mm (for track length 2.45 m) 2450 to 2850 mm (for track length 2.85 m)
door wing width - w	$w = (W - 2 \times N - S) : 2$
mid gap - S	$S \geq 4 \text{ mm}$
side gap - N	$N \geq 3 \text{ mm}$




Installation of mounting plates

Attention! Please pay attention to correct order of mounting plates fastening

- A** - Top inner mounting plate
- B** - Top outer mounting plate
- C** - Bottom inner mounting plate
- D** - Bottom outer mounting plate

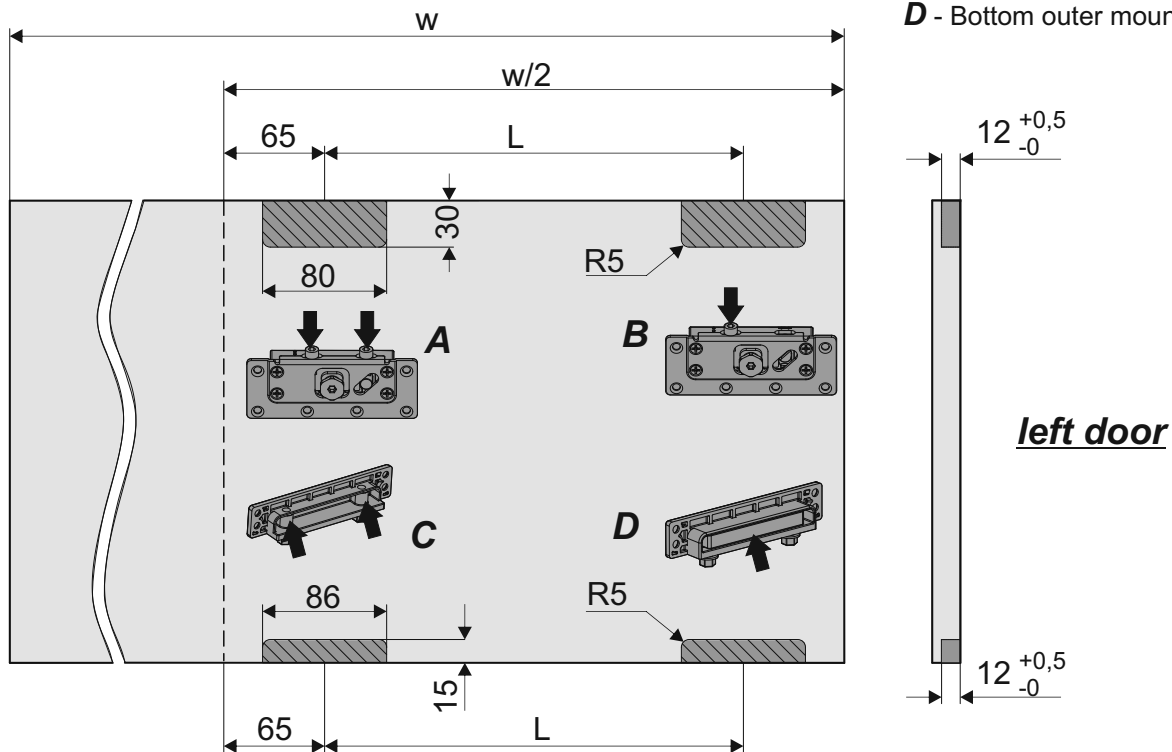


Spacing - L	Set length
270 mm	1650 to 2050 mm
370 mm	2050 to 2450 mm
470 mm	2450 to 2850 mm

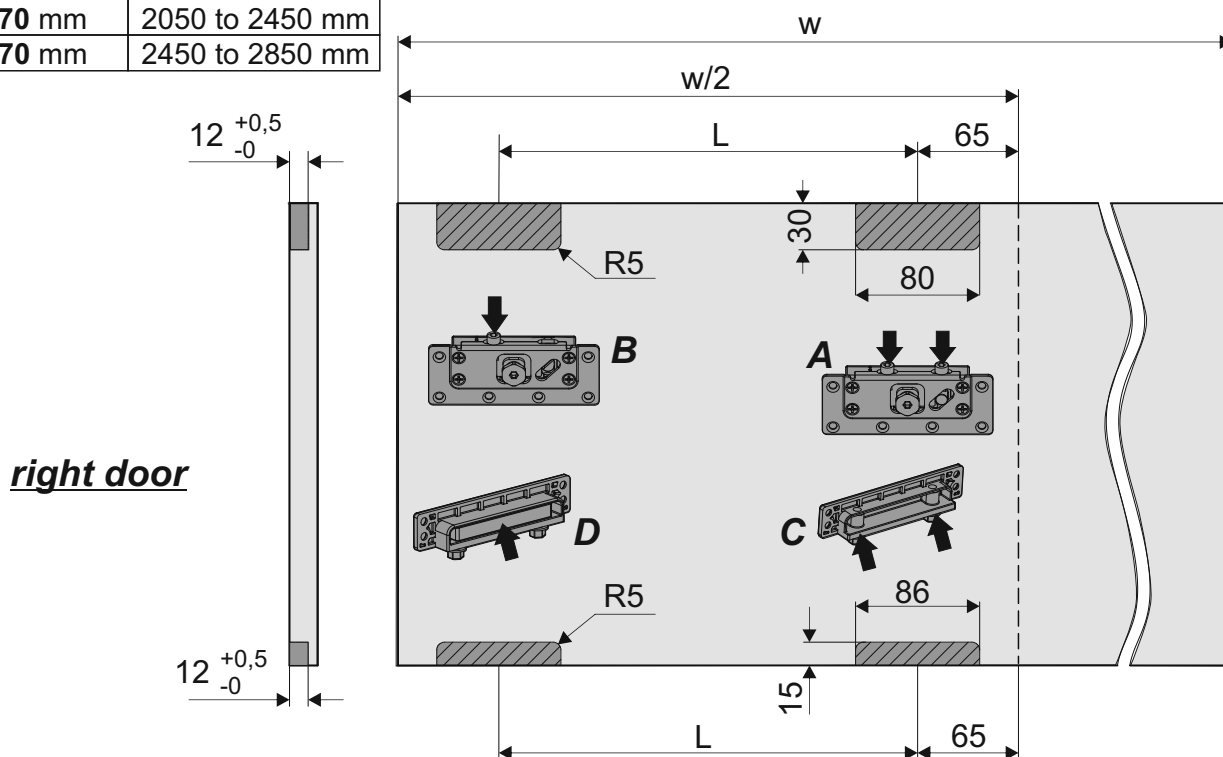




Top track trimming

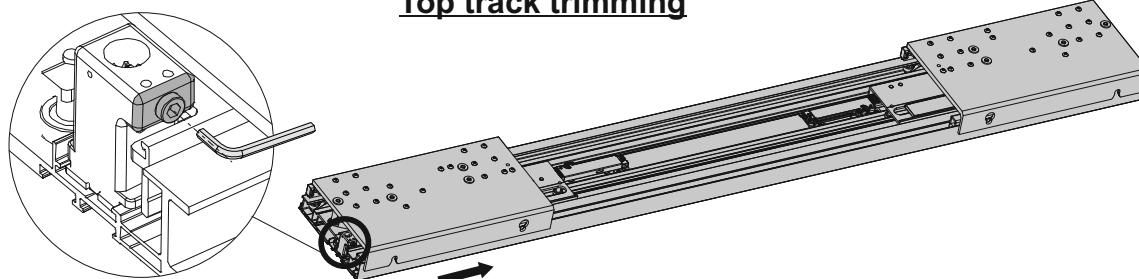


① Loosen the screw then shift the sliding mechanism right

② Trim the track then block sliding mechanism

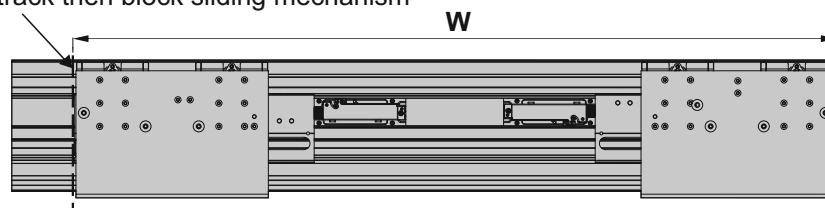


Attention! Make sure that the trimmings do not get into the sliding mechanism

Bottom track trimming

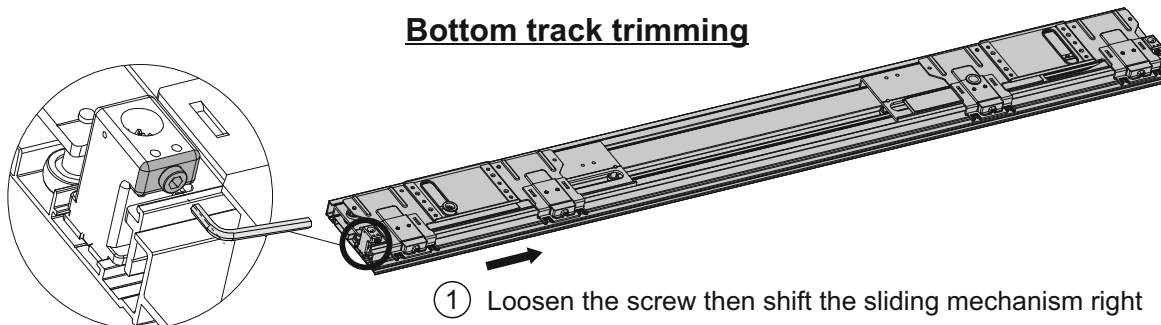

① Loosen the screw then shift the sliding mechanism right

② Trim the track then block sliding mechanism

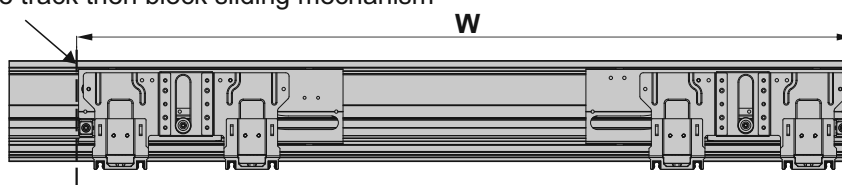


Attention! Make sure that the trimmings do not get into the sliding mechanism

Track installation

Variant A


screwing from outside the carcass

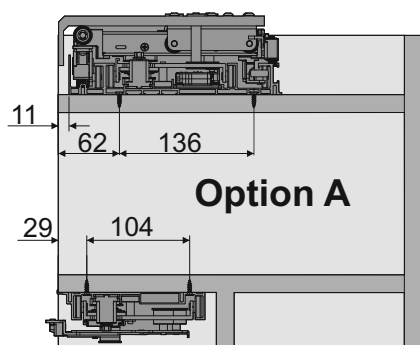

screws **4x16** (included in set)

Variant B

screwing from inside the carcass (With template)

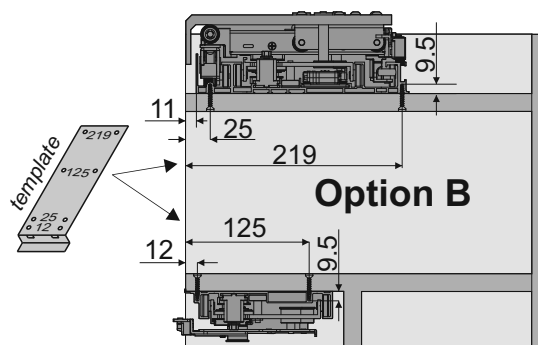


recommended screw
with countersunk head **4 x 25**
(not included in set)




Door installation

Move the top guide to the middle (1)
Loosen up the screws in mounting plates, insert
mounting plates' screws into top guide openings (2)

Loosely fasten screws
with allen key (3)


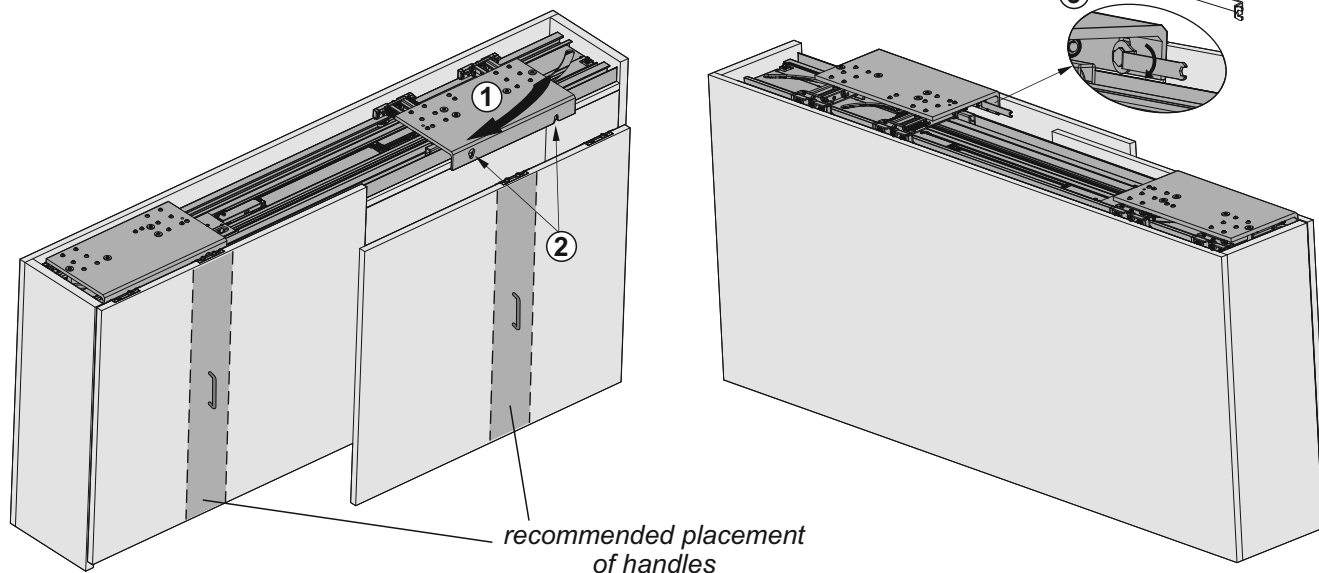


Door position regulation - top track

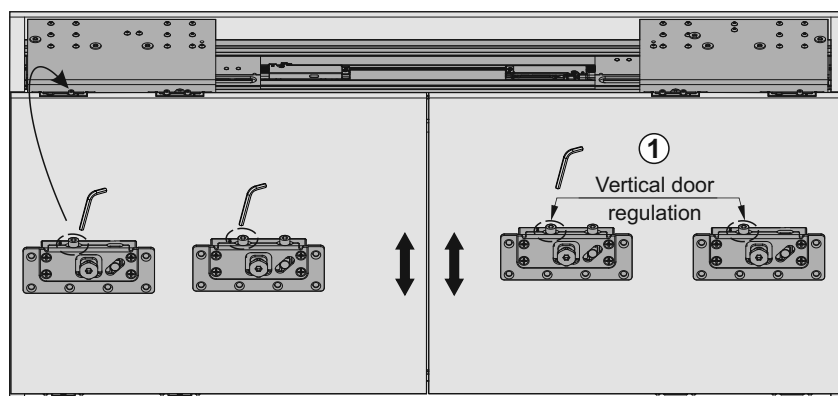


Regulate door position top-bottom
with mounting plates' screws (1)

Loosen the screw (2) in top track, set optimal
position of guide and lock the screw

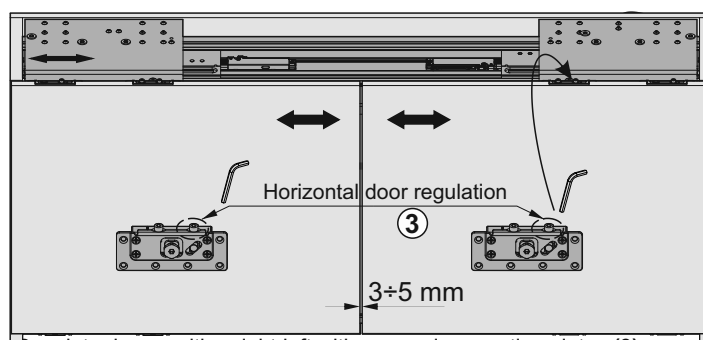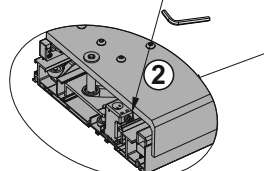


Regulate door position right-left with screws in mounting plates (3)




After regulation of door position,
tighten screws used for fastening
mounting plates in guides (4)




Door position regulation - bottom track

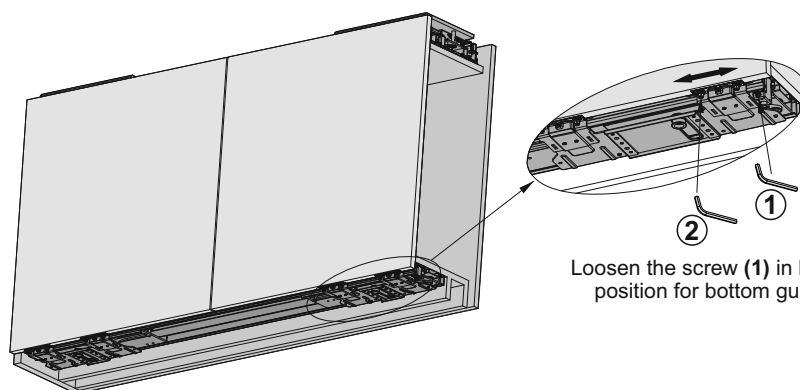


Loosen the screw (1) in bottom track, set optimal position for bottom guide (2), lock the screw

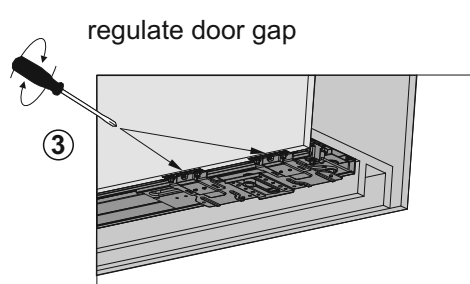

regulate door gap

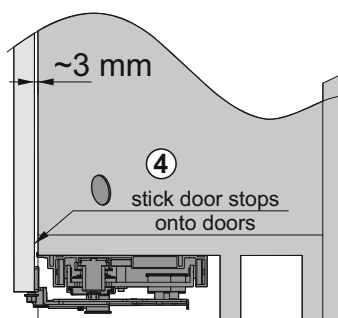


~3 mm
④ stick door stops onto doors

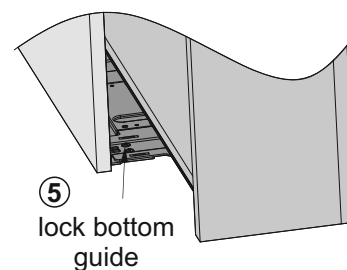


⑤ lock bottom guide

Regulation of soft-close position

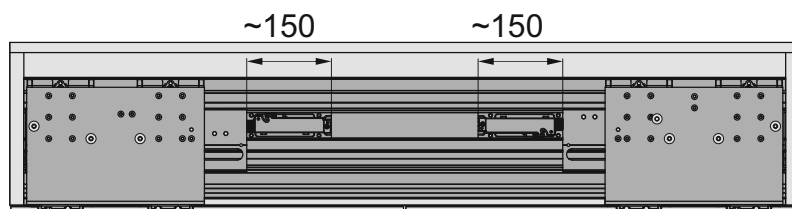

place soft-close mechanisms in optimal position

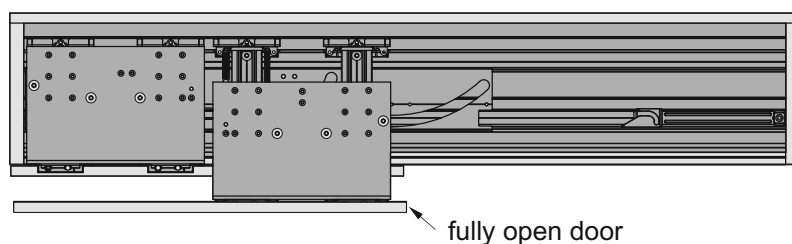

fully open door

Regulation of closing power

If door weight ≥ 40 kg or if doors close too slowly, insert the spring into top guide

