





Overlay drawer fronts

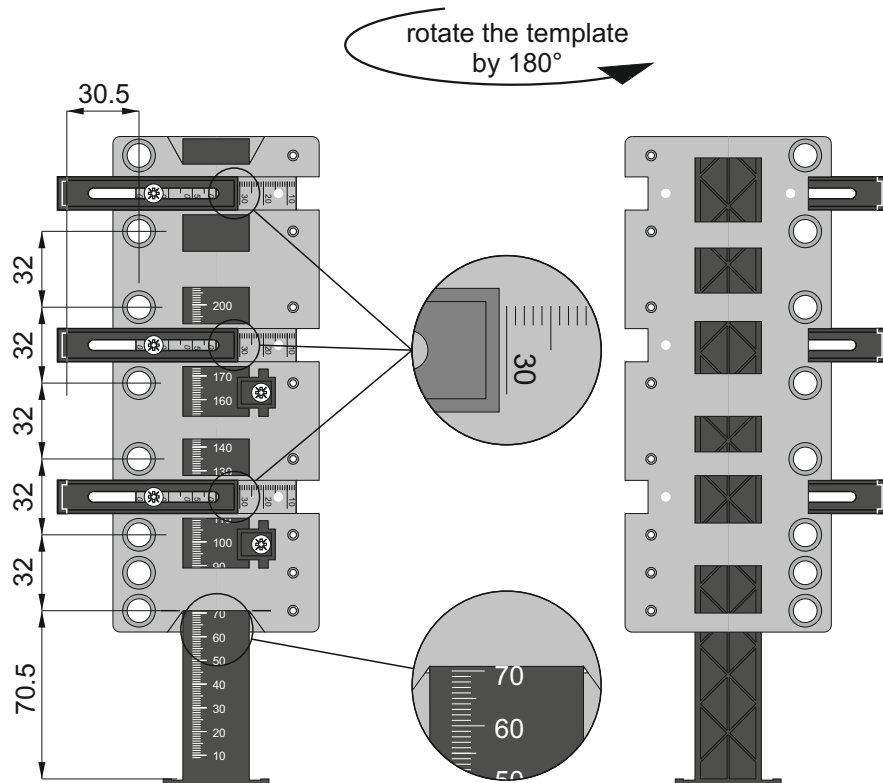


Positioning of holes for drawer front mounts in the **bottom** drawer

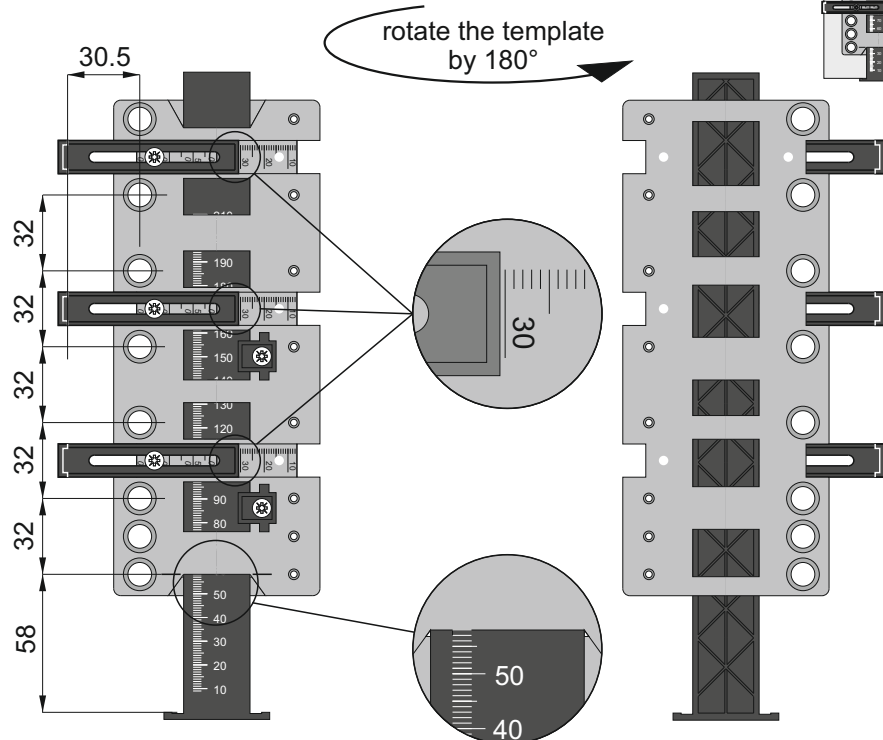

Positioning of holes for drawer front mounts in the **mid level** drawers

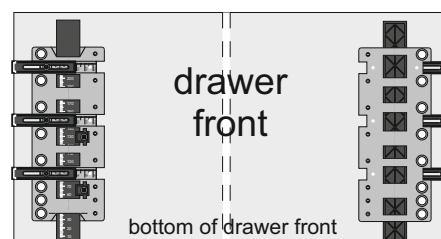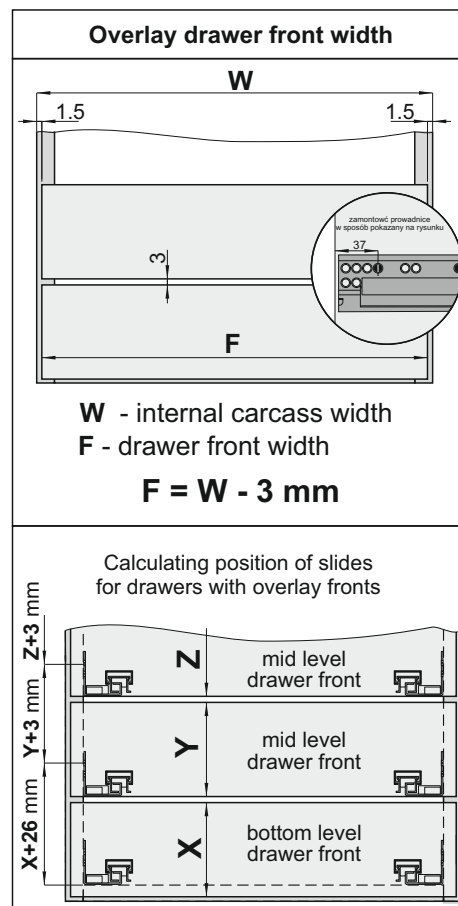

after deciding dimensions, use centre punch $\varnothing 10$

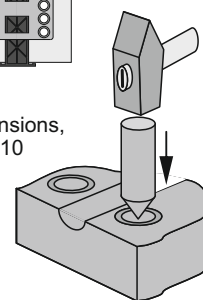




Important information:

Sevroll's offer also includes templates: **Sevrollbox Slim 3D for slides (index: 06084)**, and **Universal template for drawers Sevrollbox Slim and Slim 3D (index: 06069)** they are designed for easy and precise marking of holes for slide mounting


06084



Inset drawer fronts

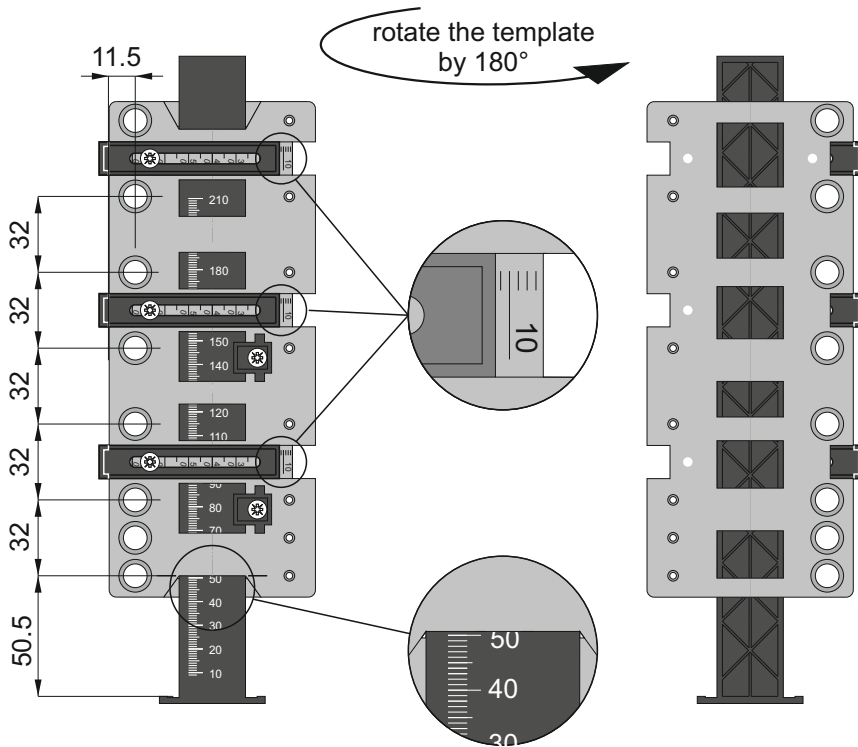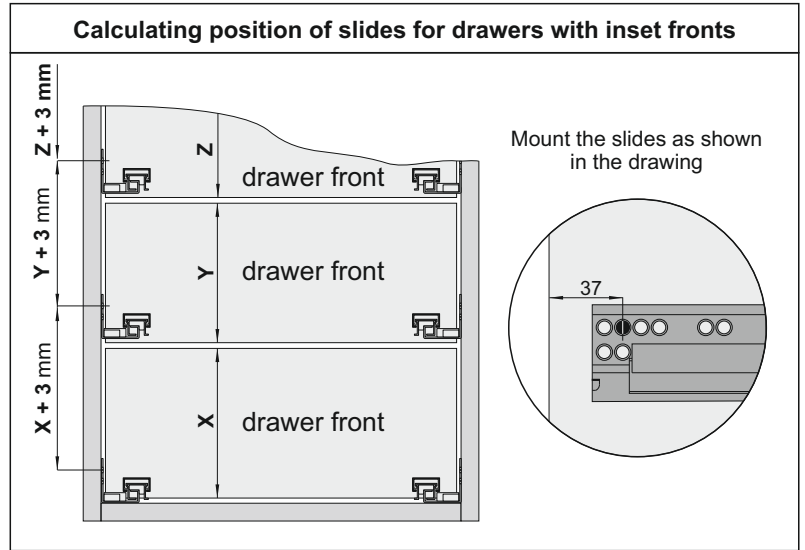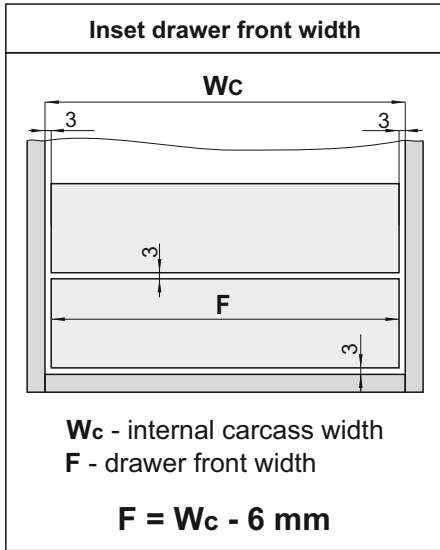

Positioning of holes for drawer front mount with inset drawer fronts

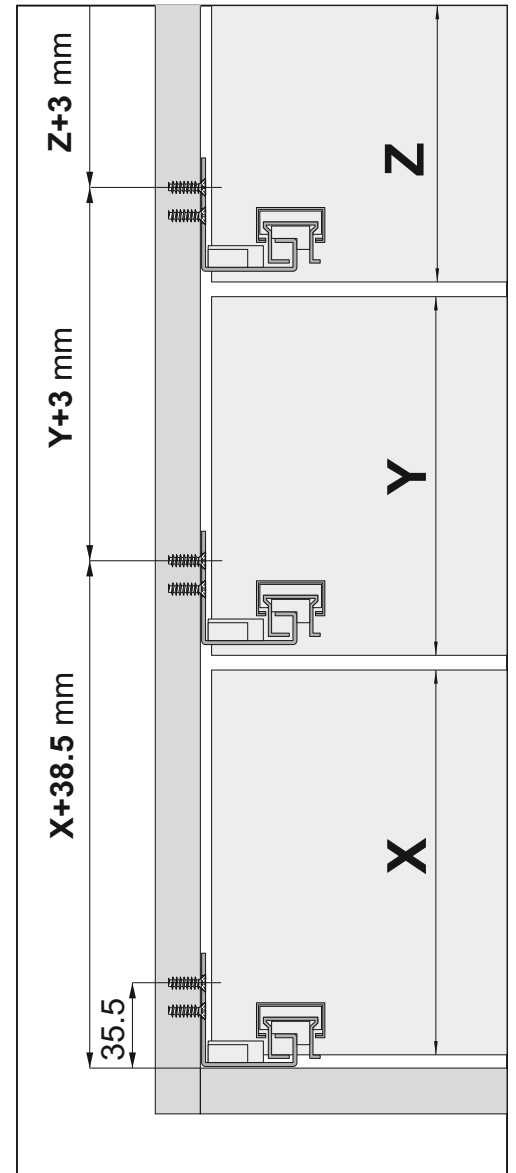

ATTENTION! Holes can be marked with centre punch or drill bit. Depending on the method, the plastic stop should be inserted into the template on the relevant side (LEFT - for holes made with centre punch, RIGHT - for holes made with drill bit).

