


#### Attention!

In order to eliminate door bowing (caused by low quality board) with system Capitol it is recommended to fit distancing guides Capitol.

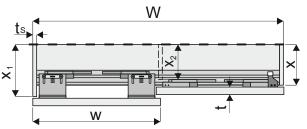

#### 2 door wings

w = (W : 2) + 10 mm

 $X_1 = X + t + 8 \text{ mm}$ 

 $X_2 = X - 12 \text{ mm}$ 


X, X<sub>1</sub>- depth of wardrobe side

X<sub>2</sub>- depth of internal wall

w - door width t - door thickness

W - wardrobe width

t<sub>s</sub>- side thickness

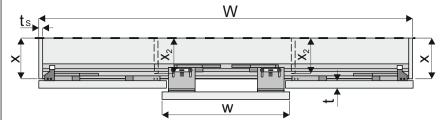

#### 3 door wings

w = (W : 3) + 10 mm

 $X_2 = X - 12 \text{ mm}$ 


X, X<sub>1</sub>- depth of wardrobe side


w - door width

X<sub>2</sub>- depth of internal wall W - wardrobe width

t - door thickness

t<sub>s</sub>- side thickness

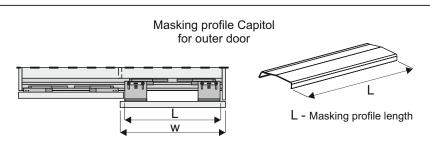


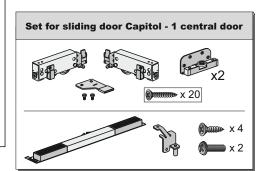

#### **COMPONENTS**
















### **Carriage fastening**

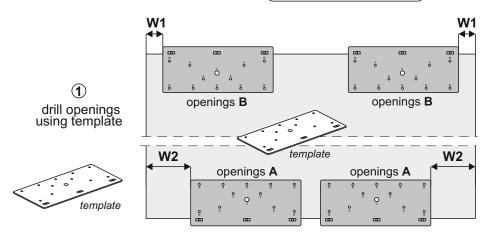




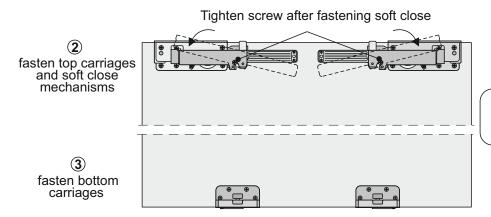

# ATTENTION We recommend using Sevroll's door straightening kit with this system.

#### **Track installation**

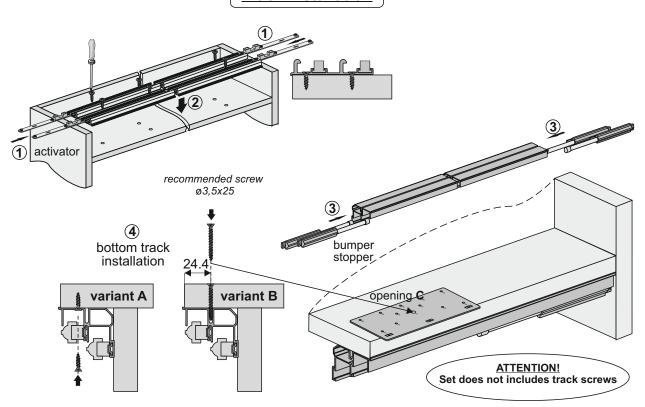







#### **Door installation**

Depending on door thickness used, **prior to assembly**, the external guides need to be adjusted correctly

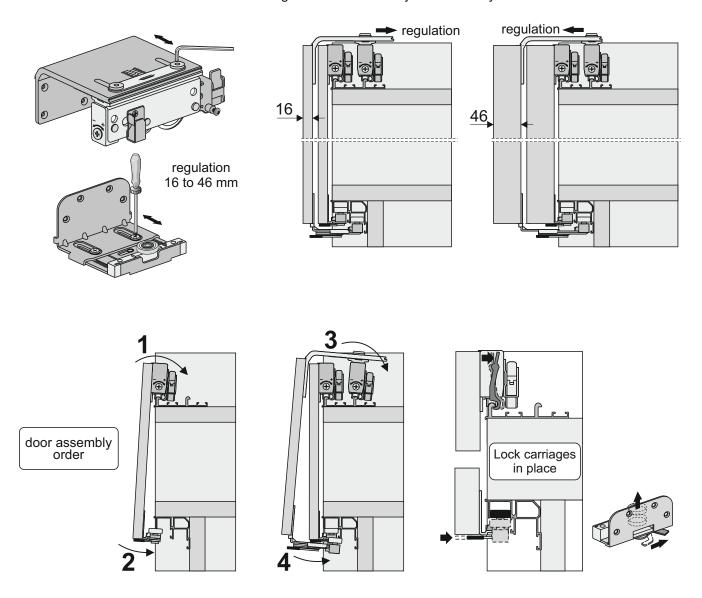


## **Adjustment**

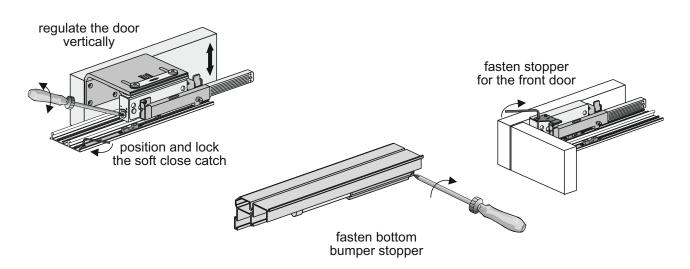





## Set for three wings – assembly of central soft-close

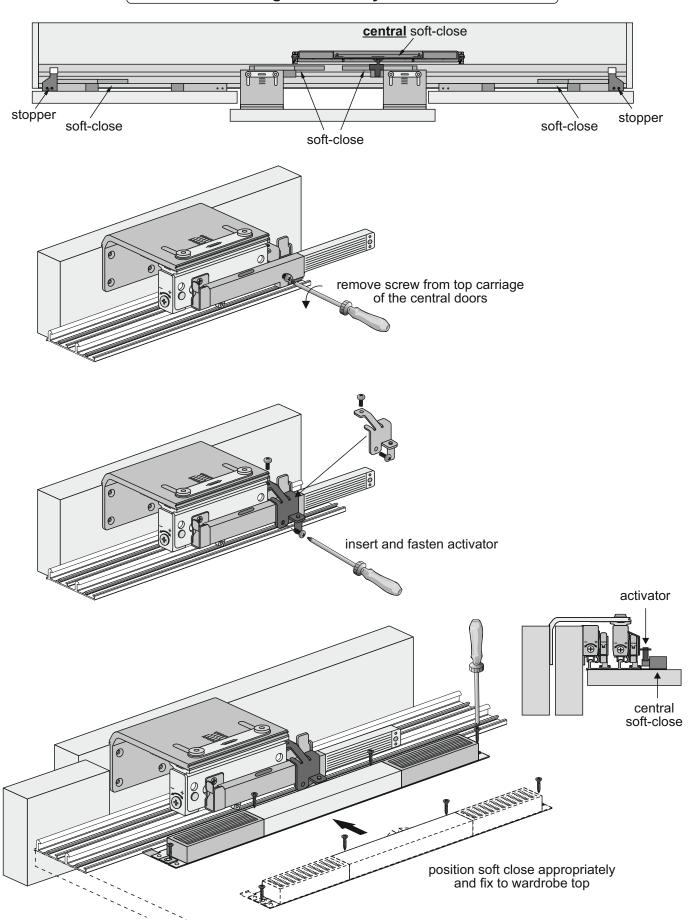





#### **INSTALLATION OF DISTANCING GUIDES CAPITOL**

Guides are fitted in order to eliminate door bowing (caused by low quality board)

