




SYSTEM

EDEN 18 BOARD – 3 door wings


SEVROLL®

ATTENTION!

Included self-tapping metal screws for fixing carriages must be replaced with self-tapping woods screws 4x16 (Dome heads)
Not included in set.

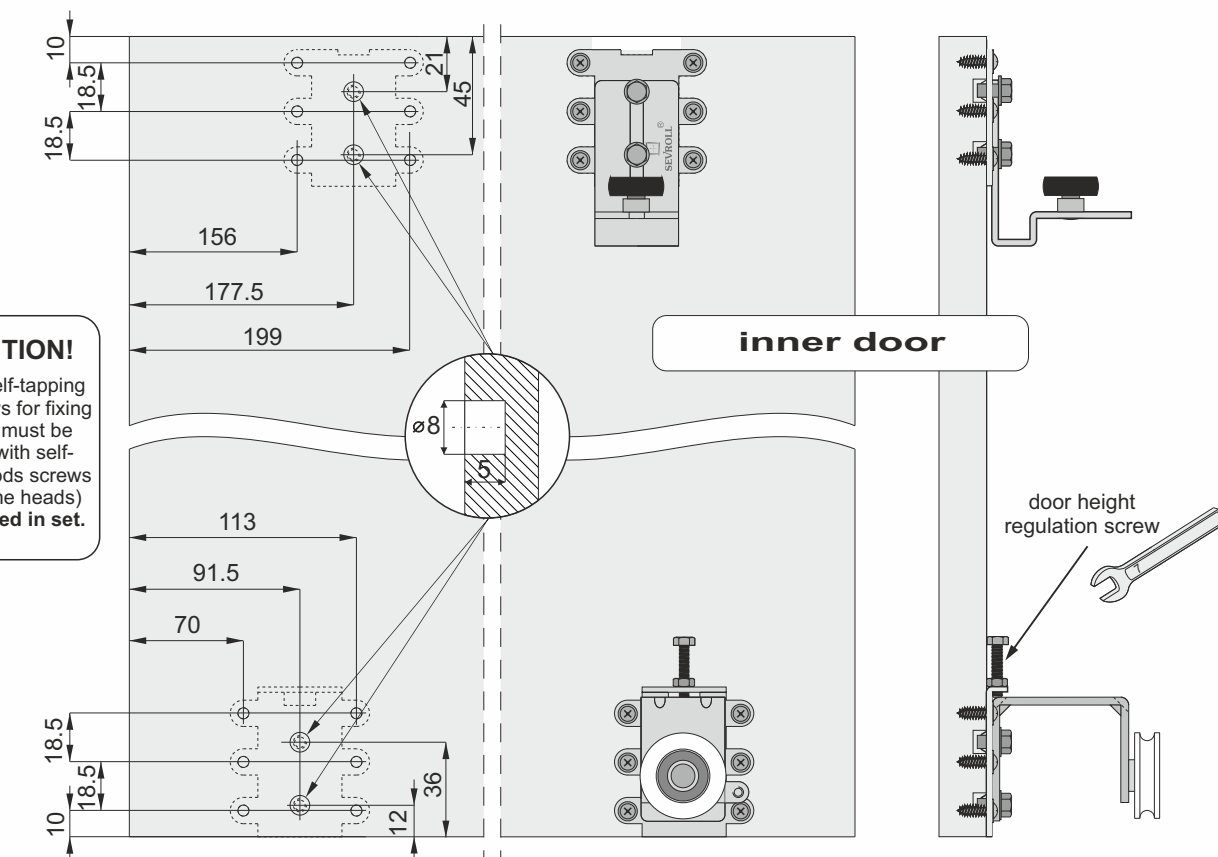**ATTENTION!**

To eliminate the possibility of doors bowing (with low quality board) it is recommended to install Sevroll's door straightening kits.

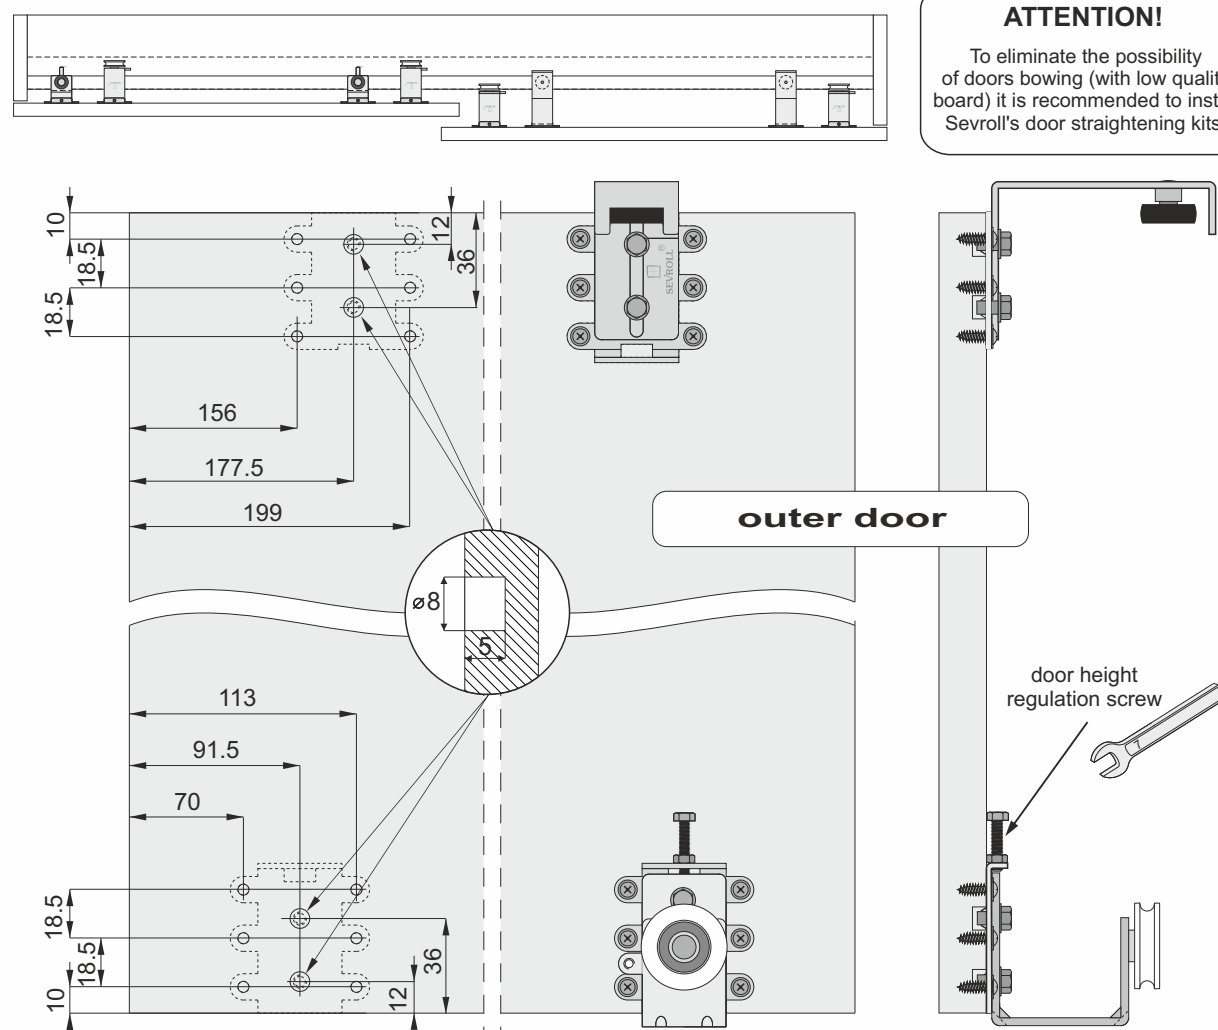






SYSTEM

EDEN 18 BOARD – 3 door wings


SEVROLL®

Inner door installation

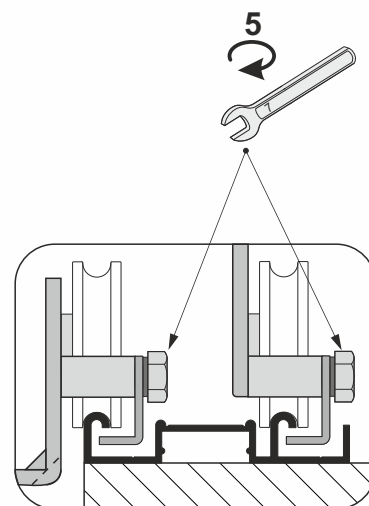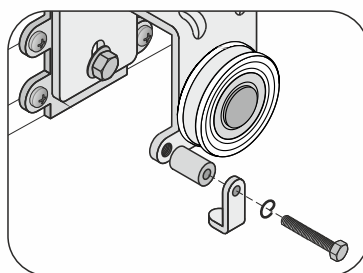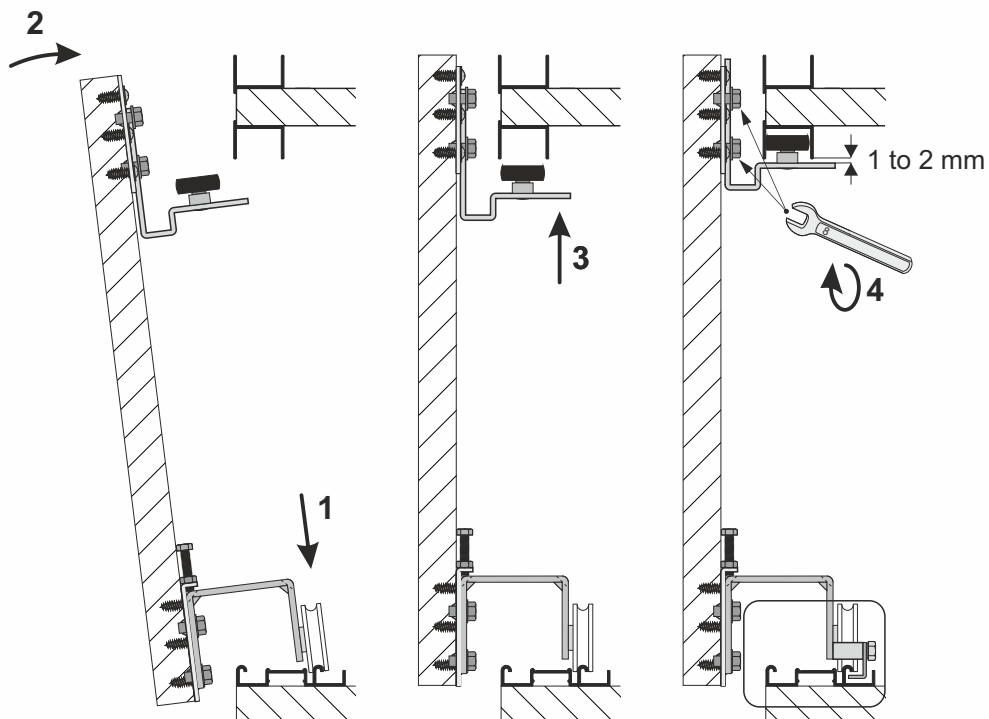

securing catch
– fasten after door assembly

Outer door installation

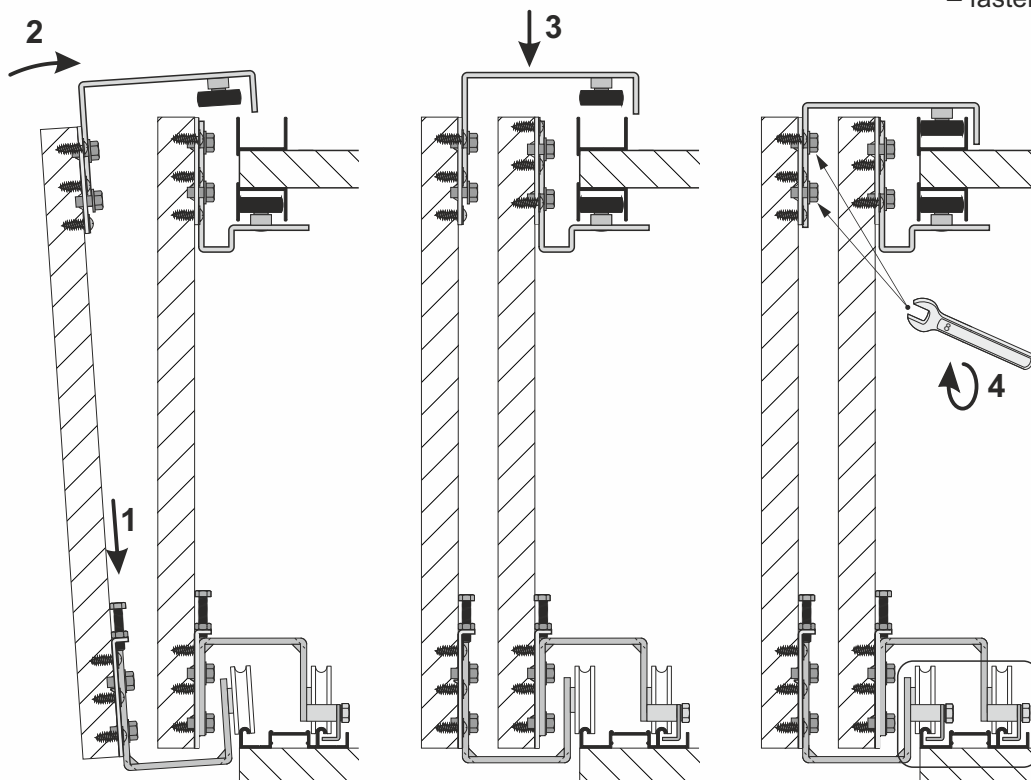




SYSTEM

EDEN 18 BOARD – 3 door wings




SEVROLL®





Soft-close installation

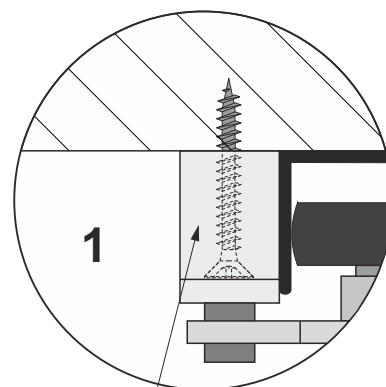

ATTENTION!
Remember to arm
the soft-closer prior
to door installation

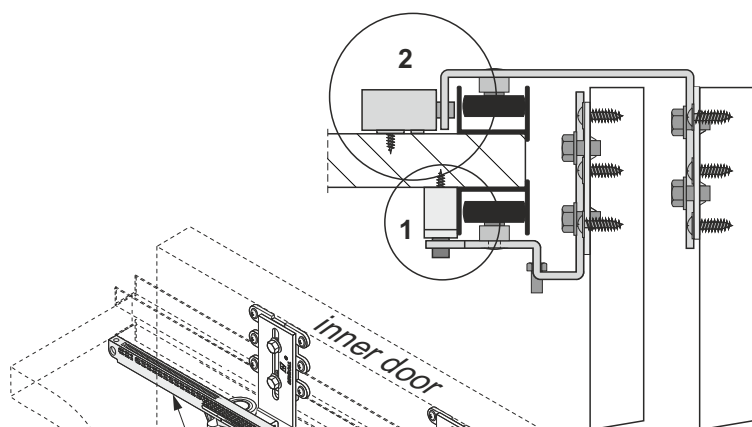

soft-close
MINI

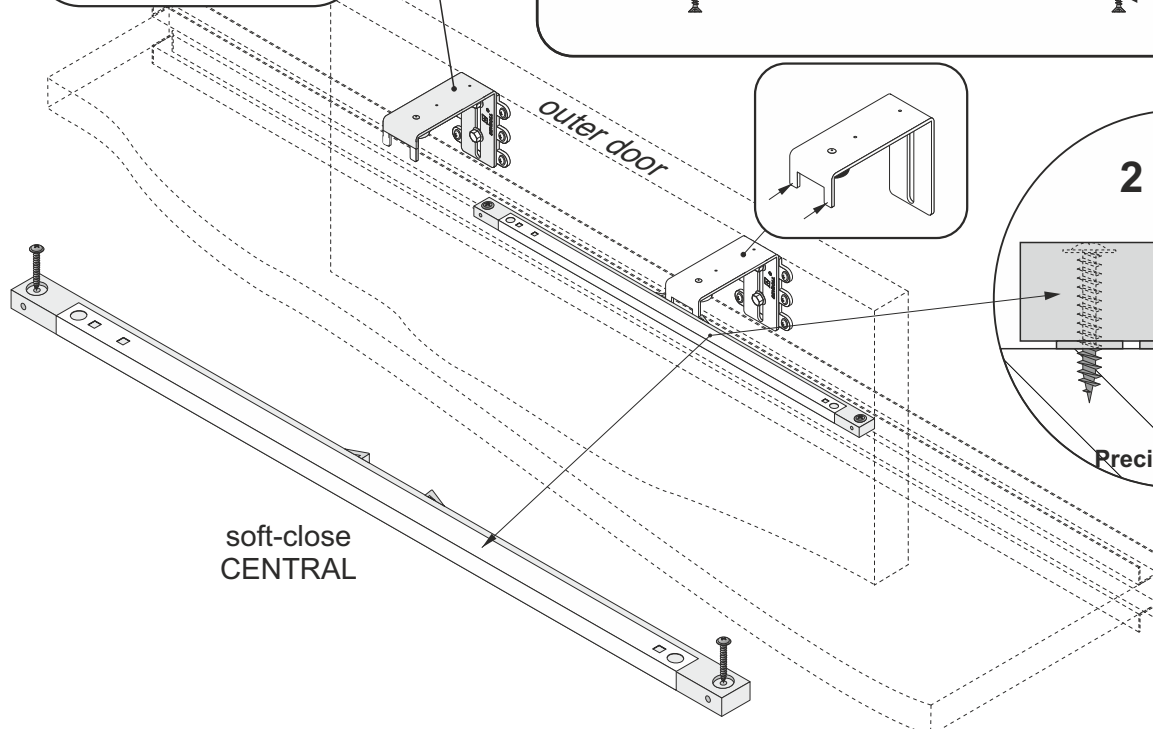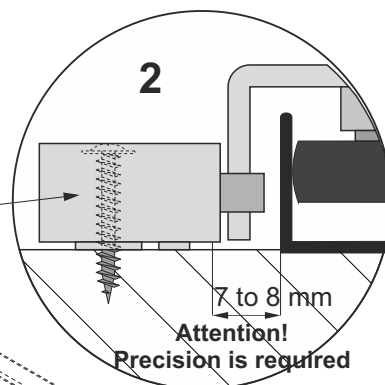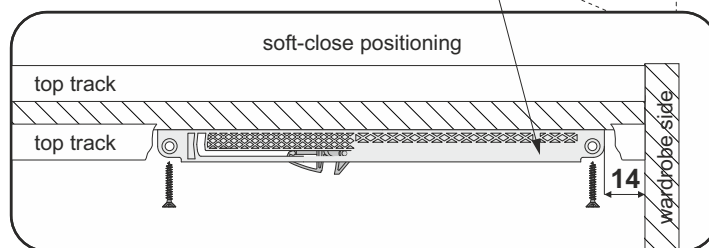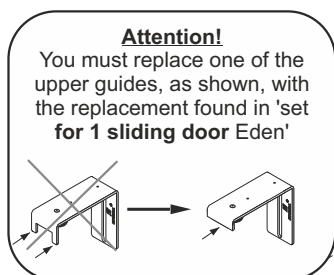

soft-close
CENTRAL



SYSTEM


EDEN 18 BOARD – 3 door wings **SEVROLL®**

ATTENTION! With system **Eden Board** for use with **18 mm** board you can use handle profiles from our **Gemini 18** range.


Inner door/s - 1 handle

Outer door - 2 handles

(Door width calculations change)

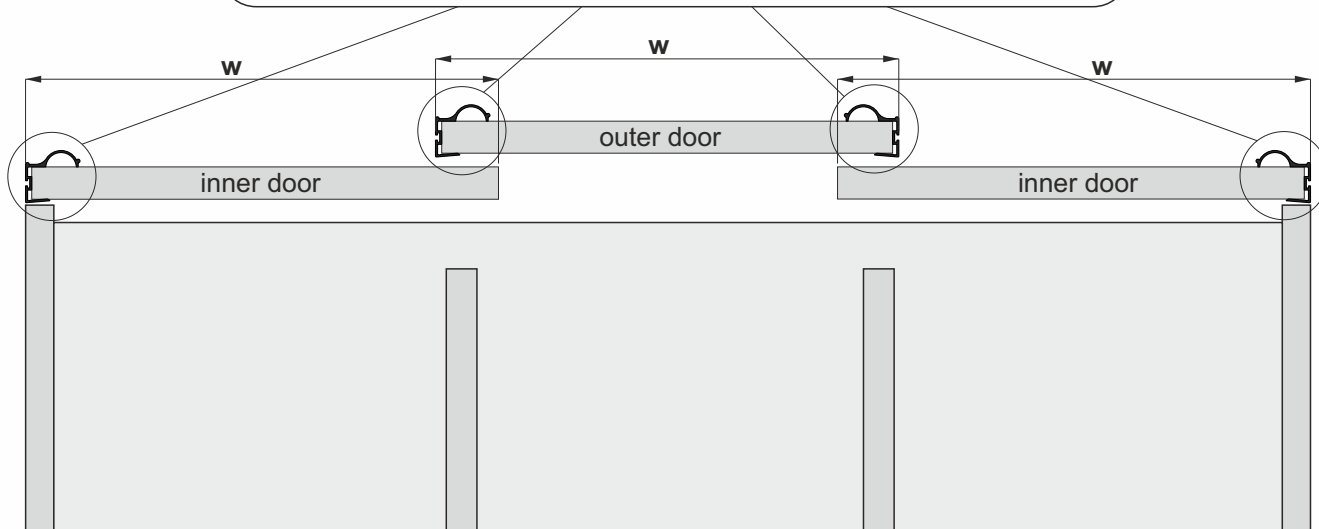

door width	- w	$w = (W + 72 \text{ mm}) : 3$
board width (outer door)	- wp_o	$wp_o = w - 2x$
board width (inner door)	- wp_i	$wp_i = w - x$

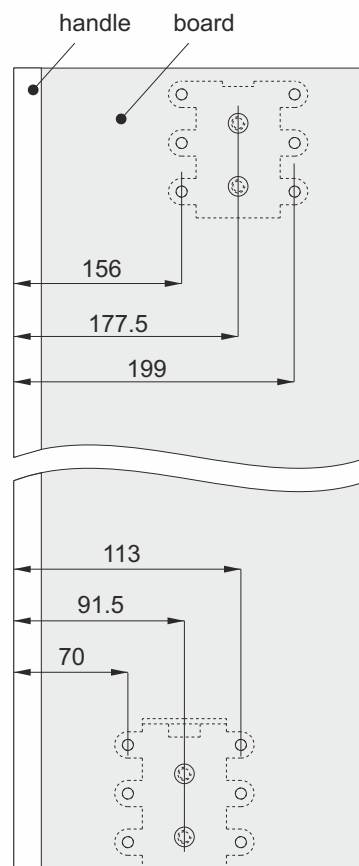Carriage installation

The value of **x** depends on the handle profile used

<p>Alfa $x = 11 \text{ mm}$</p>	<p>Beta $x = 1.5 \text{ mm}$</p>	<p>Factor $x = 3.5 \text{ mm}$</p>	<p>Secret Line $x = 1.5 \text{ mm}$</p>
<p>Faworyt $x = 9.5 \text{ mm}$</p>	<p>Fiesta $x = 1.5 \text{ mm}$</p>	<p>Focus $x = 1.5 \text{ mm}$</p>	<p>Slim Line $x = 3 \text{ mm}$</p>
<p>Focus II $x = 3.5 \text{ mm}$</p>	<p>Universal $x = 3.5 \text{ mm}$</p>	<p>Victoria $x = 11 \text{ mm}$</p>	