




COMPONENTS













Dimensions of opening

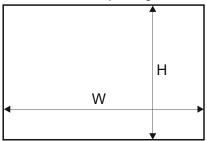


handle length = door height

door height		- h	h = H - 10 mm
glass height		- hg	hg = h - 59 mm
single door system	door width	- w	w = W - 8 mm
two door system	door width	- W	w = (W - 13 mm) : 2
glass width		- wg	wg = w - 16 mm
horizontal profile length		- L	L = w - 27.5 mm

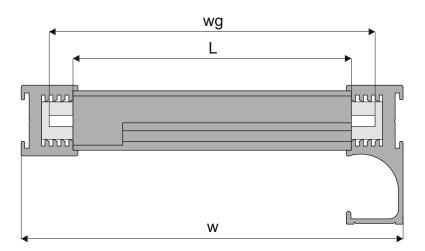


Installation method for fitting safety glass in OXFORD profiles

Vertical profiles




Horizontal profile



IMPORTANT INFORMATION

- in single door systems, we use 14x6 mm textile door stop for both outer profile and handle OXFORD
- in two door systems, we use 14x6 mm textile door stop for outer profile and 14x4 mm textile door stop for handle OXFORD

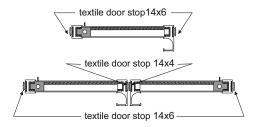

- 4.8x6 mm textile door stop should be inserted in horizontal profiles prior to door assembly
- OXFORD system profiles are suitable for use with our decorative foil programme – DECOR