



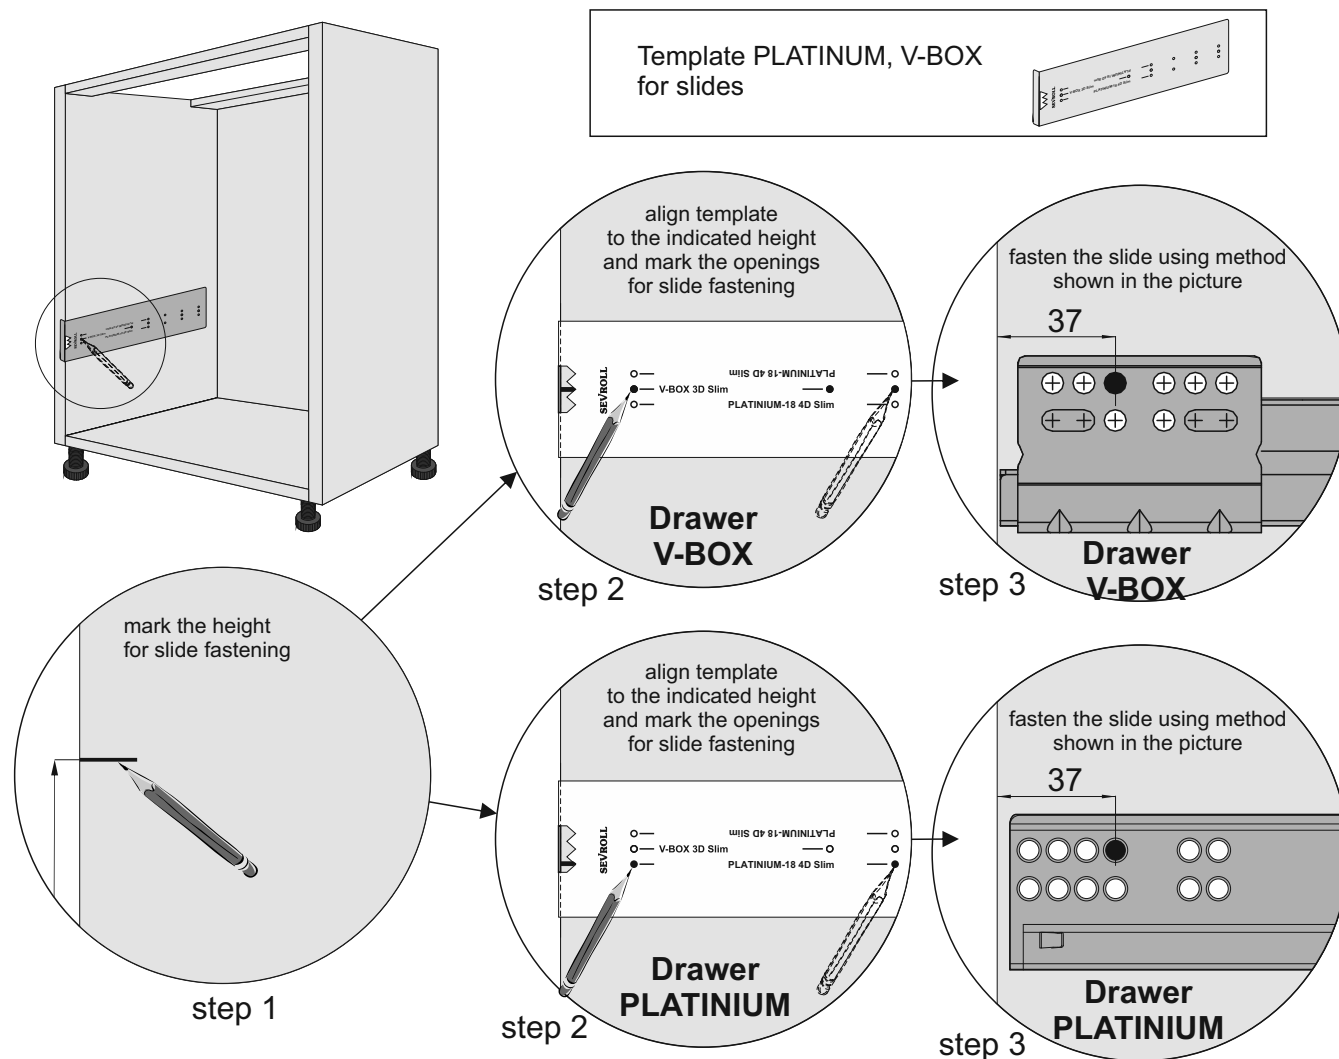


Drawer V-BOX	Drawer PLATINIUM
Attention! Dimensions for positioning of V-Box 3D Slim slides in standard furniture carcasses h=720 mm are available on the next page.	

Marking holes for attaching the guides to **V-BOX 3D Slim** drawers
with **overlays** fronts


The height of V-BOX 3D Slim guides in furniture carcasses (height 720 mm)
- 4 variants

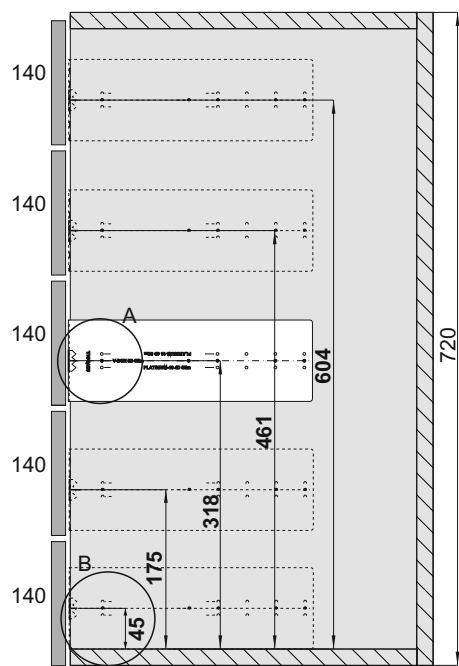


variant 1 - x5

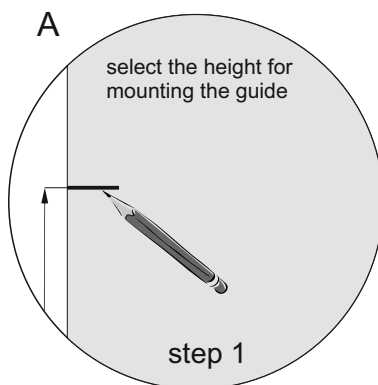


step 1

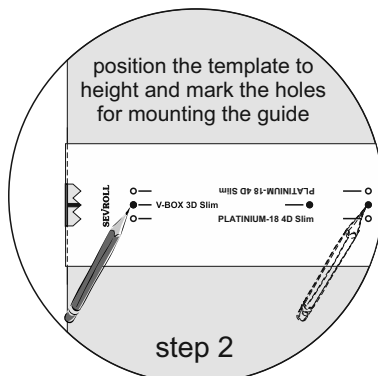


step 2

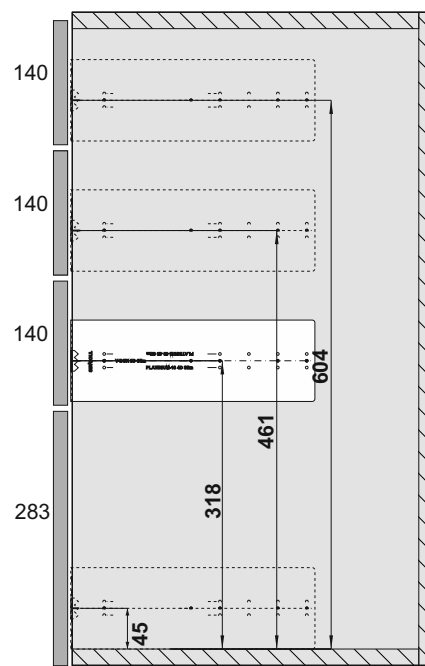

variant 2 - 3+1

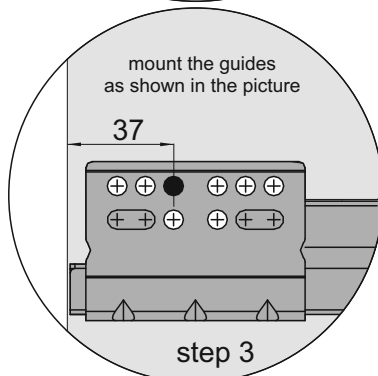


step 3

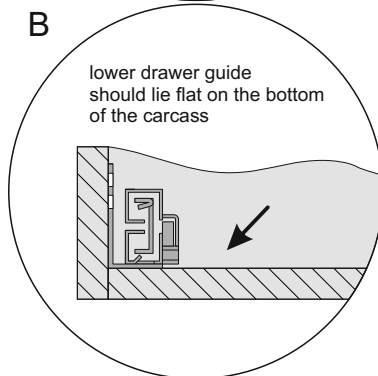


B

lower drawer guide
should lie flat on the bottom
of the carcass

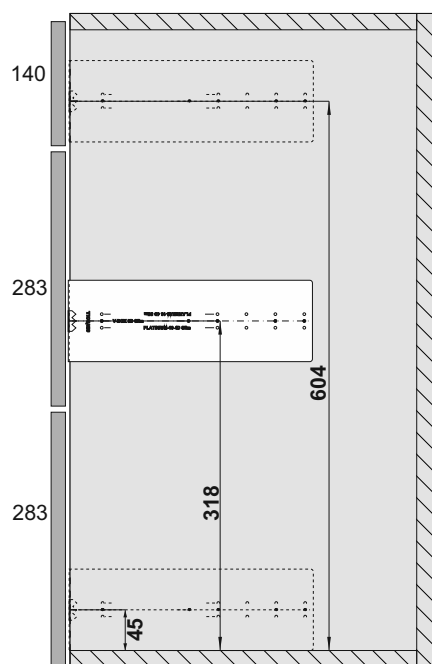






variant 3 - 1+2

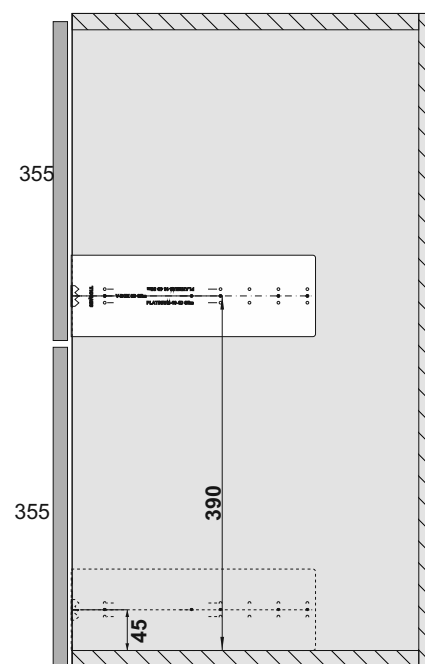



variant 4 - x2

Marking holes for attaching the guides to **V-BOX 3D Slim** drawers
with **overlays** fronts

Any height of carcass, quantity and drawer front height

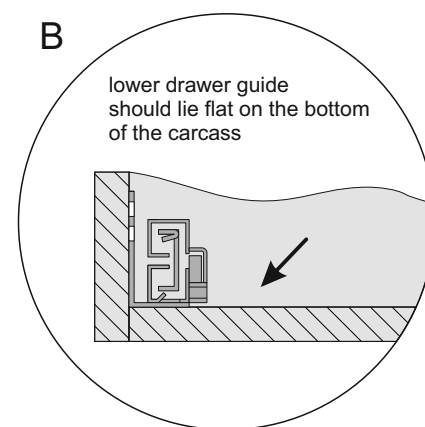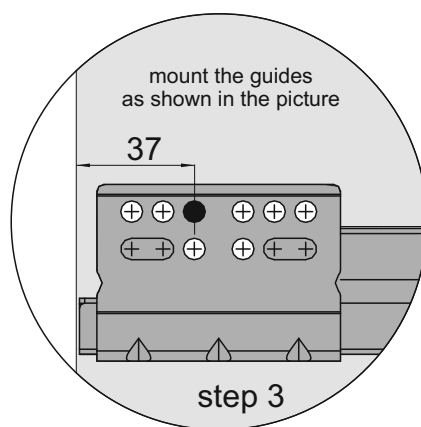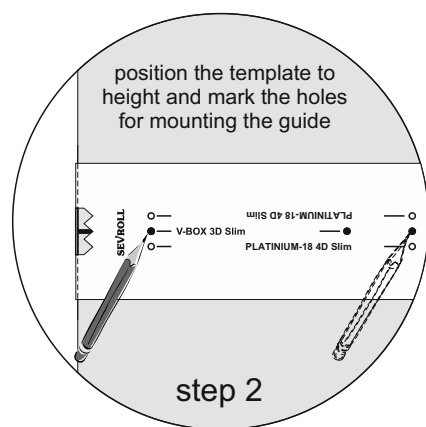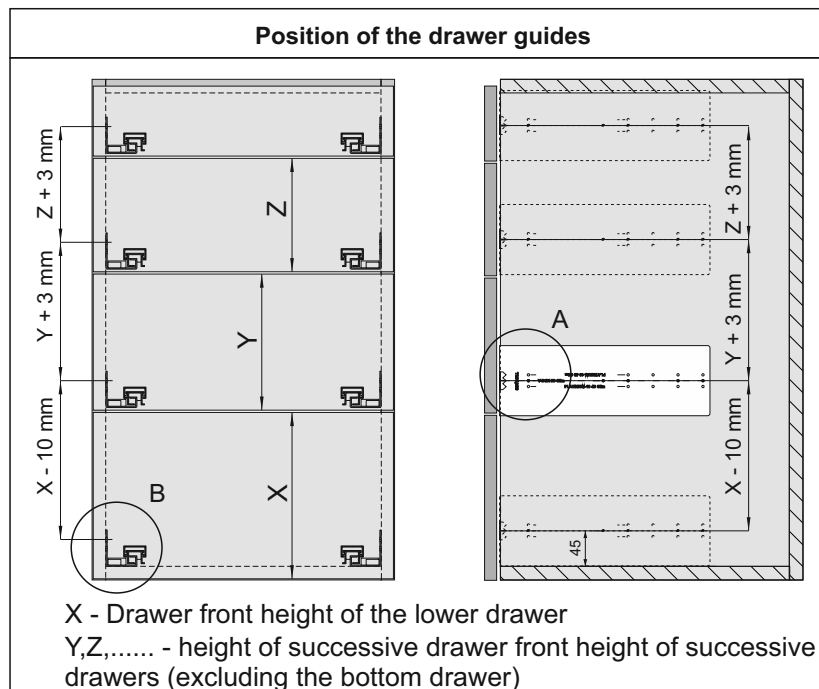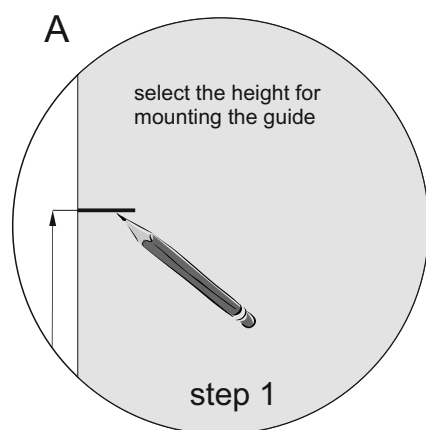

Important information

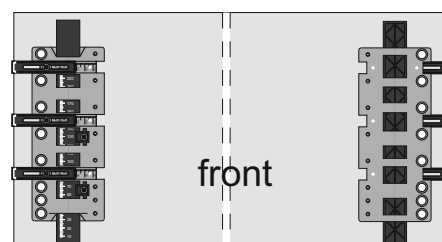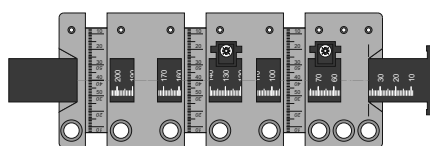

Sevroll's offer also includes the **UNIVERSAL** template for drawer fronts.
This is used for marking the holes to mount drawer fronts to **V-BOX 3D Slim** drawers.