


Height 96\* / 134\*\* / 181\*\*\* mm

# Drawer PLATINIUM-18 4D Slim

SEVROLL®

Attention! \* Dimensions for 96 mm drawer / \*\* Dimensions for 134 mm drawer / \*\*\* Dimensions for 181 mm

Components

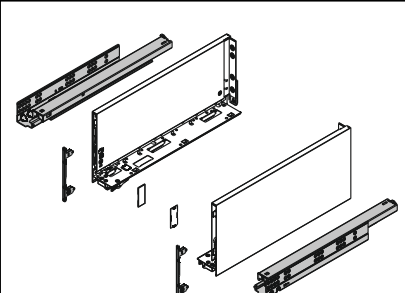

ATTENTION!  
screws are **not** included

Cutting dimensions of 18 mm MDF

B  
Back panel


LW - 38 mm

63\*  
101\*\*  
148\*\*\*

A  
Base panel

NL - 10 mm

LW - 35 mm

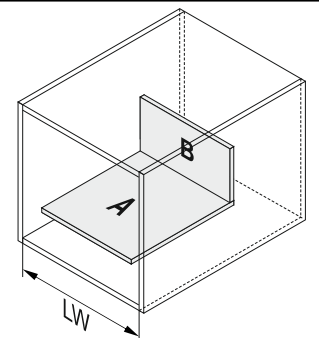


NL : 250 [mm]  
270  
300  
350  
400  
450  
500  
550  
600


A – Base panel  
B – Back panel

LW – internal cabin width  
NL – nominal length of drawer


Drawer assembly

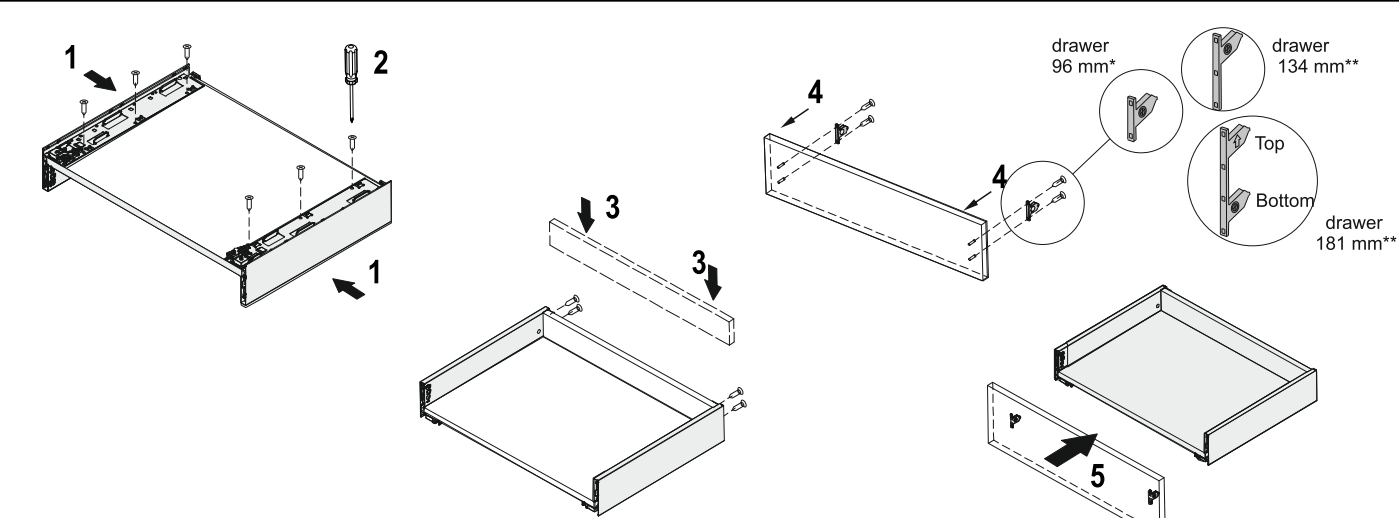

Drawer runner positioning

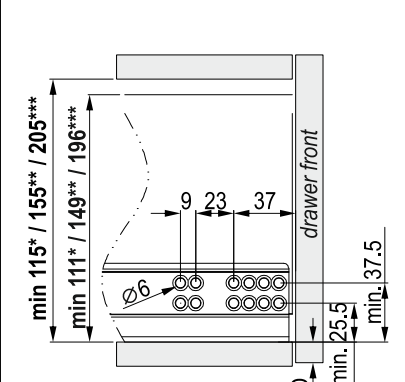


D - Positioning of drawer front

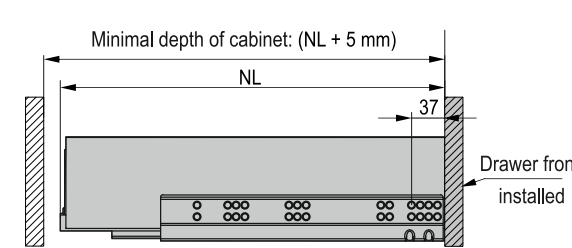


Warning:  
in drawers with recessed  
fronts, the guides should be  
positioned further back by the  
thickness of the drawer front!


Installation measurement

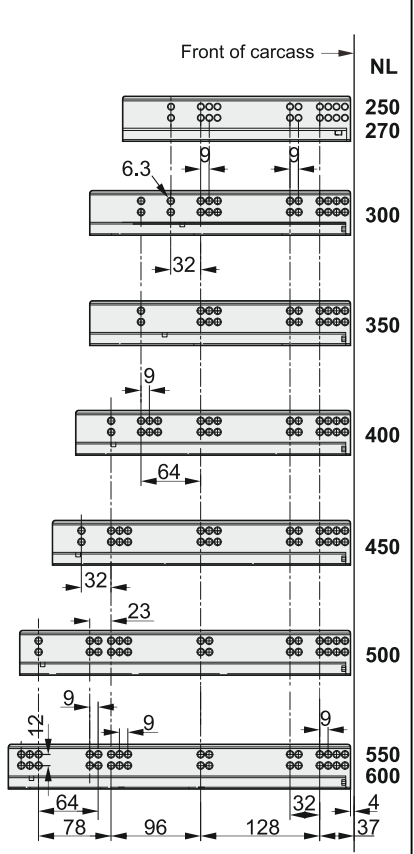


Drawer front regulation

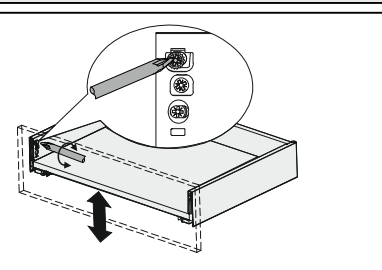


Height adjustment within ±2 mm

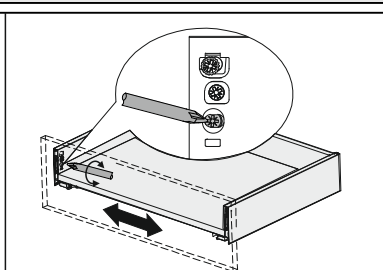

Side adjustment within ±1.2 mm

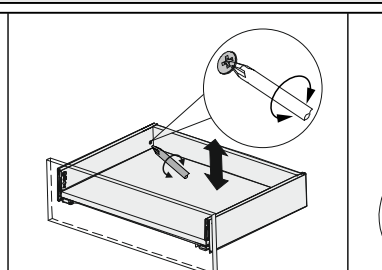


Rear height adjustment within ±2 mm

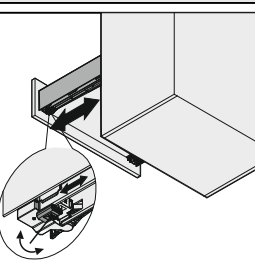


Depth adjustment within 0 to 5 mm


Cover insertion / removal

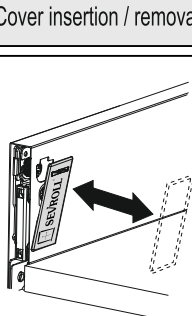


Drawer front panel removal

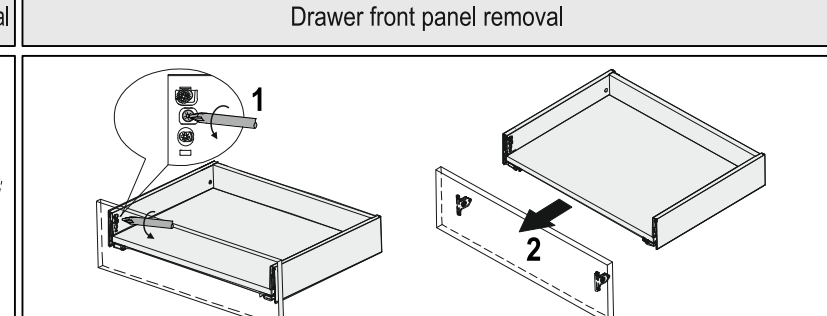

Drawer insertion

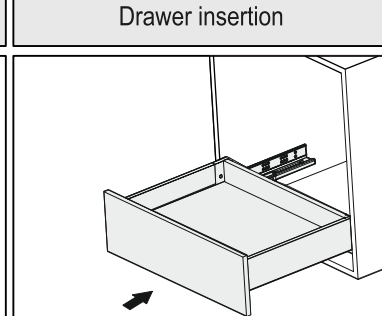


Drawer removal

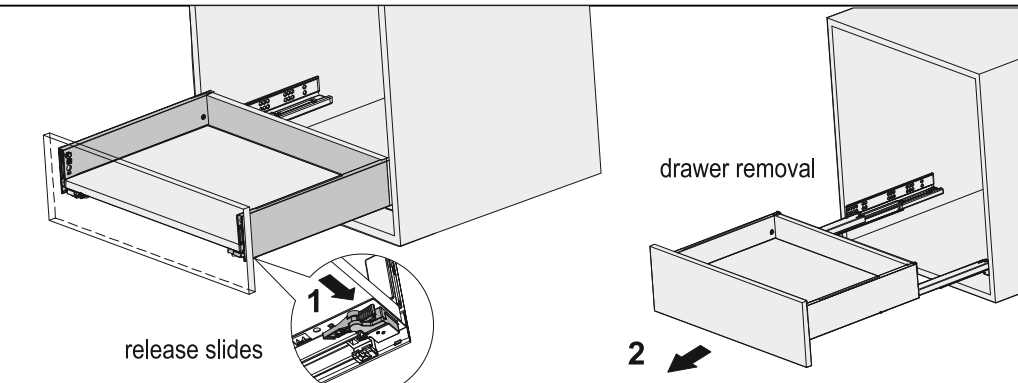

release slides


Drawer strengthening

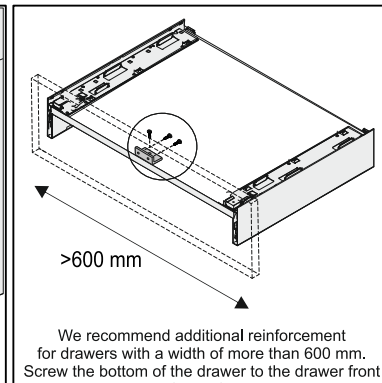


>600 mm

We recommend additional reinforcement  
for drawers with a width of more than 600 mm.  
Screw the bottom of the drawer to the drawer front  
using steel bracket (40343) and screws 3.5 x 13


Mounting dimensions of back panel

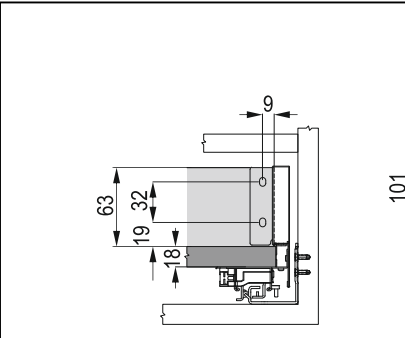

drawer 96 mm\*

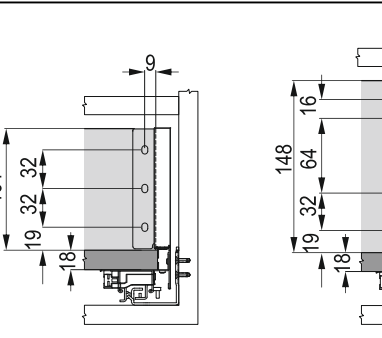


drawer 134 mm\*\*

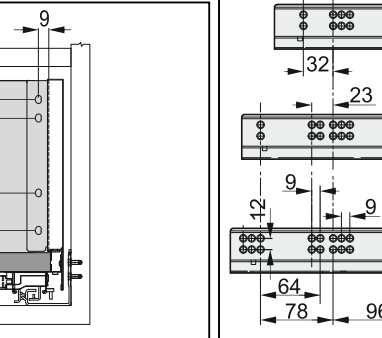


drawer 181 mm\*\*\*


Mounting dimensions for drawer front panel

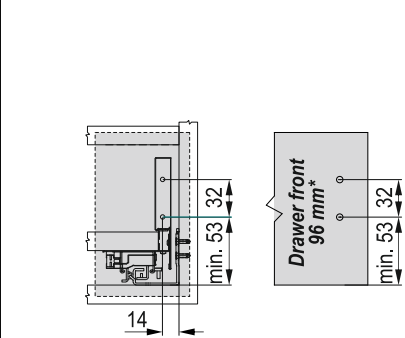

Drawer front  
96 mm\*

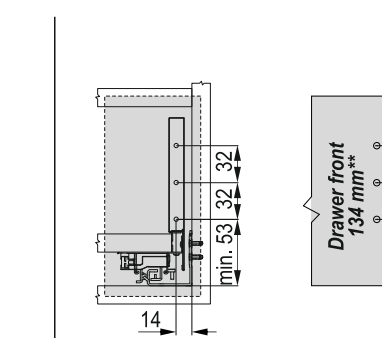

Drawer front  
134 mm\*\*

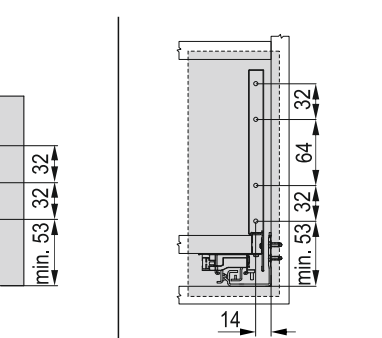

Drawer front  
181 mm\*\*\*