


# **SEVROLL**

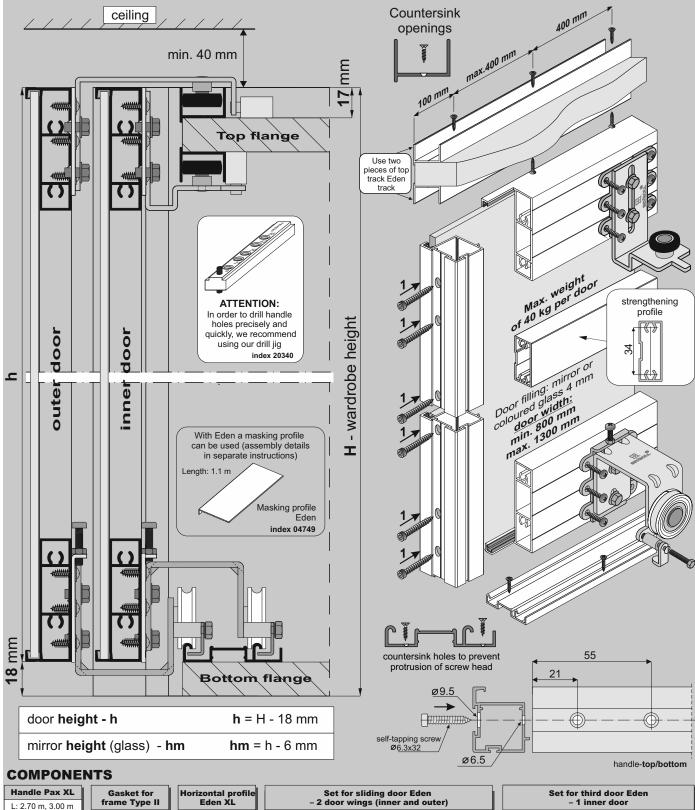


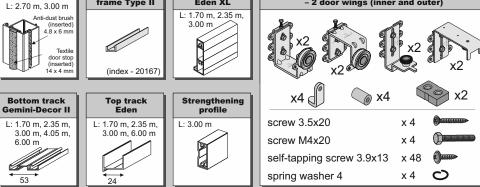


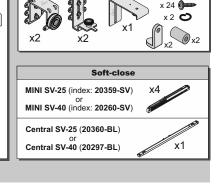



x 2 🕼

You must remember to purchase self-tapping screws to construct each door (min. 8 screws per door).

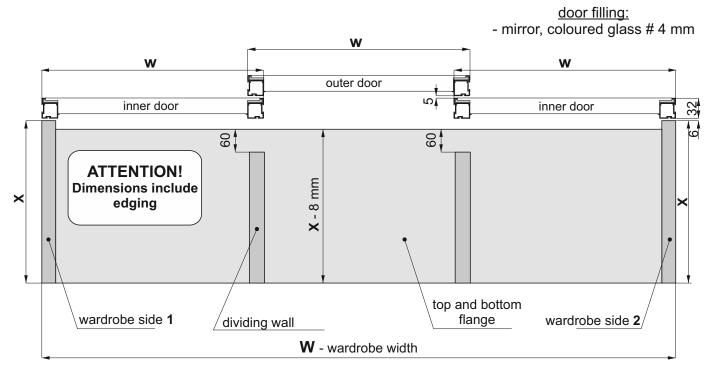

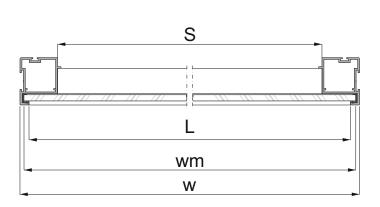



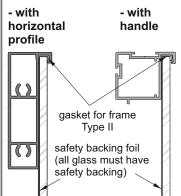

### ATTENTION!

Due to the fact that no plinth is needed in system Eden, attention must be paid to the bottom flange being positioned level to the floor. Additionally, when using furniture slides, they should be placed along the whole length so that the bottom flange and bottom track does not bend.

Door width **w** = (W + 50 mm) : 3

Mirror width (glass) **wm** = w - 6 mm

Horizontal profile length Eden XL **L** = w - 12 mm


Strengthening profile length **S** = w - 50 mm


# **ATTENTION!**

Rear mirror / coloured glass surface must be secured with safety backing foil (excluding glass surface glued with mirror adhesive). The edges of glass must be polished.


### **ATTENTION**

In Eden system with doors taller than 2 m it is possible for the door wing to bow +/- 5 mm

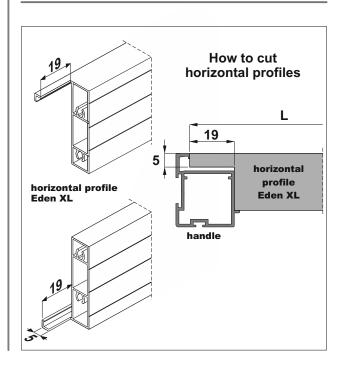

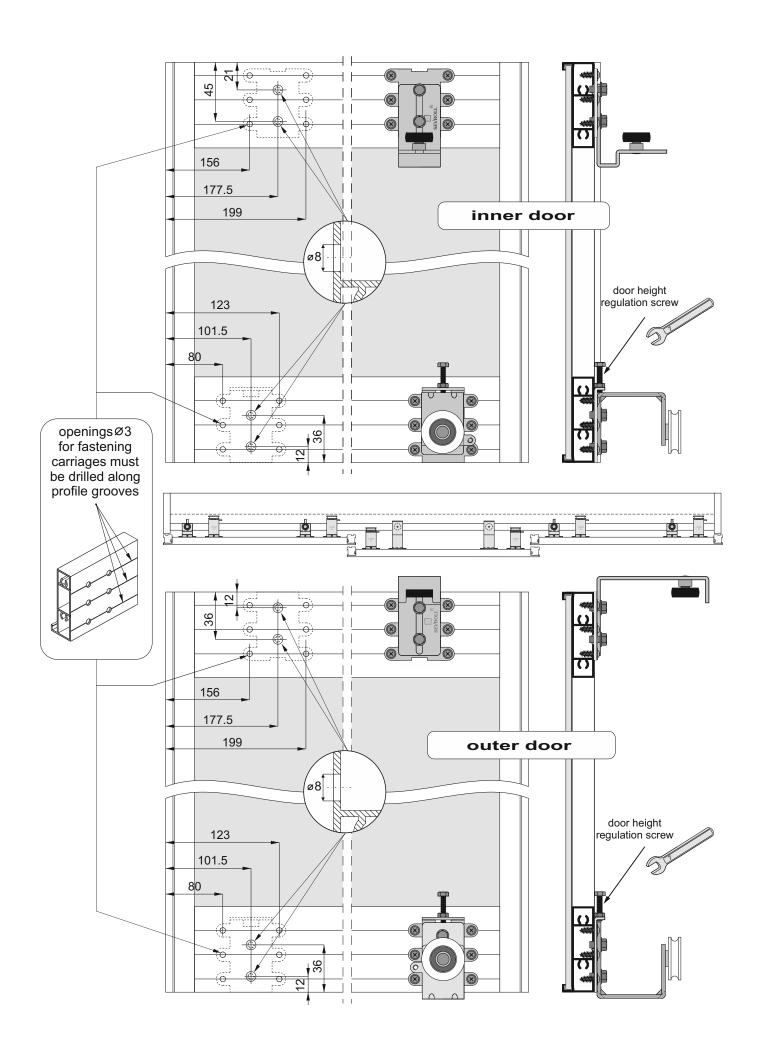

## Inner door installation

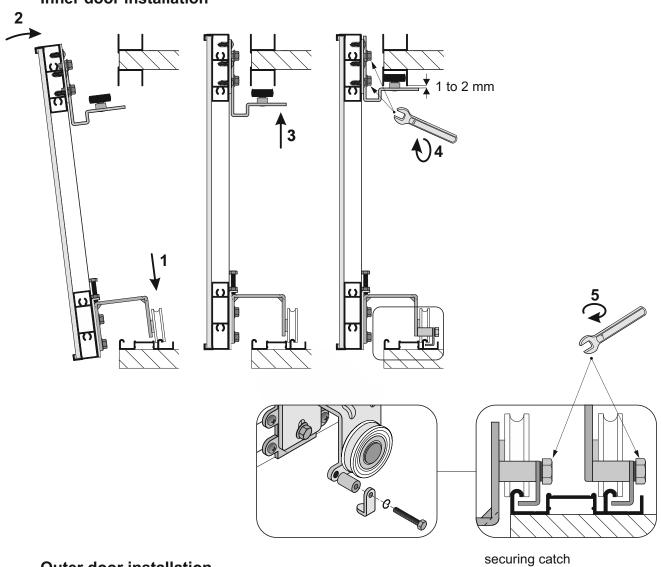

# Outer door installation - fasten after door assembly

