


Height 96* / 134** / 181*** mm

Slim drawer box PLATINIUM-18 4D with glass sides and LED lighting



SEVROLL®

Attention! * Dimensions for 96 mm drawer / ** Dimensions for 134 mm drawer / *** Dimensions for 181 mm

Components

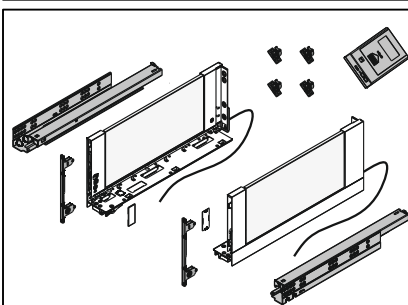

Cutting dimensions of 18 mm MDF

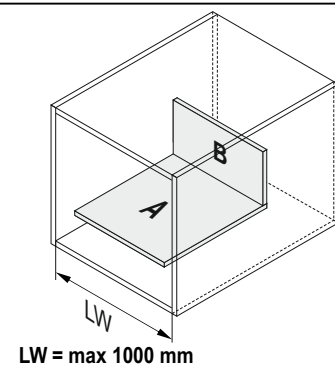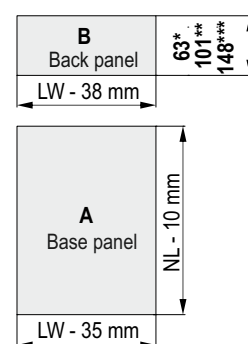





NL : 250 [mm]
270
300
350
400
450
500
550
600

A – Base panel
B – Back panel




LW – internal cabin width
NL – nominal length of drawer

LW = max 1000 mm


Drawer assembly

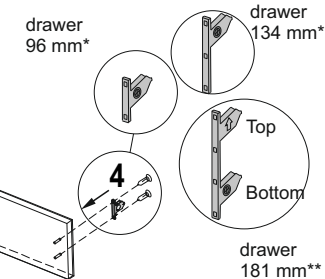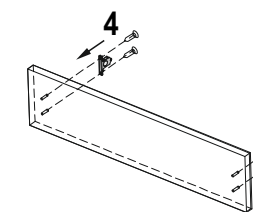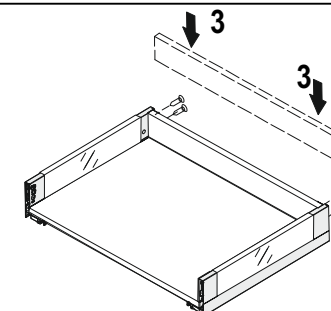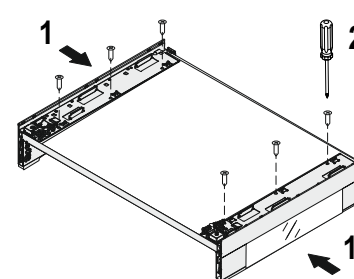


LED lighting installation

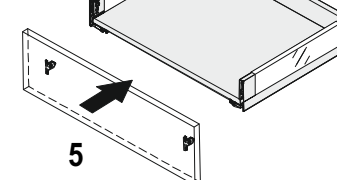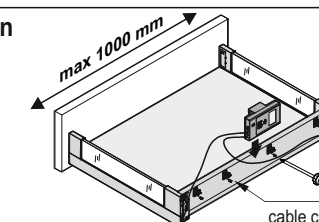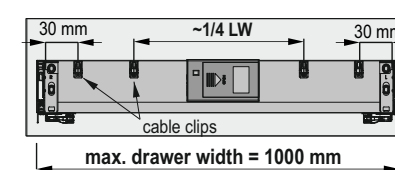

Drawer runner positioning

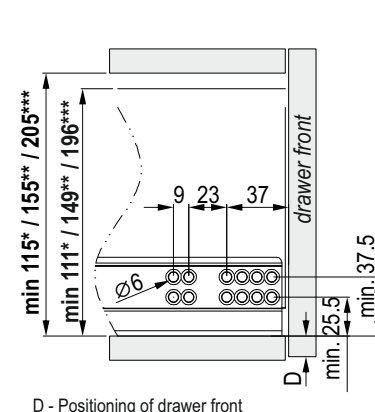


X = min. 20 mm to max 150 mm
(Attention! LED off switch activation distance)

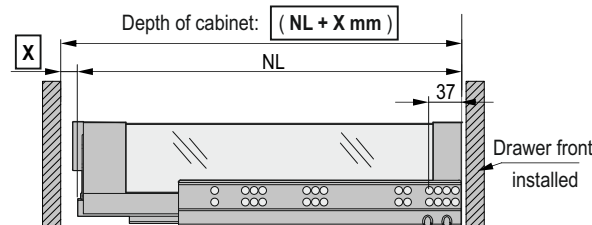


Warning: in drawers with recessed fronts, the guides should be positioned further back by the thickness of the drawer front!


Installation measurement

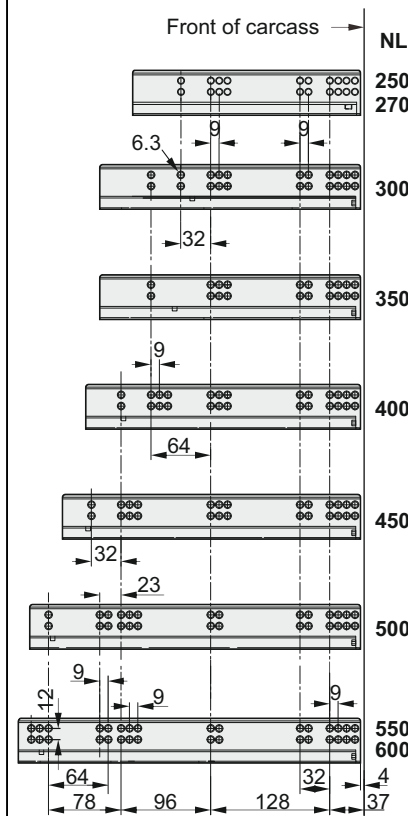


Mounting dimensions of back panel

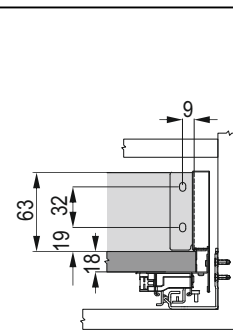

drawer 96 mm*

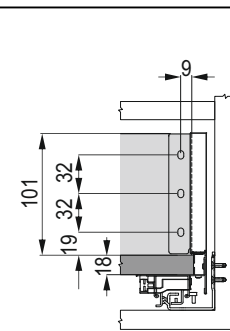


drawer 134 mm**

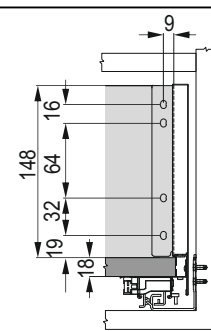


drawer 181 mm***


Mounting dimensions for drawer front panel

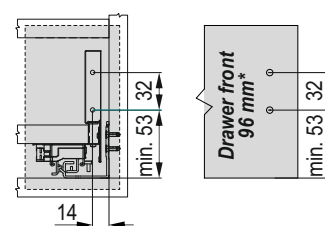

Drawer front 96 mm*

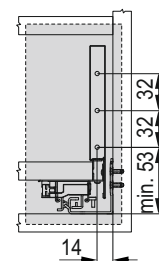


Drawer front 134 mm**

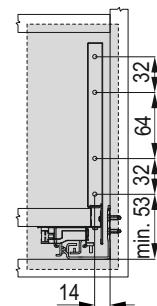


Drawer front 181 mm***


Drawer front regulation

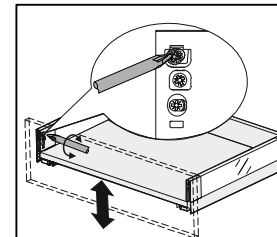


Height adjustment within ±2 mm

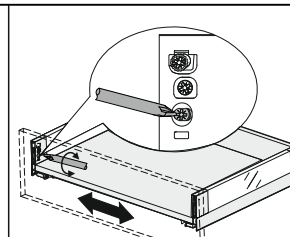

Side adjustment within ±1.2 mm

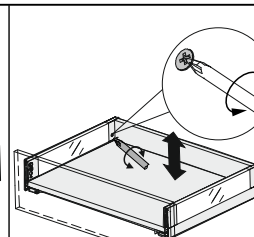


Rear height adjustment within ±2 mm

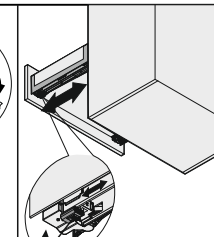


Depth adjustment within 0 to 5 mm



Removal/installation of glass

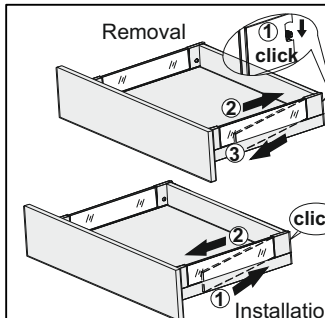


Cover insertion / removal

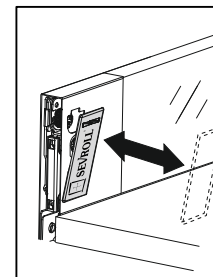


Drawer front panel removal

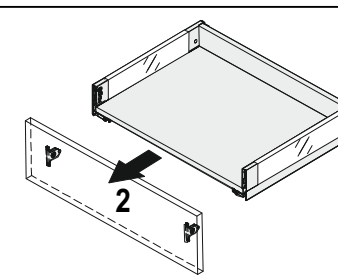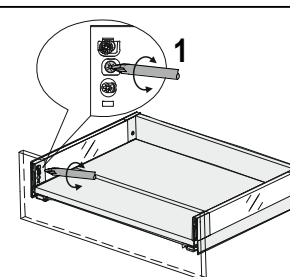

Drawer insertion

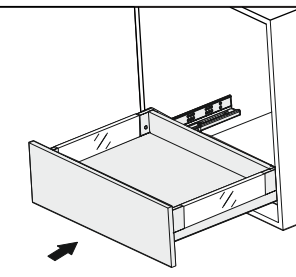

Drawer removal

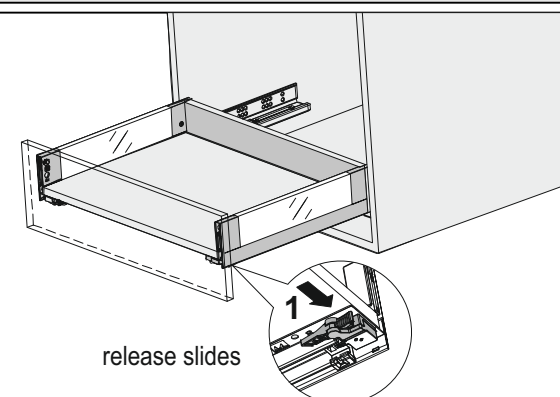

drawer removal

Drawer strengthening

