




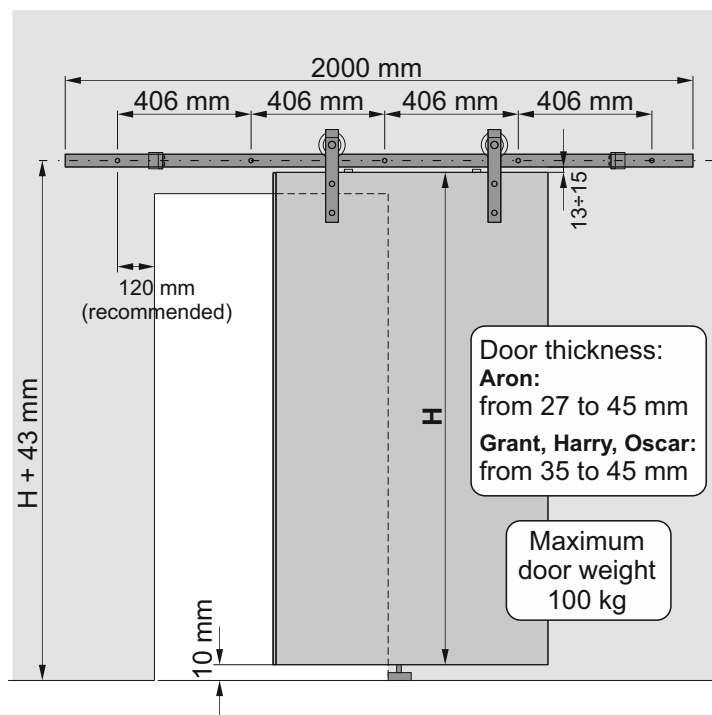


1. Hole positioning on wall

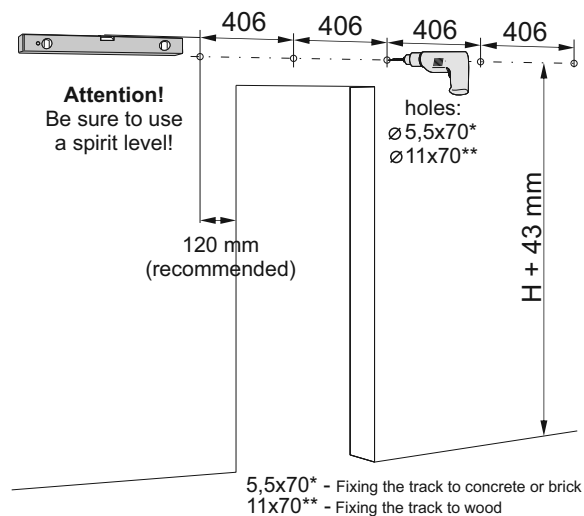


2. Installation of stopper with track

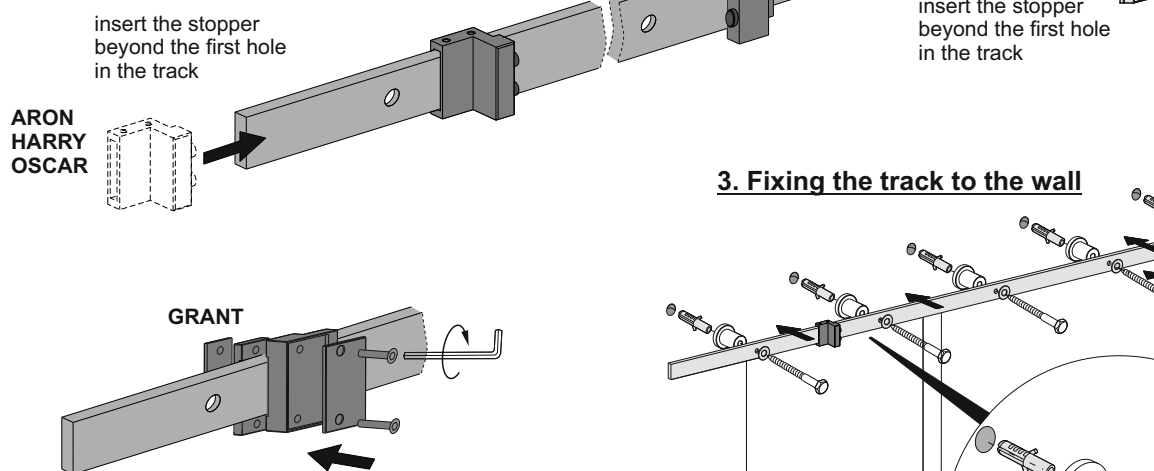


3. Fixing the track to the wall

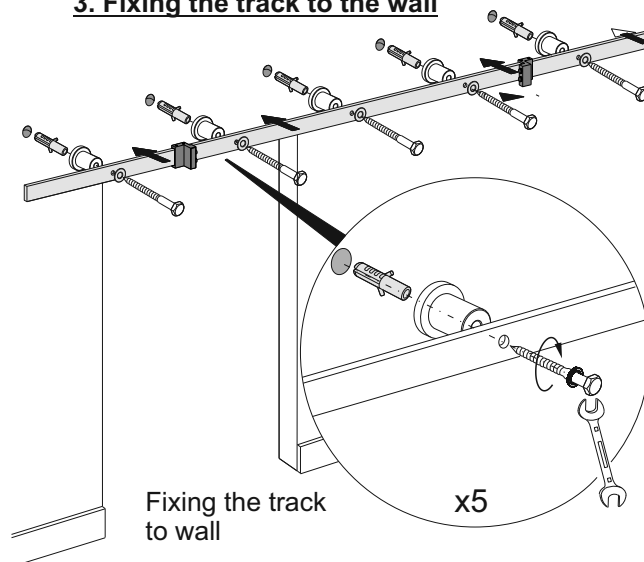

ADDITIONAL COMPONENTS

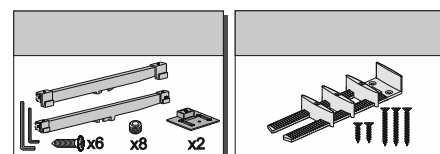


COMPONENTS

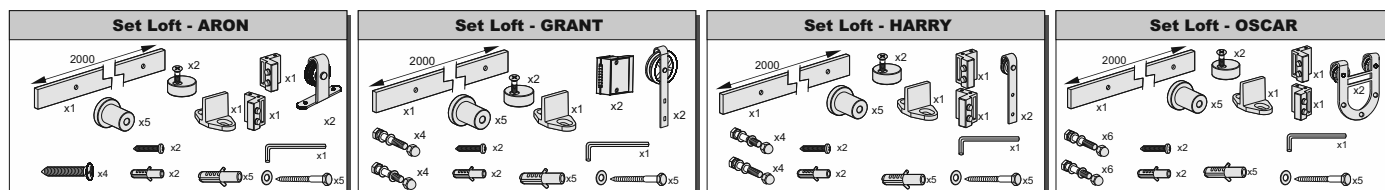





Set LOFT for pathway doors – ARON

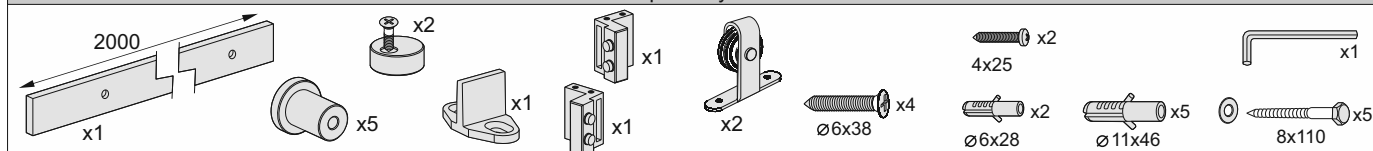


Set LOFT for pathway doors – GRANT

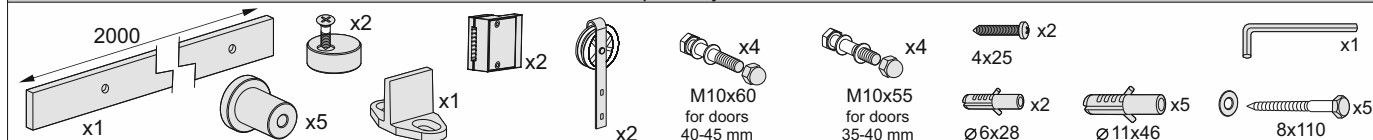

Set LOFT for pathway doors – HARRY

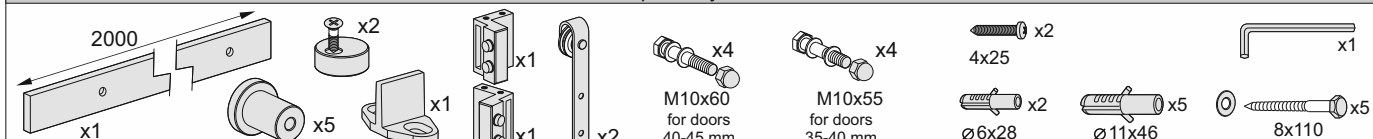


Set LOFT for pathway doors – OSCAR

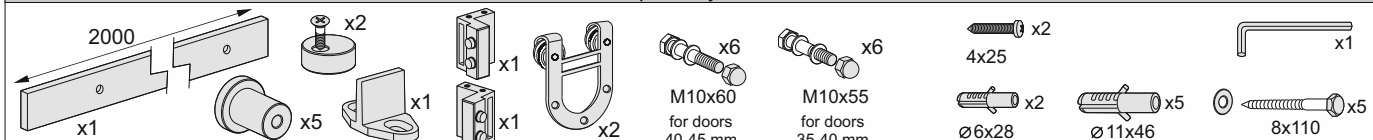


4. Installation of Wheel


Installation of Wheel
ARON

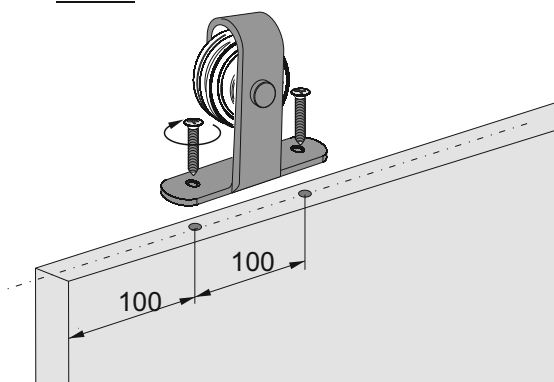


Installation of Wheel
GRANT

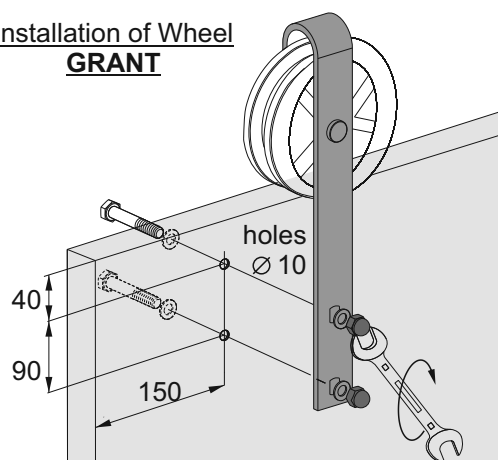

Installation of Wheel
HARRY

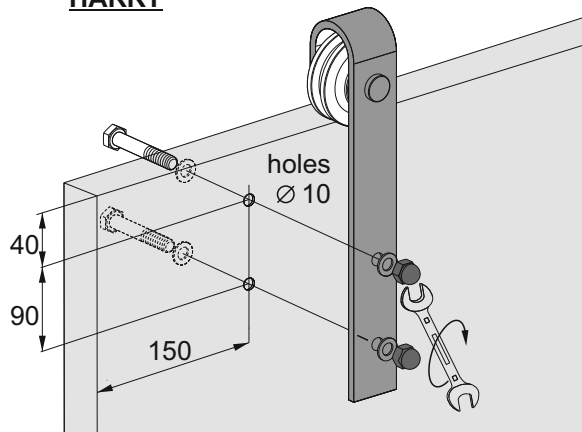


Installation of Wheel
OSCAR

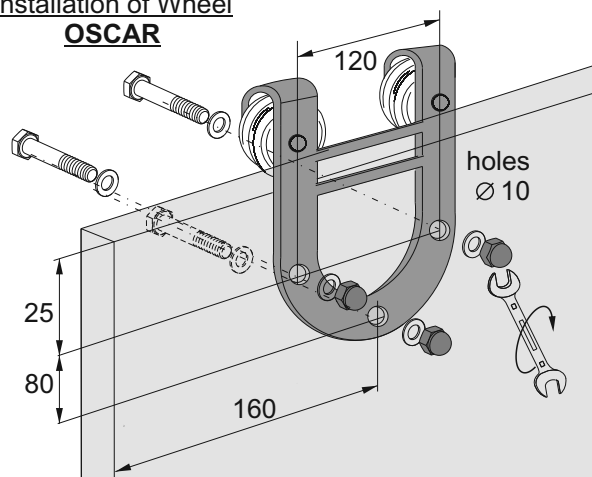





5. Bumper installation

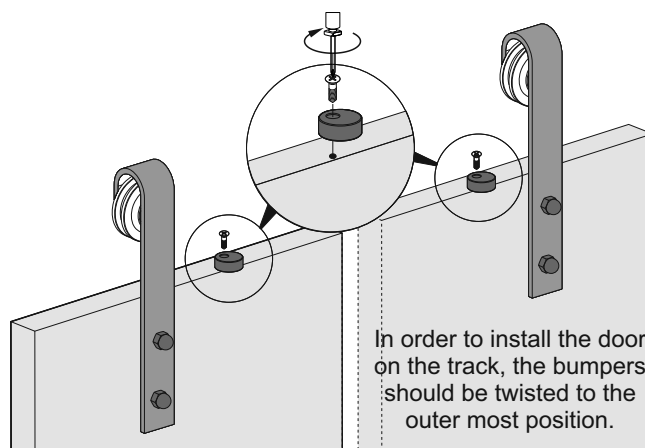

6. Door installation





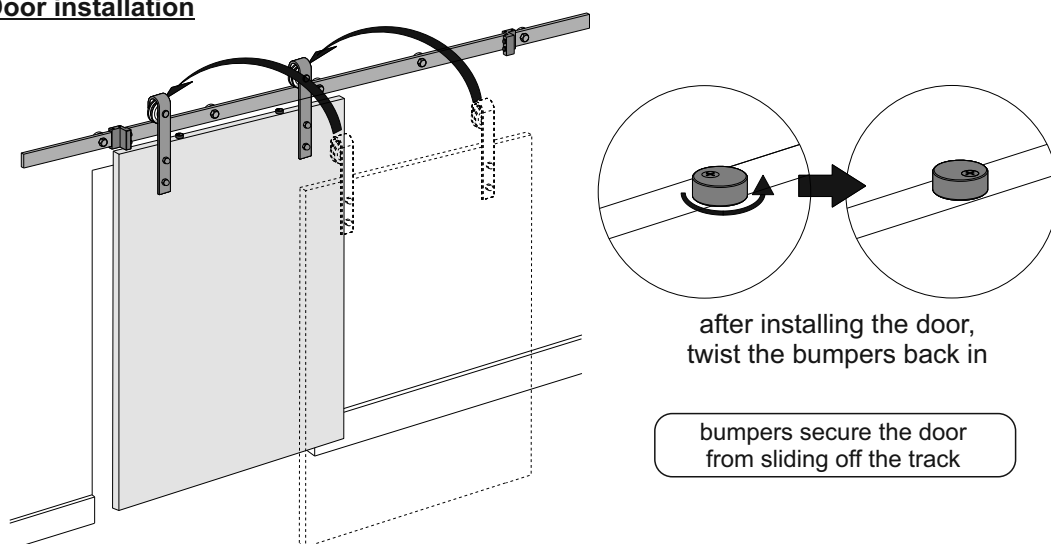


7. Montaż prowadnika

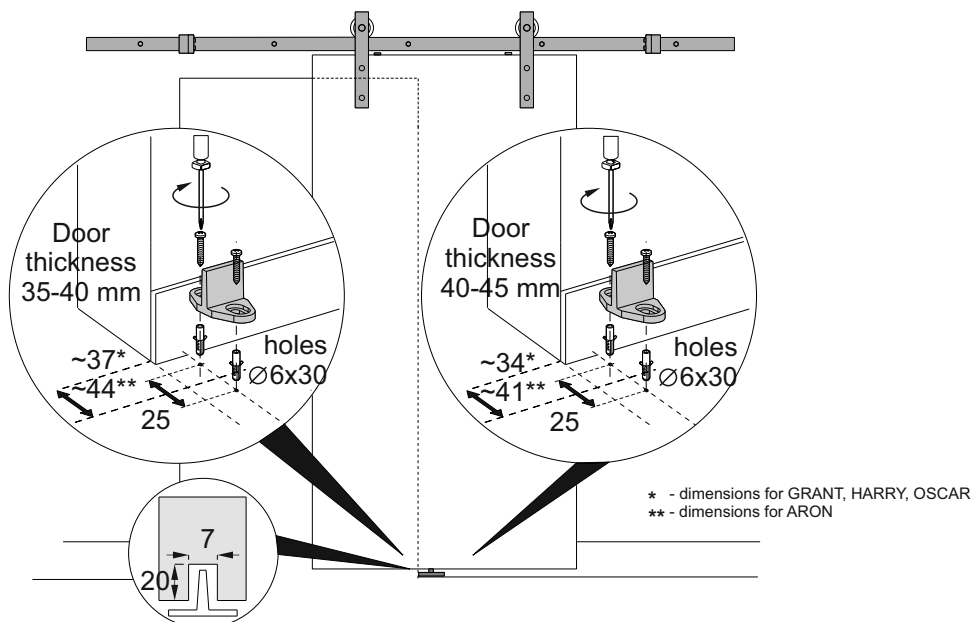



**8. Position the stoppers
on the track**

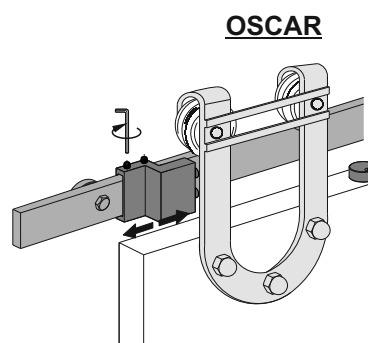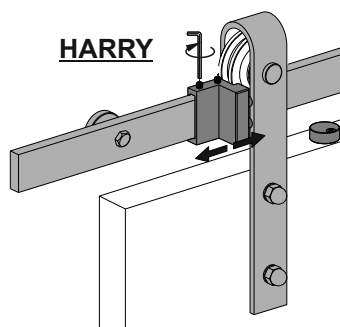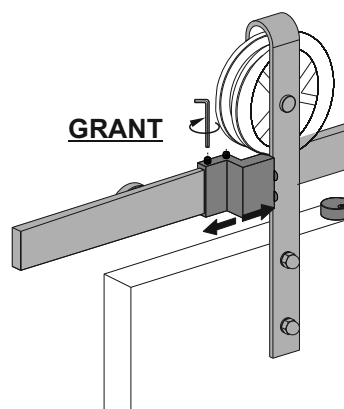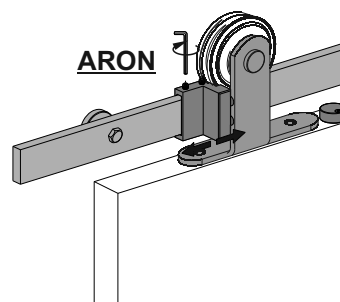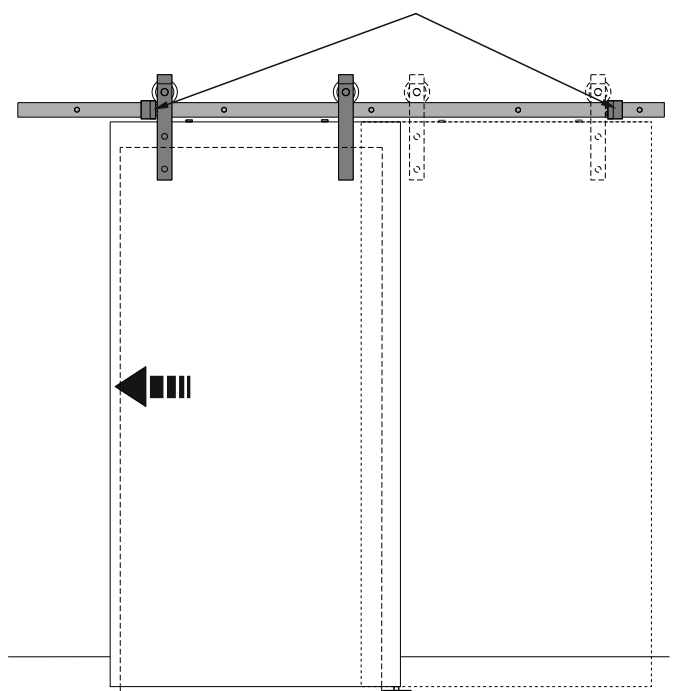

ADDITIONAL DIMENSIONS

Minimum distance from the track to the ceiling is necessary to install the door,
also the amount that the system protrudes from the wall.

