


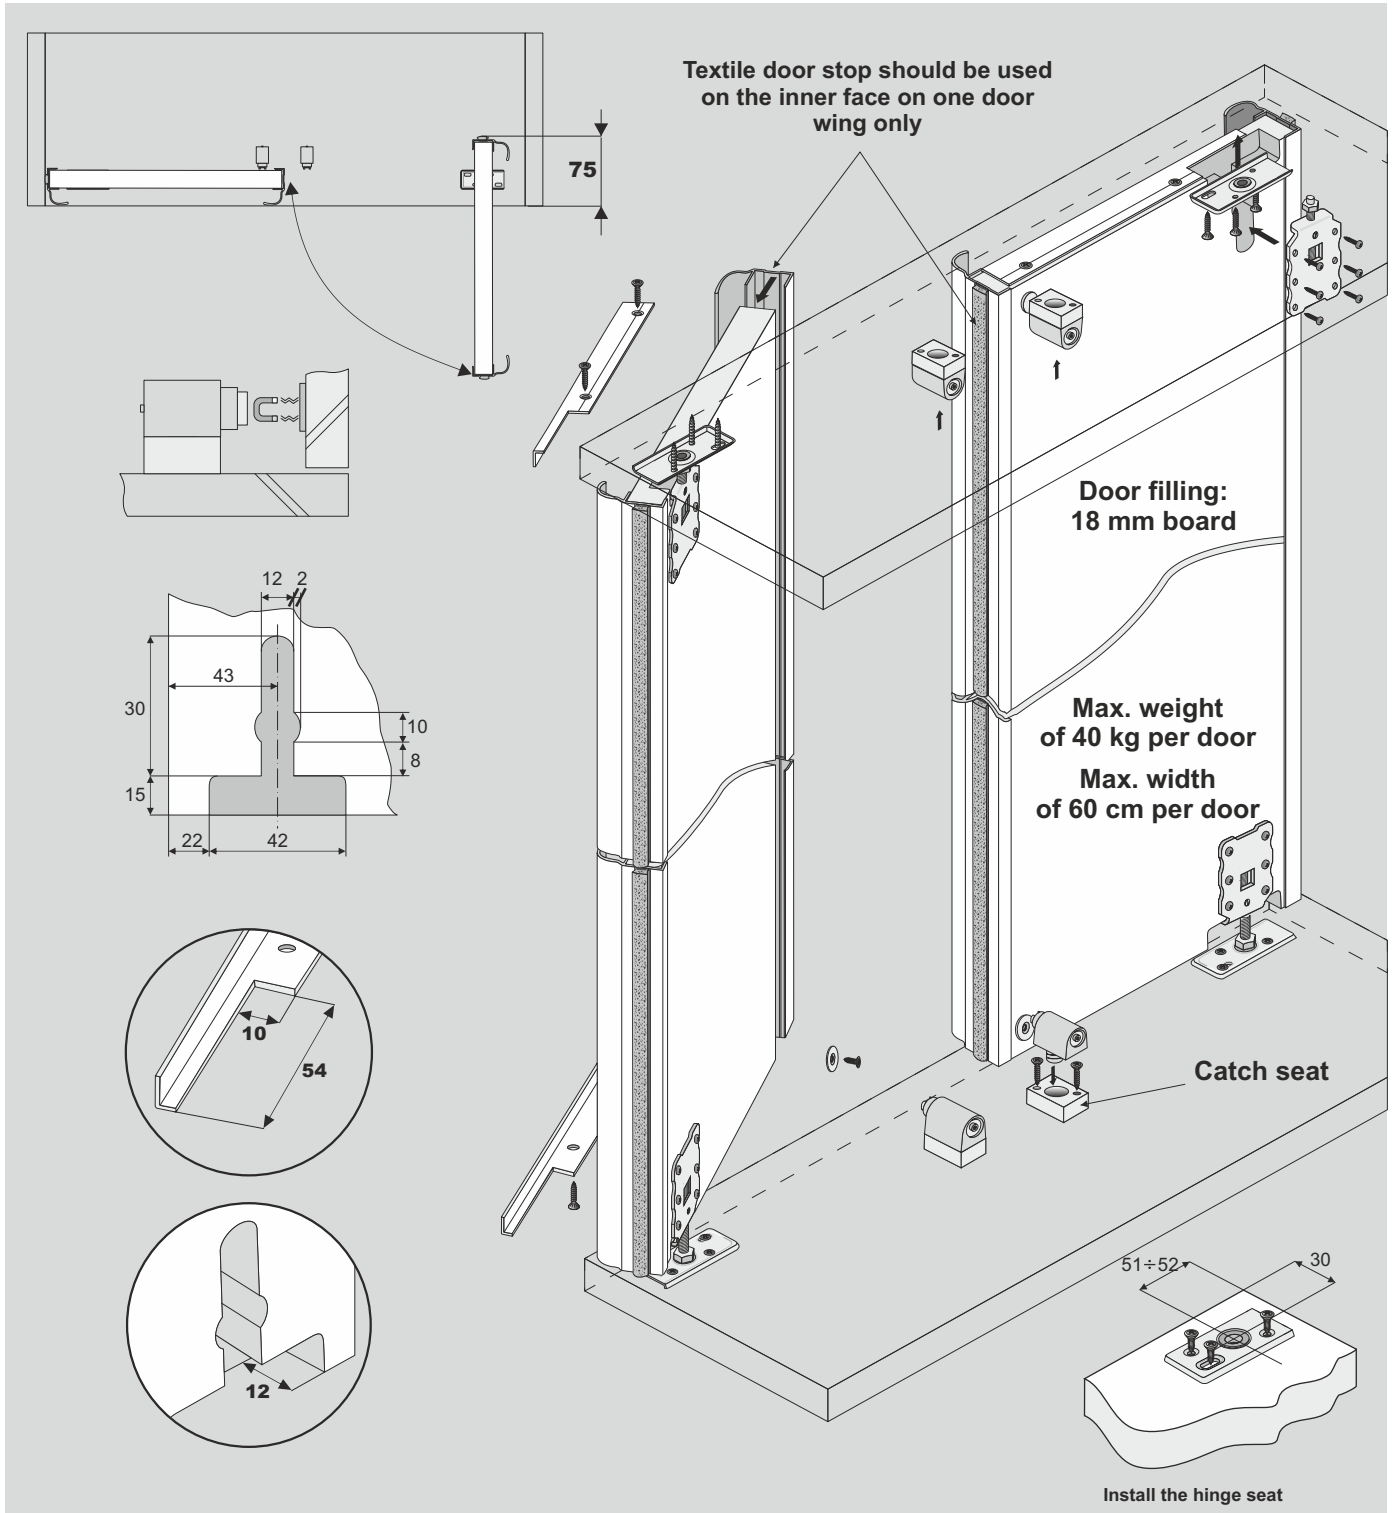










LINE

DR MINICOMFORT / DR18

SYSTEM



COMPONENTS

Handle Minicomfort II	Set for pull-apart door ZR-18				Angle section MINI	
L: 2.70 m Textile door stop 4.8 x 6 mm # 18 mm	Hinge seat  X2	Hinge seat  X2	Magnetic catch  X2 Ts 2.9x9.5  X2	Catch seat  X2	screws 3x12 (vertical hinge) - 12 pcs  screws 3.5x16 (hinge seat) - 8 pcs  screws 3x16 (catch hinge) - 4 pcs 	L: 1.70 m, 2.35 m, 3.00 m  11 mm x 17 mm




LINE

DR MINICOMFORT / DR18

SYSTEM




Dimensions of opening

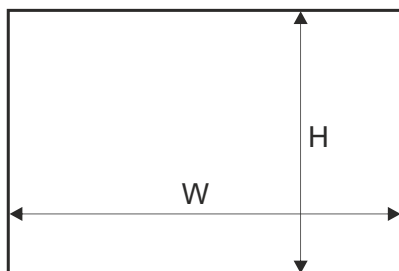

- when fitting handle profiles,
do not use assembly adhesive




Installation method for handle with 18 mm board

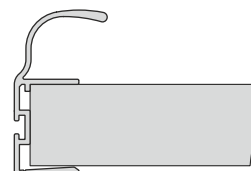

Handle length = door height

Door height	- h	$h = H - 13 \text{ mm}$	
Board height	- hb	$hb = h - 3 \text{ mm}$	
Single door system	Door width	- w	$w = W - 9 \text{ mm}$
	Door width	- w	$w = (W - 12 \text{ mm}) : 2$
18 mm board width #18	- wb	$wb = w - 7 \text{ mm}$	
Angle section mini length	- la	Determined after door construction	

Installation method for angle section MINI 11 mm x 17 mm

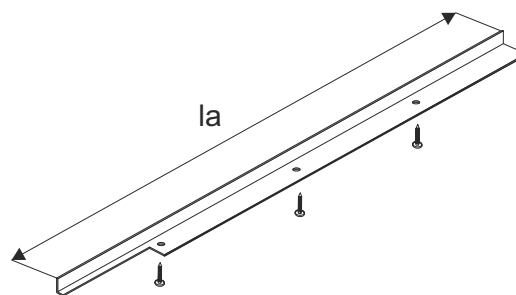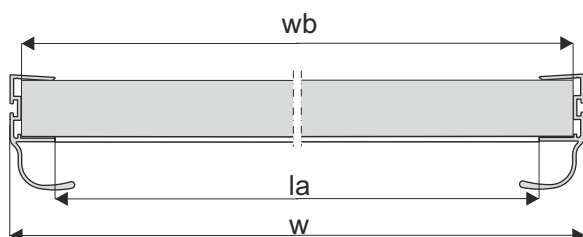

ATTENTION!

Handle profile should be 3 mm longer than board height

WARNING!

SEVROLL does not bear any responsibility for deformation resulting from the application of improper quality of board (improper storage, improper humidity)

ATTENTION!

Remove protective film from aluminium elements (handles, tracks, connectors, etc.) prior to cutting them to the desired size. Film removal will reveal quality issues (eg. scratches)