




LINE

SYSTEM

DR MINICOMFORT / DR18

SEVROLL

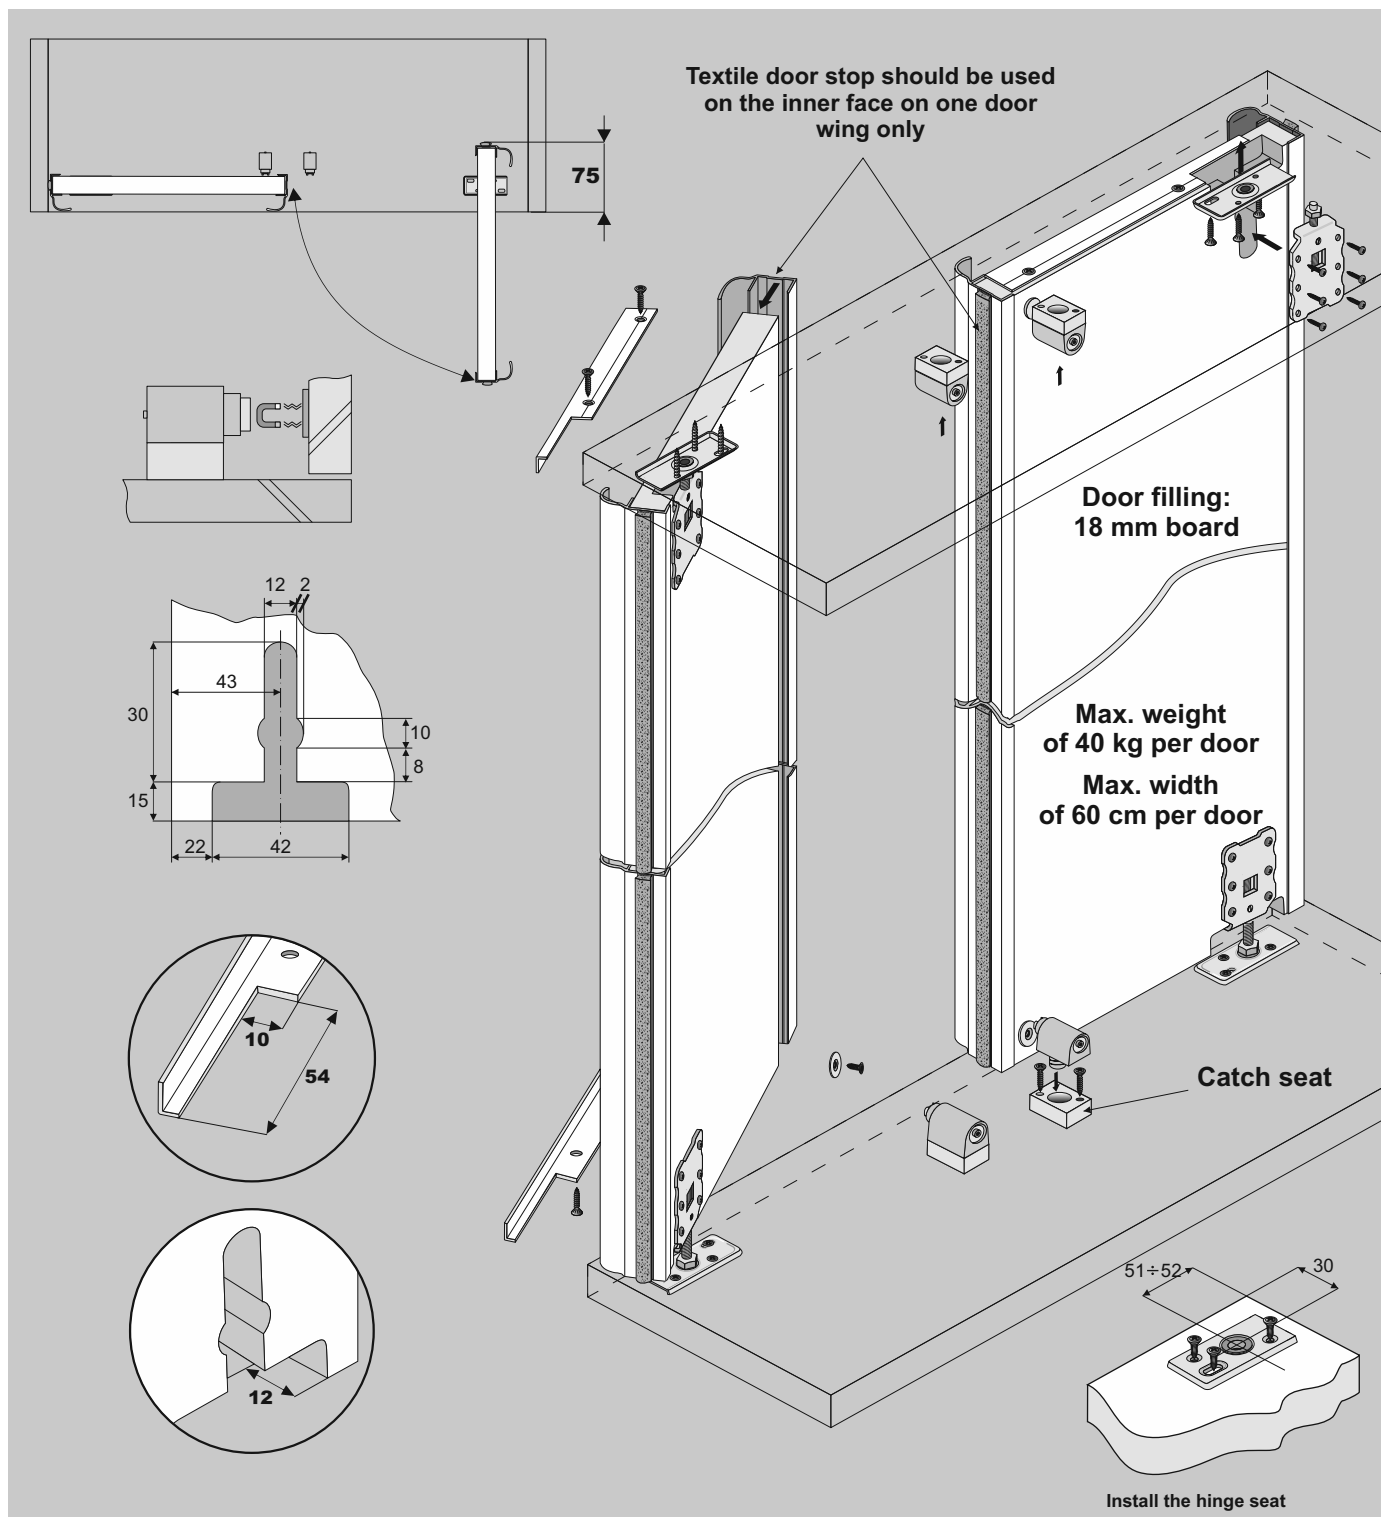

COMPONENTS

Handle Minicomfort II	Set for pull-apart door ZR-18				Angle section MINI
L: 2.70 m	Hinge seat	Hinge seat	Magnetic catch	Catch seat	L: 1.70 m, 2.35 m, 3.00 m
Textile door stop 4.8 x 6 mm	X2	X2	Ts 2.9x9.5 X2	X2	
# 18 mm					11 mm x 17 mm
				screws 3x12 (vertical hinge) -12 pcs	
				screws 3.5x16 (hinge seat) - 8 pcs	
				screws 3x16 (catch hinge) - 4 pcs	




LINE

DR MINICOMFORT / DR18

SYSTEM

SEVROLL

Dimensions of opening

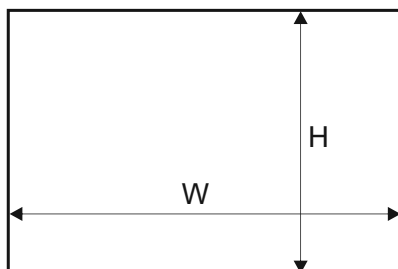


Handle length = door height




Door height	- h	$h = H - 13 \text{ mm}$
Board height	- hb	$hb = h - 3 \text{ mm}$
Single door system	Door width	- w
		$w = W - 9 \text{ mm}$
Two door system	Door width	- w
		$w = (W - 12 \text{ mm}) : 2$
18 mm board width #18	- wb	$wb = w - 7 \text{ mm}$
Angle section mini length	- la	Determined after door construction

- when fitting handle profiles,
do not use assembly adhesive

Installation method for handle with 18 mm board

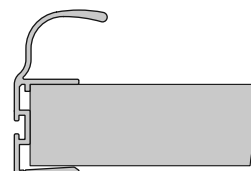

Installation method for angle section MINI 11 mm x 17 mm

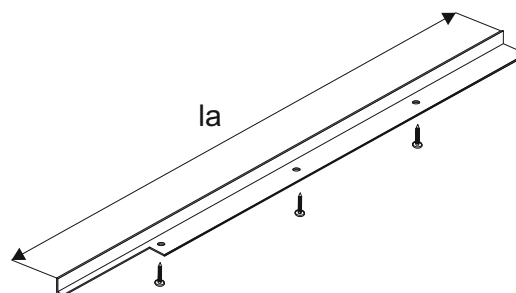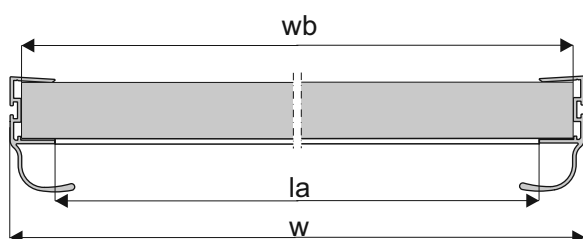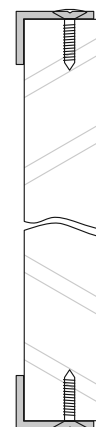**ATTENTION!**

Handle profile should be 3 mm
longer than board height

WARNING!

SEVROLL does not bear any responsibility
for deformation resulting from
the application of improper quality of board
(improper storage, improper humidity)

ATTENTION!

Remove protective film from aluminium elements (handles, tracks, connectors, etc.) prior to cutting them to the desired size.
Film removal will reveal quality issues (eg. scratches)