

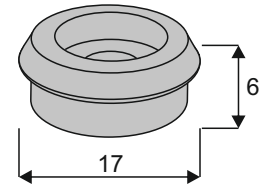
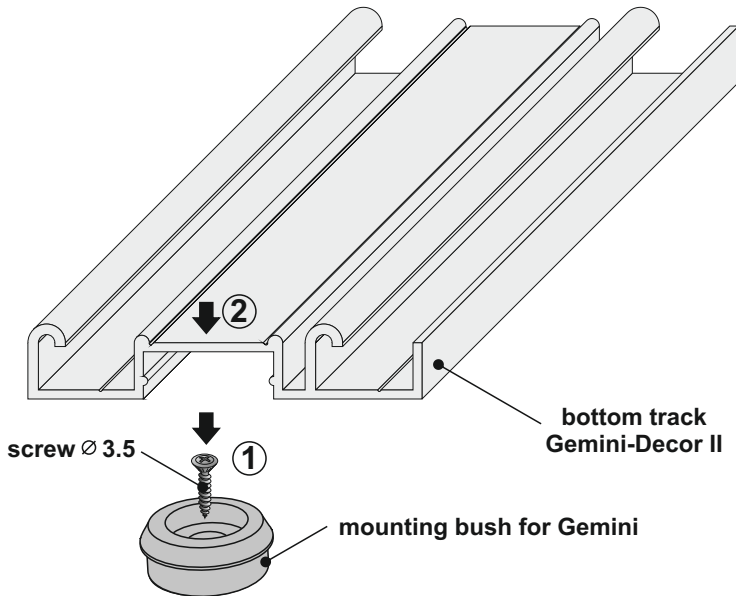



## Installation of bottom track Gemini-Decor II using our mounting bush

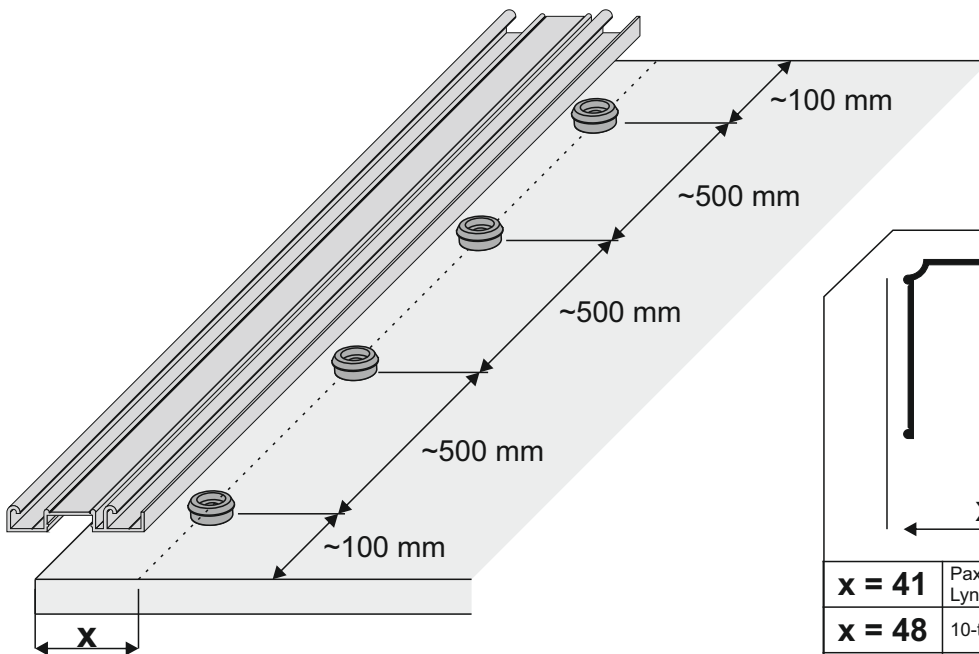

bottom track Gemini-Decor II

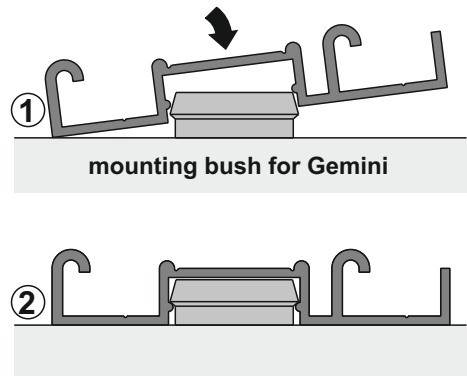

Important dimension

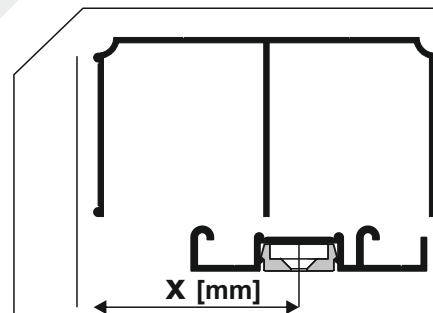

<b>x = 41</b>	Pax, Pax XL, Gemini, Julia, Karat, Lynx, Romeo
<b>x = 48</b>	10-tka, Fox, Vitara
<b>x = 50</b>	Alfa, Beta, Factor, Faworyt, Focus, Universal, Victoria, Secret Line, Slim Line
<b>x = 41</b>	Porto GM, Prosper GM ( <i>GEMINI 18 Frame</i> )
<b>x = 45</b>	Porto GM, Prosper GM ( <i>GEMINI 18</i> )
<b>x = 45</b>	Arte GM ( <i>GEMINI 18 Frame</i> )
<b>x = 48</b>	Arte GM ( <i>GEMINI 18</i> )