



Wymiary prowadnic



A	250	300	350	400	450	500	550	600
B	192±2	268±2	343±2	382±2	452±2	503±2	550±2	600±2

Wypinanie prowadnicy

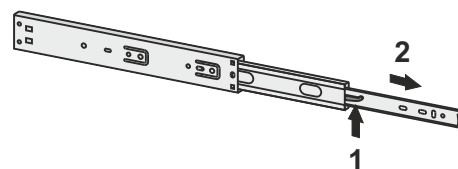

Mocowanie prowadnic do korpusu

Mocowanie prowadnic do szuflady

