SEVROLL

Mounting the bumper to the hole in the cabinet body (without an adapter)
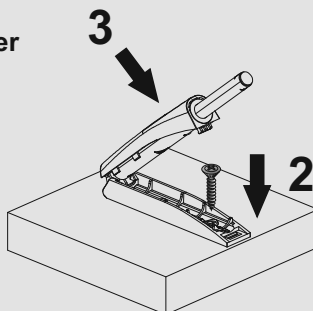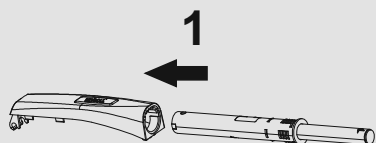
Ø10x70
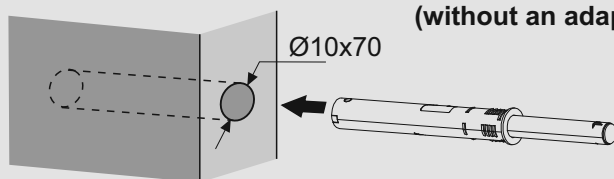
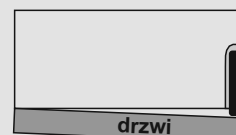## Mounting the bumper in the adapter

1

3

2
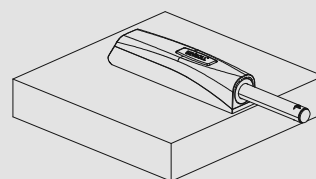
Fastening of adapter to wardrobe
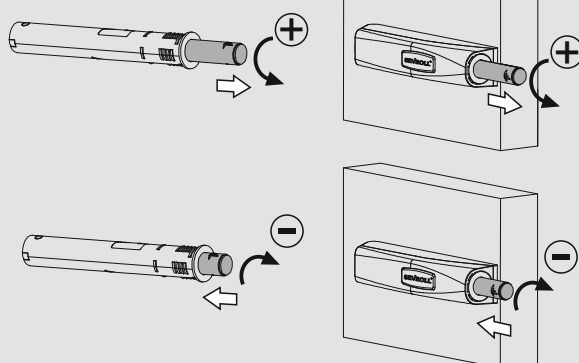
32   20

szuflada

drzwi
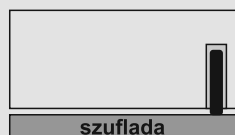
Fixing to drawer

Fixing to door
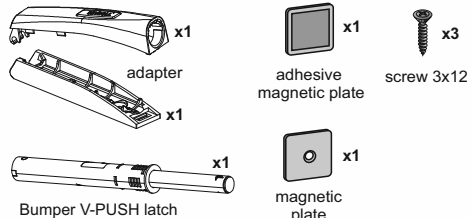
Regulation
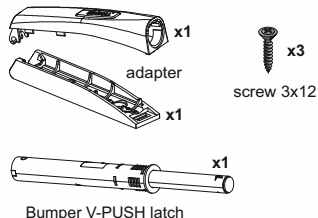
Gap regulation

Door gap

2÷3 mm

+

−

+

−

COMPONENTS

Bumper V- PUSH latch with adapter, 20N or 30N, with magnetic plate	Bumper V- PUSH latch with adapter, 30N, with silicone plate	Bumper V- PUSH latch, 30N, with silicone plate
x1 adapter	x1 adapter	Bumper V-PUSH latch
adhesive magnetic plate x1	screw 3x12 x3	
screw 3x12 x3	x1	
x1	x1 Bumper V-PUSH latch	
Bumper V-PUSH latch x1		
magnetic plate x1		