① ② ③

Fastening of top track
(countersink holes to prevent protrusion of screw head)

important dimension

26
23

Positioner for top carriage FIX

**Door filling:
16 mm or 18 mm board**

Max. weight of 50 kg per door

20

18

Installation of bottom track Gemini-Decor II using our mounting bush

K L

ATTENTION
When installing the fixed mounting, it is important to situate axis L parallel to axis K (L ll K)

up to 7 mm

10
41

milled pocket

hole depth 5 mm

∅10
48
45
12
∅40

milled pocket
∅10
32
11
40
28

ATTENTION:
For fast and accurate routing of the bottom carriage pockets we recommend using stencil for bottom carriage WD18 HI-TEC
index 20191

Fastening of bottom track (countersink holes to prevent protrusion of screw head)

Option: bottom track ELEGANT II

With **BETA, FIESTA, FOCUS** set you may use bottom track **Elegant II with covering strip** along with bottom carriage WD 18V HI-TEC. **Fitting measurements are not affected.**

Bottom carriage WD18V HI-TEC

Fastening of bottom track (special screw)

Stopper HI-TEC

COMPONENTS

Handle	**Top track Gemini-Decor**	**Bottom track Gemini-Decor II**
L: 2.70 m	L: 1.70 m, 2.35 m, 3.00 m, 4.05 m, 6.00 m	L: 1.70 m, 2.35 m, 3.00 m, 4.05 m, 6.00 m
BETA C #16, #18 FIESTA C #16, #18 FOCUS #16, #18	76 mm	53 mm

Guiding carriage Focus	**Angle section**	**Bottom carriage WD18C HI-TEC**
	Mini 11 mm x 17 mm L: 1.70m, 2.35m, 3.00m *Beta C, Focus*	
	K2 Decor L: 1.70m, 2.35m, 3.00m *Fiesta C*	

Dimensions of opening
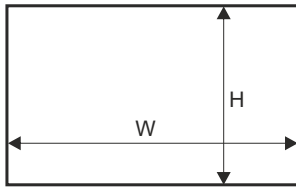
Handle length = door height

	BETA C	FIESTA C	FOCUS
	anti-dust brushes (self-adhesive) 6.7 mm x 13 mm	anti-dust brushes (self-adhesive) 6.7 mm x 13 mm	anti-dust brushes (self-adhesive) 6.7 mm x 13 mm
	textile door stop (self-adhesive) 4.8 mm x 4 mm #16, #18	textile door stop (self-adhesive) 4.8 mm x 4 mm #16, #18	textile door stop (self-adhesive) 4.8 mm x 4 mm #16, #18

		BETA C	FIESTA C	FOCUS
door height - h		h = H - 42 mm	h = H - 42 mm	h = H - 42 mm
door wing height with soft-close fitted	Mini SV25/40/60 SV-25/50	h = H - 42 mm	h = H - 42 mm	h = H - 42 mm
	Top SV60/80 Central SV25/40	h = H - 44 mm	h = H - 44 mm	h = H - 44 mm
board height - hb		hb = h - 2 mm	hb = h - 2 mm	hb = h - 2 mm
door width - w		w = (W - 3 mm + Z) : N	w = (W - 3 mm + Z) : N	w = (W - 3 mm + Z) : N
board width - wb		wb = w - 3 mm	wb = w - 3 mm	wb = w - 3 mm
angle section length - la		la = w - 32.5 mm	la = w - 52.2 mm	la = w - 58 mm

number of doors - N	2	3	4	5	2	3	4	5	2	3	4	5
total overlap - Z	29 mm	58 mm	87 mm	116 mm	29 mm	58 mm	87 mm	116 mm	30 mm	60 mm	90 mm	120 mm

visual design – 4 wings			
door set up	w = (W - 3 + 87) : 4	w = (W - 3 + 87) : 4	w = (W - 3 + 90) : 4
door set up	w = (W : 2 + 26) : 2	w = (W : 2 + 26) : 2	w = (W : 2 + 27) : 2

Installation method for handle and guiding carriage with # 16 mm or # 18 mm board

BETA C	FIESTA C	FOCUS

Installation method for angle section MINI 11 x 17 mm	Installation method for angle section K2-Decor	Installation method for angle section MINI 11 x 17 mm
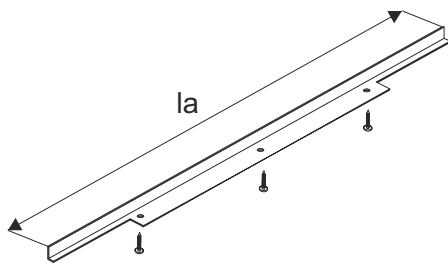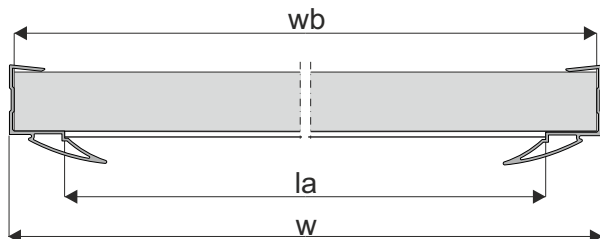
ATTENTION!
Handle profile should be 2 mm longer than board height.

WARNING
SEVROLL does not bear any responsibility for deformation resulting from the application of improper quality of boards (improper storage, improper humidity)

- When fitting handle profiles, do not useassembly adhesive

ATTENTION! Remove protective film from aluminium elements (handles, tracks, connectors, etc.) prior to cutting them to the desired size. Film removal will reveal quality issues (eg. scratches)