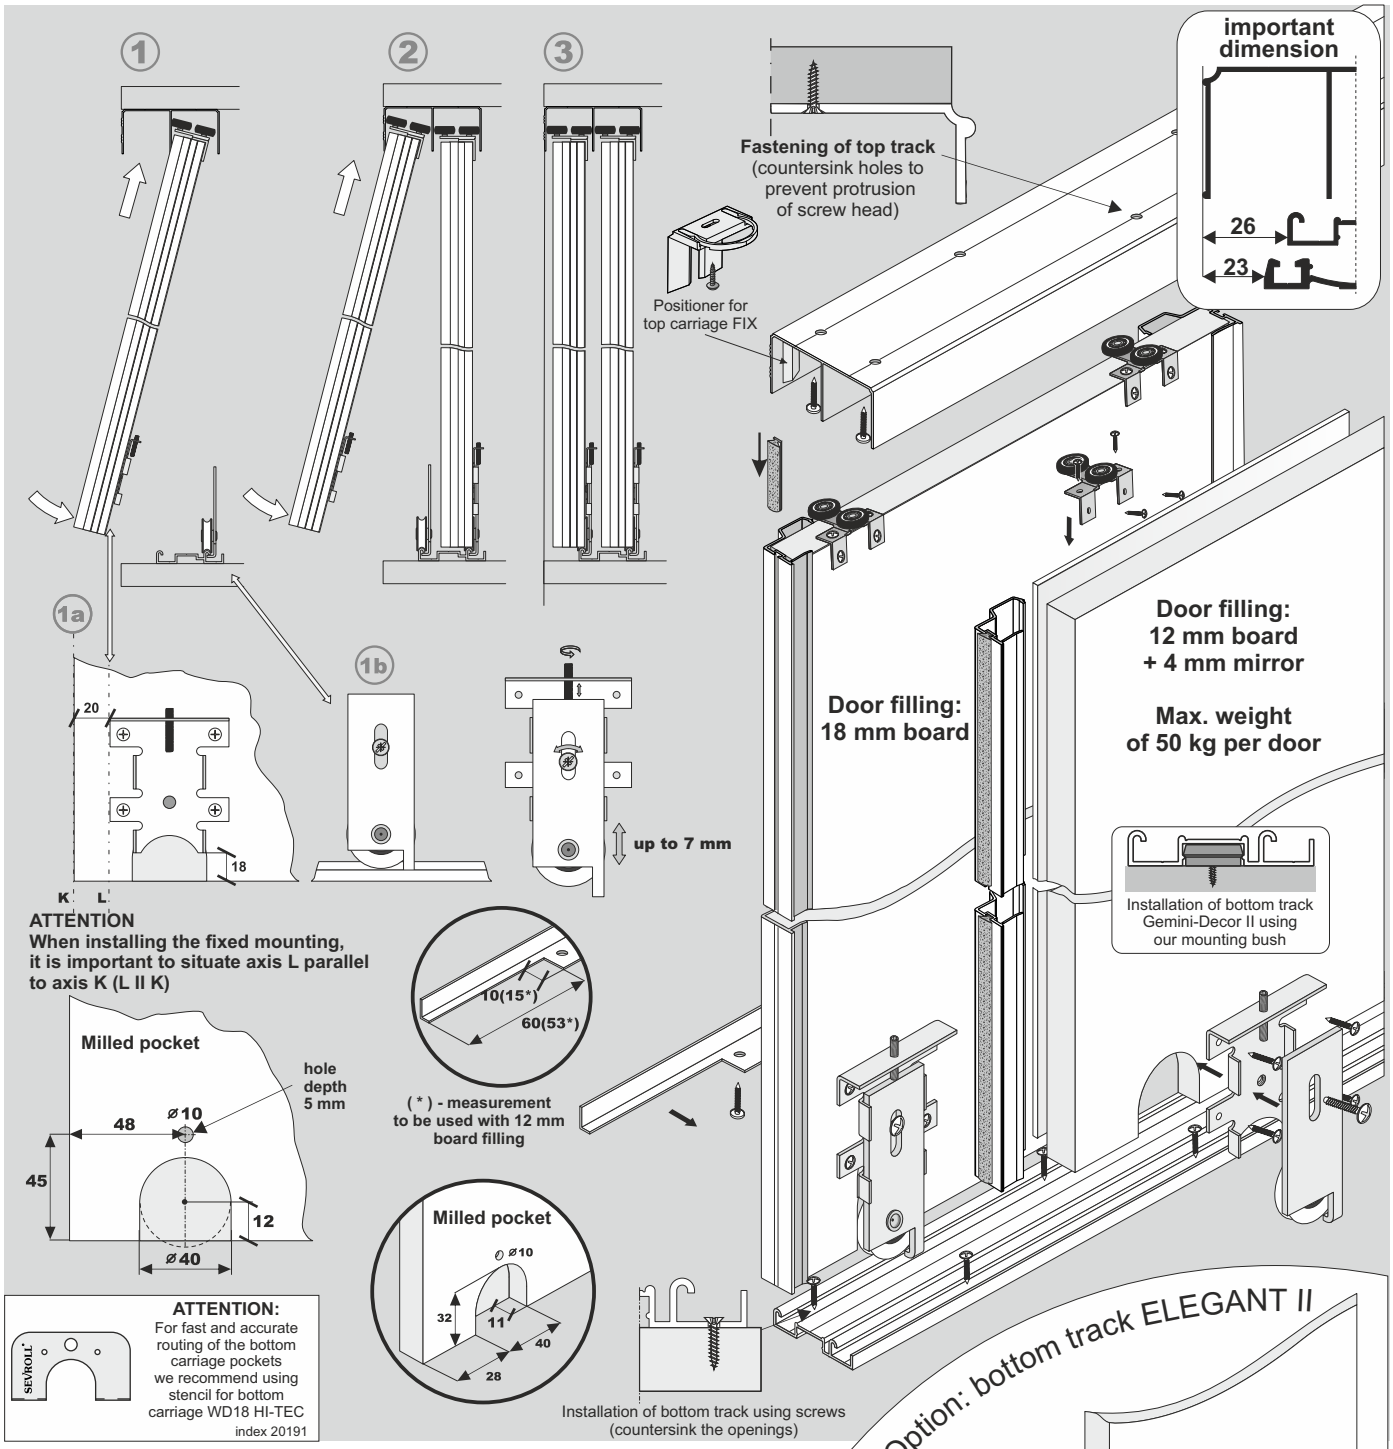

COMPONENTS

Handle Universal C

L: 2.70 m

anti-dust brushes (self-adhesive) 6.7 mm x 9 mm

textile door stop (inserted) 4.8 mm x 4 mm

#16, #18

Top track Gemini-Decor

L: 1.0 m, 2.35 m, 3.00 m, 4.05 m, 6.00 m

76 mm

Bottom track Gemini-Decor II

L: 1.0 m, 2.35 m, 3.00 m, 4.05 m, 6.00 m

53 mm

Angle section Mini

L: 1.0 m, 2.35 m, 3.00 m

11 mm x 17 mm

Guiding carriage Focus

Bottom carriage WD18C HI-TEC

Option: bottom track ELEGANT II

With **UNIVERSAL** set you may use bottom track **Elegant II with covering strip** along with bottom carriage WD 18V HI-TEC. **Fitting measurements are not affected.**

Bottom carriage WD18V HI-TEC

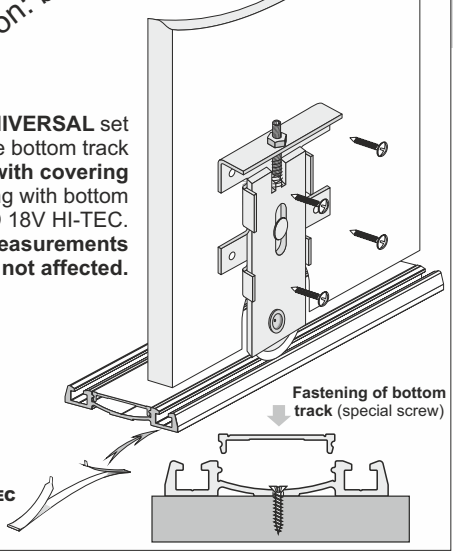

Dimensions of opening

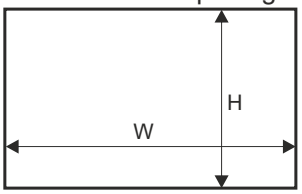

door filling
- # 18 mm
- # 12 board with # 4 mm mirror

- When fitting handle profiles, do not use assembly adhesive
- The handle should be fixed to board with fastening screws on the inner door face

Handle length = door height

door height - h		h = H - 42 mm
door wing height with soft-close fitted	Mini SV25/40/60 SV-25/50	h = H - 42 mm
	Top SV60/80 Central SV25/40	h = H - 44 mm
board height - hb		hb = h - 2 mm
door width - w		w = (W - 3 mm + Z) : N
board width **#18** - wb		wb = w - 7 mm
board width **#12** - wb_m		wb_m = d - 7 mm
angle section length - la		la = w - 62.4 mm

number of doors - N	2	3	4	5
total overlap - Z	32 mm	64 mm	96 mm	128 mm

visual design – 4 wings	
door set up	w = (W - 3 + 96) : 4
door set up	w = (W : 2 + 29) : 2

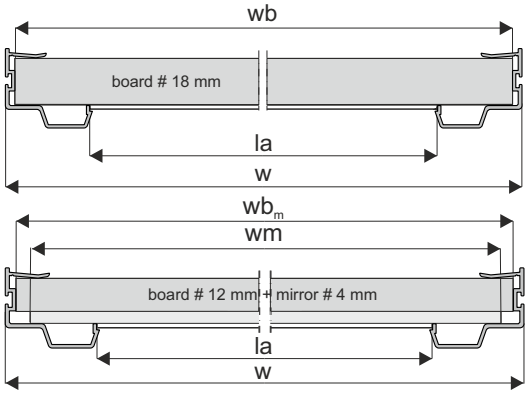

mirror dimension

mirror height - hm = hb - 4 mm	
mirror width - wm = wb_m - 4 mm	

ATTENTION:
board to mirror contact area should be free from dirt and grase before applying double-sided tape

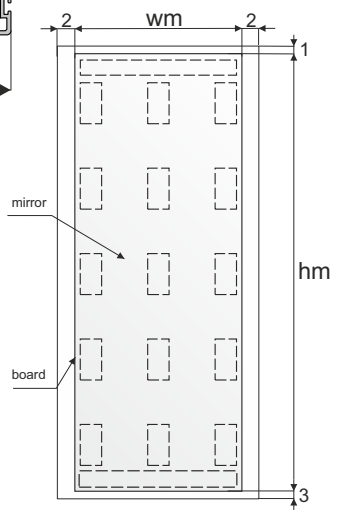

Broken line indicates recommended positioning of double-sided tape

Installation method for handle and guiding carriage with # 18 mm board

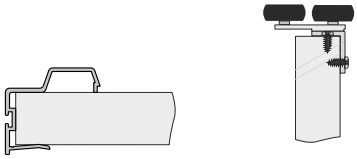

Installation method for handle and guiding carriage with # 12 mm board + # 4 mm mirror

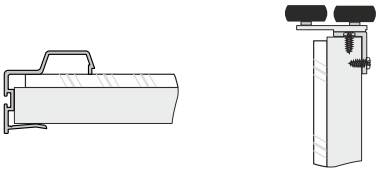

Installation method for angle section 11 mm x 17 mm

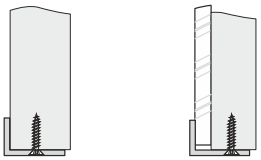

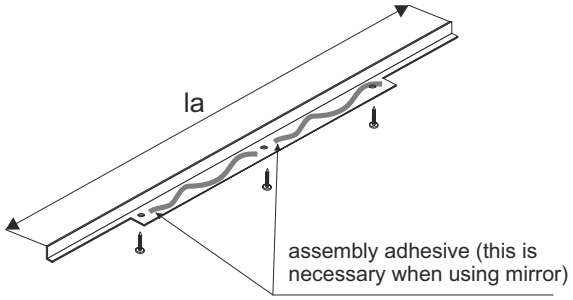

ATTENTION!
Angle section must be fastened to board with minimum 3 screws Ć 3 x 25

ATTENTION!
Handle profile should be 2 mm longer than board height.

WARNING
SEVROLL does not bear any responsibility for deformation resulting from the application of improper quality of boards (improper storage, improper humidity)

ATTENTION! Remove protective film from aluminium elements (handles, tracks, connectors, etc.) prior to cutting them to the desired size. Film removal will reveal quality issues (eg. scratches)